



REPLACEMENT PARTS

Ref.			Ref.		
<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	898206	SCREW	45	898186	WASHER
2	898212	RIGHT COVER, CF	46	898187	SCREW
3	898214	NUT	47	898179	BASE PLATE
4	898216	WHEEL FLANGE	48	898230	ROD
5	898218	60 GRIT GRINDING WHEEL	49	898271	FOOT
6	898217	BUSHING	58	900843	LABEL, T2
7	900839	LABEL, T2		1349968	LABEL, T1
	1340546	LABEL, T1	59	898193	120 GRIT GRINDING WHEEL
8	898219	GUARD	76	898231	CLAMP
9	898199	SCREW	77	898229	ROD
10	898211	WASHER	78	898228	BOLT
11	898189	SPARK ARRESTOR	82	898222	EYESHIELD
12	898196	WASHER	83	898796	BOLT
13	898202	BOLT	84	898797	WASHER
14	898190	TOOL REST	85	898798	WASHER
15	898192	ARM	86	901236	BEARING, T2
16	898169	WASHER		898799	BEARING, T1
17	898194	BOLT	87	898800	WASHER
18	898197	WASHER	88	898801	BEARING
19	898188	SPARK ARRESTOR	89	901237	STATOR
20	901235	MOTOR, T2	90	898803	ROTOR
	898242	MOTOR, T1	93	898806	RETAINING RING
21	901240	LABEL, T2	94	898807	SWITCH
	898244	LABEL, T1	95	898175	WRENCH
22	898195	BOLT	96	898176	WHEEL DRESSER
23	898220	GUARD			
24	898207	WASHER			
25	898208	WASHER			
26	898209	NUT			
27	898181	WASHER			
28	898180	BOLT			
29	898215	NUT			
30	898213	LEFT COVER			
32	898191	TOOL REST			
33	901233	WATER TRAY			
34	898232	WASHER			
35	898234	SCREW			
36	1340190	CLAMP			
37	898203	CLAMPING PLATE			
38	898205	CORDSET			
39	898177	WORK LIGHT			
40	901234	BASE, T2			
	898178	BASE, T1			
41	898182	SWITCH GUARD			
42	898183	SWITCH			
43	898184	CAPACITOR			
44	898185	CLAMP			

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Center for repair with damaged or missing standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department, your service outlet, or by visiting the Delta Website @ www.deltamachinery.com.