



**FOR USE WITH EARLY MODELS ONLY**

# REPLACEMENT PARTS

REF NO	PART NUMBER	DESCRIPTION
1	422-01-055-0002	REAR RAIL (FOR 28-843 ONLY)
1	422-01-055-0004	REAR RAIL (FOR 28-845 ONLY)
2	901-09-011-2451	SCREW
3	422-01-055-0001	FRONT RAIL (FOR 28-843 ONLY)
3	422-01-055-0003	FRONT RAIL (FOR 28-845 ONLY)
4	422-01-327-0017	CLAMP HOOK ASSY (Current Models Only)
5	422-01-368-0001	KNOB ASSY
6	928-01-021-4132	COIL SPRING
7	902-01-120-1034	1/4-20 HEX NUT
8	426-02-110-0004	POST (FOR USE WITH ALUMINUM FENCE, Current Models Only)
9	426-02-043-0001	RIP FENCE - ALUMINUM (Current Models Only)
10	901-01-060-0606	5/16-18 X 5/8" HEX HD SCREW
11	904-01-010-1604	5/16" FLAT WASHER
12	422-01-027-0003	CLAMP PLATE
13	901-02-010-0558	#8-32 x 1/4" RD HD SCREW
14	951-01-010-7802	POINTER
15	422-02-084-0004	FRONT CLAMP BLOCK
16	931-02-990-3614	HAND KNOB ASSY
17	901-04-160-9414	1/4-28 X 3/8" HEX SOC SET SCREW
18	904-01-031-2925	FLAT WASHER
19	1086402	HAND KNOB ASSY
*	422-01-327-0006	REAR CLAMP ASSY (Early Models Only), INCL:
20	928-01-021-4132	COIL SPRING
21	422-01-327-0007	CLAMP HOOK ASSY
22	931-02-010-3622	HAND KNOB
23	902-01-120-1034	1/4-20 HEX NUT
24	422-01-110-0004	HEX SUPPORT BUTTON (FOR USE WITH STEEL FENCE, Early Models Only)
25	426-02-304-0001	RIP FENCE - STEEL (Early Models Only)
26	961-01-010-7457	PLUG (Early Models Only)
* NOT SHOWN ASSEMBLED		

## STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta International Machinery Corp. strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Center for service/repairs. Any product which is presented to a Delta Authorized Service Center for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.