


# REPLACEMENT PARTS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
1	34-678	TABLE INSERT, INCL;	49	1310161	(DIN 85) M4 X 18MM PAN HD SCR
2	1246135	(DIN 963) M6 X 16MM FLAT HD SCR	50	1313247	PIN
3	1313226	RUBBER WASHER	51	1310055	(DIN 913) M6 X 6MM HEX SOC SET SCR
4	1342660	REAR GUIDE RAIL (C.M.O.)	52	1313243	POINTER
5	1243398	(DIN 934) M8 HEX NUT (C.M.O.)	53	1313244	GUIDE BAR
6	904-01-031-2926	FLAT WASHER (C.M.O.)	54	1313245	STOP LINK
7	1313214	TABLE	*	1313282	GUARD ASSY, CONT OF;
8	1310105	(DIN 933) M8 X 16MM HEX HD SCR	55	1313270	PUSH NUT
9	904-02-010-1703	5/16" LOCK WASHER	56	1313271	PIN
10	904-01-010-1605	3/8" FLAT WASHER	57	1313272	GUARD
11	1342662	SPACER (C.M.O.)	58	1313273	PIN
12	1342663	SPECIAL SCR (C.M.O.)	59	1313274	BRACKET
13	1342709	RAIL (C.M.O.)	60	1313275	LOCK RING
14	1342710	ADAPTER (C.M.O.)	61	1313276	SPRING
15	1342661	FRONT GUIDE RAIL (C.M.O.)	62	1313277	SPLITTER
16	1342691	END PLUG (C.M.O.)	63	1313278	BUSHING
17	1313215	EXT. WING	64	1313279	ANTI-KICKBACK FINGER
18	1313221	CABINET	65	1310311	(DIN 1481) M4 X 22MM SPRING PIN
19	904-01-010-1605	3/8" FLAT WASHER	66	1246015	(DIN 933) M6 X 20MM HEX HD SCR
20	904-02-010-1703	5/16" LOCK WASHER	67	904-03-030-1757	1/4" EXT TOOTH WASHER
21	1310105	(DIN 933) M8 X 16MM HEX HD SCR	68	904-01-010-1604	5/16" FLAT WASHER
22	1313219	COVER	69	1313280	BRACKET
23	1313218	PIN	70	1243476	(DIN 934) M12 HEX NUT
24	1086491	HANDWHEEL ASSY	71	904-01-010-1608	5/8" FLAT WASHER
25	1313239	SPECIAL WASHER	72	1313281	(DIN 315) M6 WING NUT
26	1313223	KNOB	*	1342673	FENCE ASSY, (C.M.O.) CONST OF;
27	1313222	NAMEPLATE	73	1341153	(DIN 933) M8 X 12MM HEX HD SCR
28	1087576	#8 X 1/2" PAN HD SCR	74	1246157	(DIN 980) M8.1 LOCK WASHER
29	1313227	(DIN 7513B) M4 X 12MM CHEESE HD SCR	75	1342674	FENCE
30	1310162	(DIN 85) M5 X 12MM PAN HD SCR	76	1342675	REAR CLAMP BLOCK
31	438-01-017-0140	SWITCH, INCL;	77	1342676	PIN
32	400-06-068-0002	SWITCH KEY	78	1342677	SPRING
33	1313230	SWITCH BOX	79	1342678	REAR CLAMP HOOK
34	1313229	SWITCH W/PLATE, INCL;	80	1342679	LEVER
35	1313234	HEX NUT	81	1342680	LOCK ROD
36	1313228	NUT	82	1342681	SPRING
37	904-03-030-1795	3/16" EXT TOOTH WASHER	83	1342682	FRONT BLOCK
38	1243395	(DIN 934) M5 HEX NUT	84	1342683	PIN
39	1313220	CLAMP	85	1342684	LEVER
40	1310162	(DIN 85) M5 X 12MM PAN HD SCR	86	1342685	HANDLE
41	1313231	BUSHING	87	1342686	ECCENTRIC
42	1313235	POWER CORD	88	1342687	ADJ SCR
43	1313205	WARNING LABEL	89	1342688	SPRING
*	34-779	MITER GAGE ASSY, CONST OF;	90	1342689	POINTER
44	1342685	HANDLE	91	1340490	(DIN 84) M4 X 8MM CHEESE HD SCR
45	1313241	WASHER	92	1246157	(DIN 7980) M8.1 LOCK WASHER
46	1313242	MITER GAGE	93	1246078	(DIN 933) M8 X 16MM HEX HD SCR
47	1310055	(DIN 913) M6 X 6MM HEX SOC SET SCR	94	1313197	WRENCH
48	1243569	(DIN 934) M4 HEX NUT	95	1313232	7/8" OPEN END WRENCH

\* NOT SHOWN ASSEMBLED




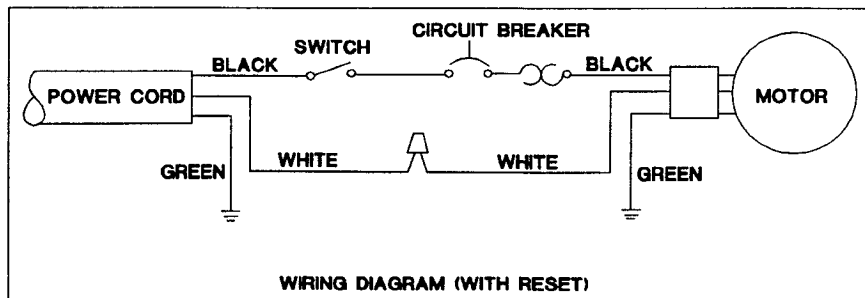


## REPLACEMENT PARTS

<u>REF. NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>REF. NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
125	1313148	(DIN 985) M6 LOCK NUT	*	1313314	MOTOR COMPLETE, CONST OF;
126	904-01-010-1605	3/8" FLAT WASHER	200	1313316	SHAFT
127	904-02-010-1703	5/16" LOCK WASHER	201	1313116	BALL BEARING
128	1246016	(DIN 933) M8 X 25MM HEX HD SCR	202	1313117	FRONT HOUSING
129	1313286	TRUNNION	203	1310157	(DIN 85) M6 X 20MM PAN HD SCR
130	1310154	(DIN 85) M6 X 65MM PAN HD SCR	204	904-02-020-1702	1/4" LOCK WASHER
131	1313287	POINTER	205	1310172	SPECIAL SCR
132	1340622	M6.4 FLAT WASHER	206	1313112	BRUSH HOLDER
132A	1320101	(DIN 6797A) M5.3 EXT TOOTH WASHER	207	1313113	BRUSH
133	1310155	(DIN 84) M5 X 8MM CHEESE HD SCR	208	1313114	BRUSH CAP
134	1310310	(DIN 1481) M3 X 18MM SPRING PIN	209	1313317	BUSHING
135	904-01-010-1606	3/8" FLAT WASHER	210	438-01-007-0009	WMRE NUT
136	1313300	SPACER	211	1313318	CABLE
137	1243496	(DIN 934) M10 HEX NUT	212	1313118	(DIN 137B) M21 WAVE WASHER
138	1313301	NUT	213	1313319	FIELD ASSY
139	1313305	SHAFT	214	904-03-030-1795	3/16" EXT TOOTH WASHER
140	1243304	(DIN 913) M6 X 8MM HEX SOC SET SCR	215	1310148	(DIN 85) M5 X 60MM PAN HD SCR
141	1313302	COLLAR	216	1313121	ARMATURE ASSY, INCL;
142	1313306	(DIN 7513A) M6 X 18MM PAN HD SCR	217	1313120	BALL BEARING
143	904-03-030-1757	1/4" EXT TOOTH WASHER	218	1313122	BALL BEARING
144	1313303	BLOCK	219	1313207	RUBBER PLUG
145	1313304	BEARING	220	1313359	REAR HOUSING (C.M.O.) SEE NOTE A
146	1313307	BLOCK	220A	1313123	REAR HOUSING (E.M.O.) SEE NOTE A
147	1310216	(DIN 6797A) M8.4 EXT TOOTH WASHER	221	1313124	(DIN 137B) M32 WAVE WASHER
148	1313308	(DIN 7513B) M8 X 18MM CHEESE HD SCR	222	1313122	BALL BEARING
149	1313309	WASHER	223	1313126	LOCKWASHER
150	1313310	SPRING	224	1313127	SHAFT NUT
151	1313311	WASHER	225	1313129	PULLEY
152	1310310	(DIN 1481) M3 X 18MM SPRING PIN	226	34-674	DRIVE BELT
153	1086491	HANDWHEEL ASSY	227	1246196	EXT RET RING
154	1313239	WASHER	228	1310195	SPECIAL WASHER
155	1313223	KNOB	229	1310143	(DIN 85) M5 X 8MM PAN HD SCR
156	1313289	WASHER	230	1313360	PULLEY COVER (C.M.O.) SEE NOTE A
157	1313288	TRUNNION	230A	1313131	PULLEY COVER (E.M.O.) SEE NOTE A
158	1313290	PIN	231	1310158	(DIN 84) M5 X 45MM CHEESE HD SCR
159	1310105	(DIN 933) M8 X 16MM HEX HD SCR			
160	1313299	O-RING			* NOT SHOWN ASSEMBLED
161	1313295	SHAFT			
162	1313296	NUT			
163	1313297	LINK			
165	904-01-010-1620	FLAT WASHER			
166	1310310	(DIN 1481) M3 X 18MM SPRING PIN			
167	1246017	(DIN 933) M8 X 30MM HEX HD SCR			
168	904-02-010-1703	5/16" LOCK WASHER			
169	904-01-010-1620	FLAT WASHER			
170	1313294	SEAT			
171	1313293	BRACKET, INCL;			
171A	1246008	(DIN 916) M5 X 12MM HEX SOC SET SCR			
171B	1313291	PIN			
172	1243398	(DIN 934) M8 HEX NUT			
172A	1330682	CLAMP			
172B	1310143	(DIN 85) M5 X 8MM PAN HD SCR			
173	1313298	ROD			
174	902-01-201-2567	5/8-18 L.H. HEX NUT			
175	1313292	FLANGE			
176	1313314	MOTOR, COMPLETE			

NOTE A: EARLY MODEL MOTORS HAD BELT SHROUD CAST AS INTEGRAL PART OF ALUMINUM MOTOR HOUSING (REF. NO. 220A). CURRENT MODEL MOTORS HAVE BELT SHROUD CAST AS INTEGRAL PART OF PLASTIC PULLEY COVER (REF. NO. 230). EARLY AND CURRENT STYLE COMPONENTS MAY NOT BE MIXED. THEY MUST BE USED TOGETHER.

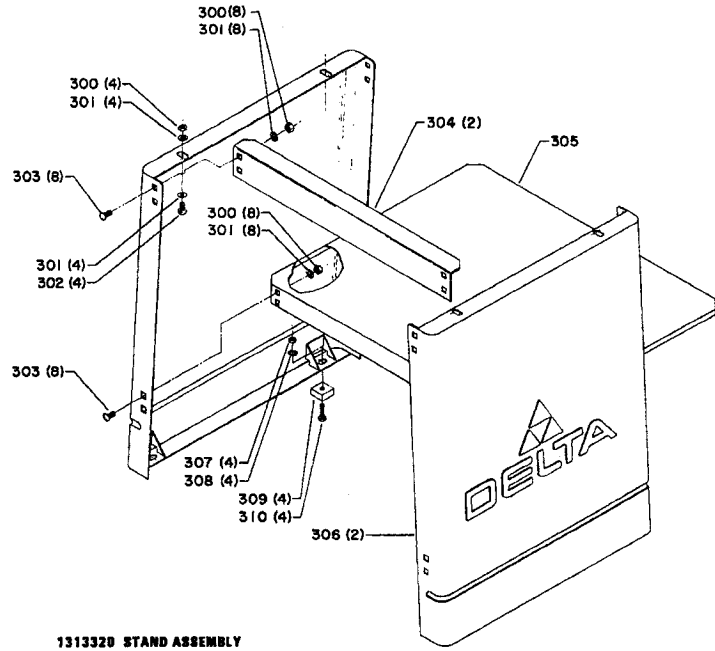

**1313320 STAND ASSEMBLY**

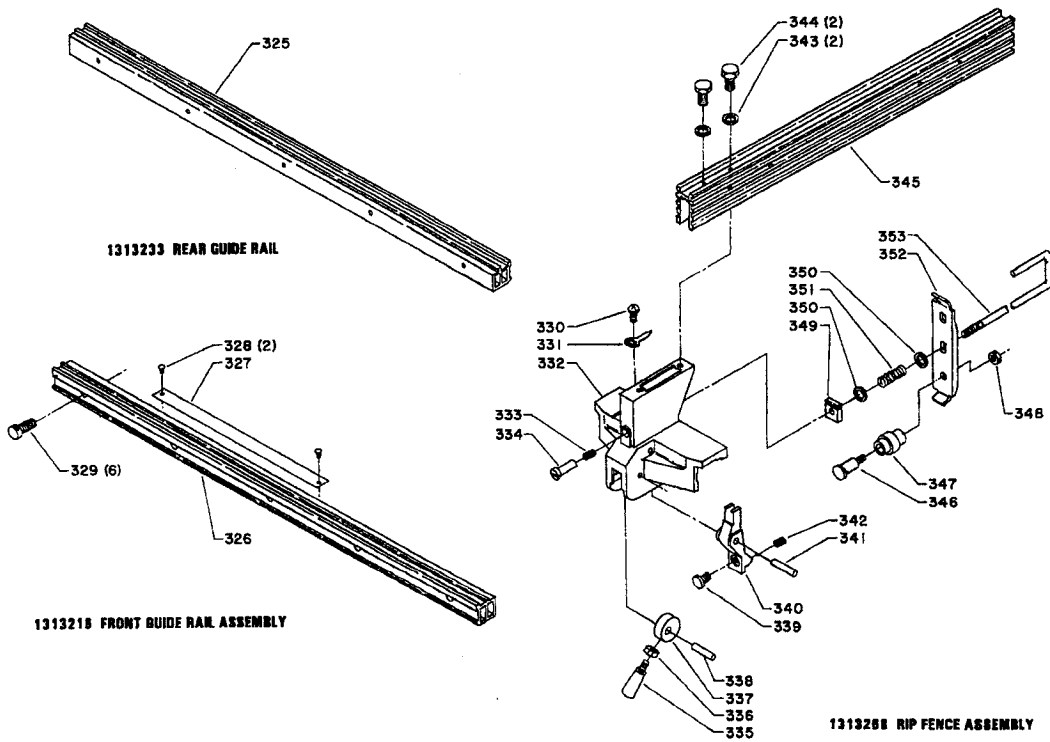

**1313233 REAR GUIDE RAIL**

**1313218 FRONT GUIDE RAIL ASSEMBLY**

**1313238 RIP FENCE ASSEMBLY**

**FOR USE WITH EARLY MODELS ONLY**

# REPLACEMENT PARTS

<u>REF. NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
*	1313320	STAND ASSY, CONST OF;
300	1243398	(DIN 934) M8 HEX NUT
301	904-01-010-1606	3/8" FLAT WASHER
302	1310105	(DIN 933) M8 X 16MM HEX HD SCR
303	1313325	(DIN 603) M8 X 20MM CARRIAGE HD SCR
304	1313323	TIE BAR
305	1313324	SHELF
306	1313322	PANEL
307	1243456	(DIN 934) M6 HEX NUT
308	904-01-010-1604	5/16" FLAT WASHER
309	1313321	FOOT
310	1246015	(DIN 933) M6 X 20MM HEX HD SCR

## PARTS LISTED BELOW FOR EARLY MODELS ONLY

325	1313233	REAR GUIDE RAIL
326	1313216	FRONT GUIDE RAIL, INCL;
327	1313217	SCALE
328	1310016	RIVIT
329	1342663	SPECIAL SCR
*	1313268	FENCE ASSY, CONST OF;
330	1310155	(DIN 84) M5 X 8MM CHEESE HD SCR
331	1313250	POINTER
332	1313251	FENCE BLOCK
333	1313252	SPRING
334	1313253	ADJ SCR (INTERNAL)
335	1342685	HANDLE
336	1243398	(DIN 934) M8 HEX NUT
337	1313265	ECCENTRIC
338	1313266	PIN
339	1313264	PIN
340	1313263	LEVER
341	1313262	PIN
342	1313261	SPRING
343	904-02-010-1703	5/16" LOCK WASHER
344	1310105	(DIN 933) M8 X 16MM HEX HD SCR
345	1313258	FENCE
346	1313260	SPINDLE
347	1313259	WHEEL
348	1243456	(DIN 934) M6 HEX NUT
349	1313257	GUIDE
350	1310191	SPECIAL WASHER
351	1313256	SPRING
352	1313255	REAR CLAMP
353	1313254	LOCK ROD

\* NOT SHOWN ASSEMBLED

### STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta International Machinery Corp. strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repair. Any product which is presented to a Delta Authorized Service Center for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.