




36-447 & 36-448  
30" UNIRIP™  
T-SQUARE®

CS-20

PART NO. 422-19-651-0052  
Revised: 09-03-02

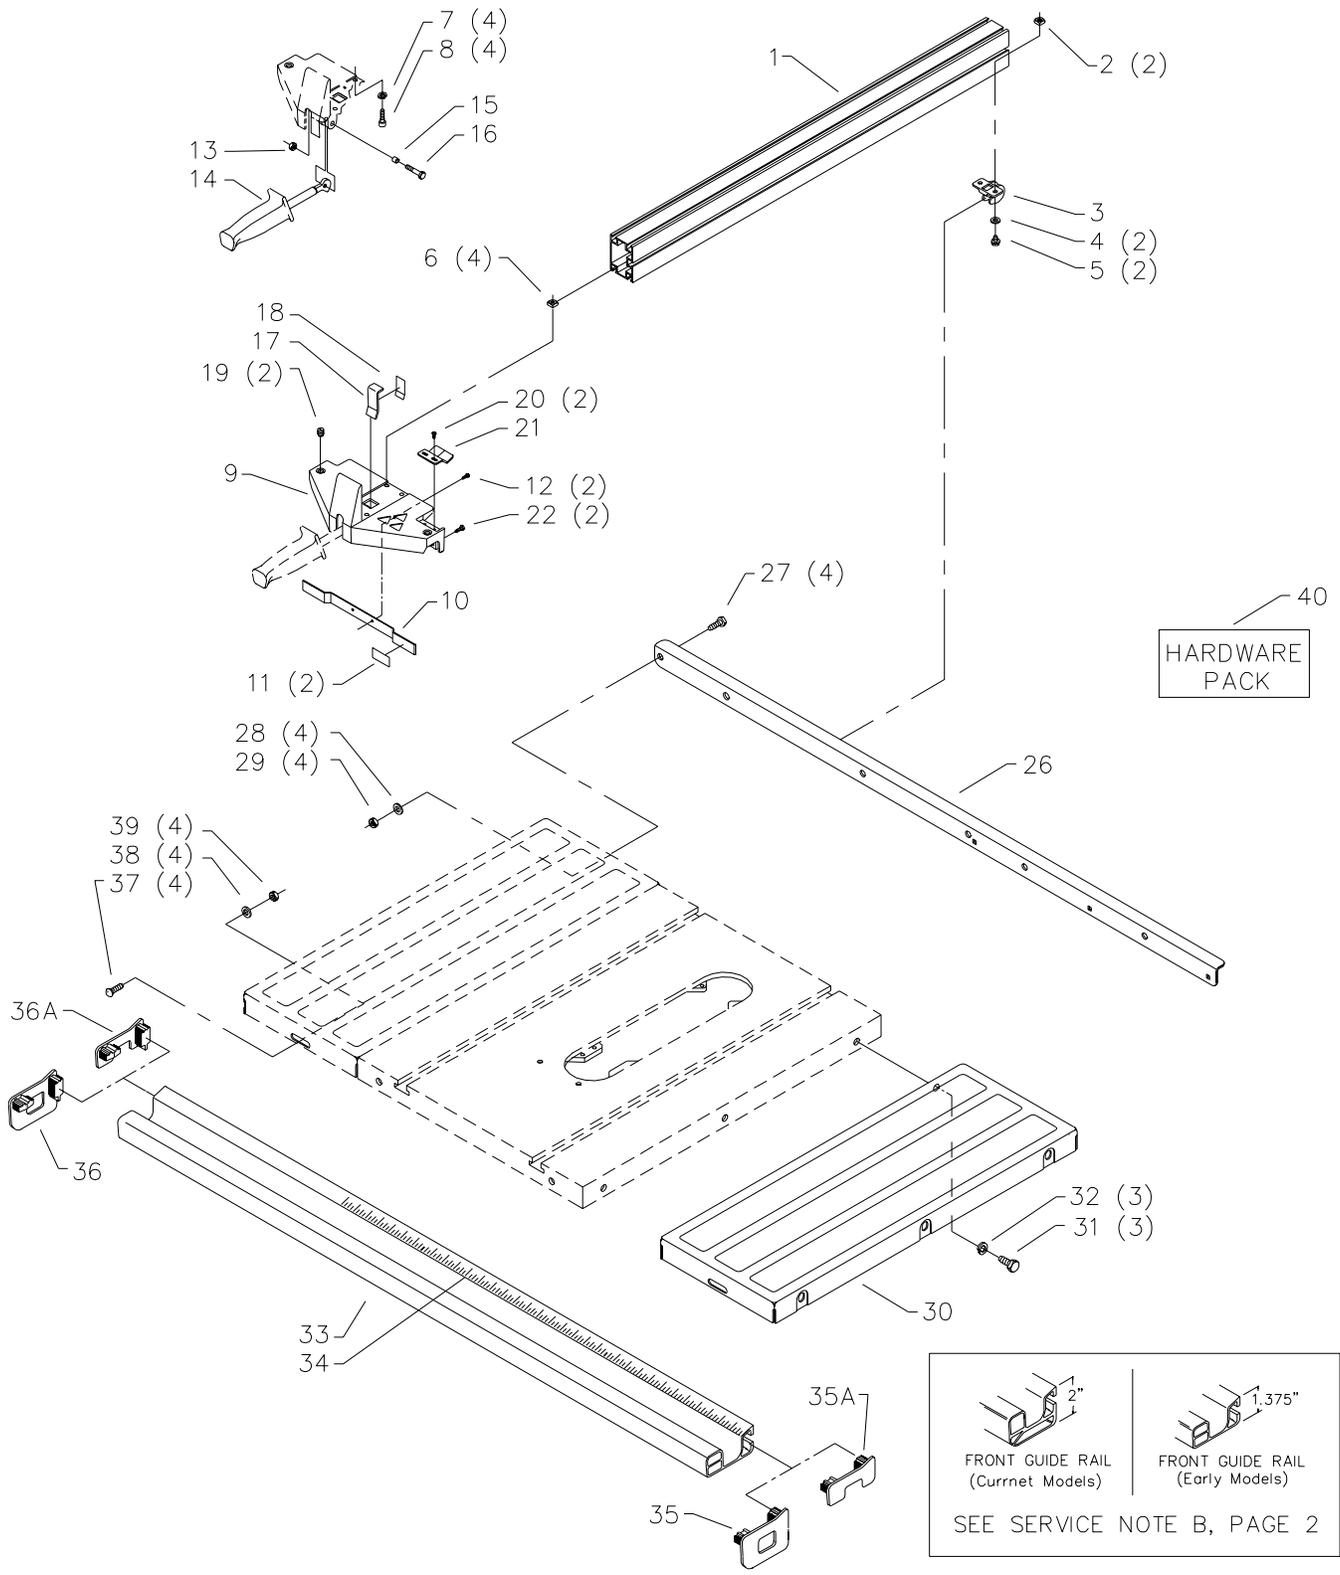

# REPLACEMENT PARTS

Ref.	Part No.	Description
*	422-19-343-0012	FENCE ASSY COMPLETE, INCL:
1	422-19-043-0005	FENCE
2	902-02-040-1306	1/4-20 SQUARE NUT
3	422-19-048-0001	REAR FOOT
4	904-01-010-1614	FLAT WASHER
5	901-02-763-1802	1/4-20 X 5/8" HEX WASHER HD SCR
6	902-02-040-1306	1/4-20 SQUARE NUT
7	904-02-020-1702	1/4" LOCK WASHER
8	901-03-010-0755	1/4-20 X 3/4" HEX SOC HD SCREW
9	422-19-343-0010	FENCE HEAD ASSY, INCL.; (SEE NOTE D)
	422-19-343-0005	FENCE HEAD ASSY, INCL.; (SEE NOTE C)
10	422-39-439-0001	ADJUSTMENT STRIP, INCL:
11	422-19-439-0003	WEAR PAD KIT (SEE NOTE A)
12	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
13	902-01-212-2409	1/4-20 LOCK NUT
14	422-19-367-0002	HANDLE ASSY
15	422-19-104-0006	SPACER
16	901-01-063-1807	1/4-20 X 1 1/4" HEX HD SCREW (SPECIAL)
17	422-19-439-0002	BEARING PLATE, INCL:
18	422-19-439-0003	WEAR PAD
19	422-39-112-0005	LEVELING SCREW
20	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
21	422-19-075-0002	CURSOR
22	901-01-063-1801	1/4-20 X 5/8" HEX HD NYLOC SCREW
26	422-19-089-0013	REAR RAIL
27	901-01-060-0642	3/8-16 X 1" HEX HD SCREW
28	904-01-010-1615	FLAT WASHER
29	902-01-010-5900	3/8-16 JAM NUT
30	34-862	EXTENSION WING, INCL:
31	901-01-060-0680	7/16-20 X 3/4" HEX HD SCREW
32	904-01-010-1638	FLAT WASHER
33	422-19-355-0005	FRONT GUIDE RAIL (SEE NOTES A), INCL:
34	422-19-132-0014	SCALE, (SEE NOTE D)
	422-19-132-0004	SCALE, (SEE NOTE C)
35	422-19-020-0004	END CAP - RIGHT 2" (CMO, SEE NOTE B)
35A	422-19-020-0002	END CAP - RIGHT 1 3/8" (EMO, SEE NOTE B)
36	422-19-020-0005	END CAP - LEFT 2" (CMO, SEE NOTE B)
36A	422-19-020-0003	END CAP - LEFT 1 3/8" (EMO, SEE NOTE B)
37	901-11-020-0891	3/8-16 X 1" CARRIAGE HD SCREW
38	904-01-010-1615	FLAT WASHER
39	902-01-010-5900	3/8-16 JAM NUT
40	n 422-19-628-0013	HARDWARE PACK

EMO=EARLY MODELS ONLY  
CMO=CURRENT MODELS

## SERVICE NOTE:

- A – Service Kit includes 3 Wear Pads
- B – See Current and Early Front Guide Rails configurations on page 1 to determine appropriate End Cap
- C – Serial Numbers Beginning with 01G and Below
- D – Serial Numbers Beginning with 01H and Above

---

## STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

*This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.*