


**Ref.**

No.	Part No.	Description
*	50-654	PLANER STAND, CONST OF:
1	1345772	EXTENSION TABLE
2	1345778	ROLLER
3	n 898859	LEG ASSEMBLY
4	1340725	EXT RET RING
5	904-01-031-2934	1/4" FLAT WASHER
6	901-01-060-0626	1/4-20 X 3/4" HEX HD SCREW
7	n 898675	RAIL
8	1345742	M6 X 20MM HEX FLANGE SCREW
9	1345893	M6 FLANGE NUT
10	1345784	UPPER BRACE
11	1345782	STAND SUPPORT

**Ref.**

No.	Part No.	Description
12	901-01-060-0626	1/4-20 X 3/4" HEX HD SCREW
13	904-01-031-2934	1/4" FLAT WASHER
14	1345781	CLIP
15	1345783	LOWER BRACE
16	902-01-120-1034	1/4-20 HEX NUT
17	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCREW
18	1344330	M8 FLAT WASHER
19	902-01-010-1300	5/16-18 HEX NUT
20	1348301	M8 FLANGE NUT
21	1246157	M8.1 LOCK WASHER
22	1246017	M8 X 30MM HEX HD SCREW

\* NOT SHOWN ASSEMBLED

### STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product which is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

*This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.*