


NOTE: PARTS LIGHTLY SHADED ARE NOT SERVICEABLE.

REPLACEMENT PARTS

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	1350430	3/8-16 X 3/4" HEX HEAD SCREW
2	1350308	3/8" FLAT WASHER
3	A04541	START CAPACITOR
3A	A05126	RUN CAPACITOR
4	1346539	GASKET
5	901-01-060-0607	5/16"-18 X 3/4" HEX HEAD SCREW
6	1343390	5/16" LOCK WASHER
7	A04489	WARNING LABEL
8	1346212	3/8-16 X1-1/2" HEX HEAD
9	902713	WARNING (SMALL)
10	1346547	IMPELLER
11	1346546	SPECIAL WASHER
12	1346545	3/8-16 X1" HEX HEAD SCREW
14	A04526	DUST BAG
16A	901-01-060-5769	5/16-24 X1" HEX HEAD SCREW
17	1350409	5/16-18 HEX NUT
18	901-01-060-0635	5/16-18 X2" HEX HEAD SCREW
20	901-01-060-0607	5/16-18 X 3/4" HEX HEAD SCREW
21	1340637	M8.4 FLAT WASER
24	1310547	M4 X 12MM SHEET METAL SCREW
25	A04528	INTAKE PORT
26	1310547	M4 X 12MM SHEET METAL SCREW
27	1346521	CAP
29	1344330	M8 FLAT WASHER
30	A04503	KNOB
31	A04540	CLAMP
32	A04525	PLASTIC BAG
34	904-02-020-1704	3/8" LOCK WASHER
35	1346520	CASTER
36	A04531	HARDWARE PACK

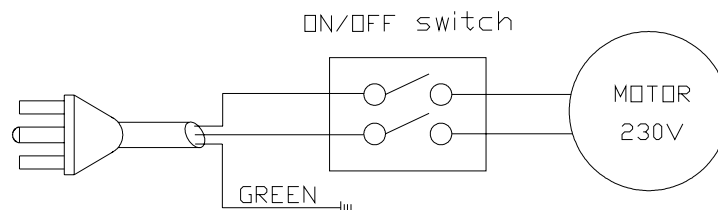

50-761

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.