

REPLACEMENT PARTS

Ref.			Ref.		
No.	Part No.	Description	No.	Part No.	Description
1	902171	INTAKE	21	902170	BLOWER HOUSING
2	901-11-023-1476	CARRIAGE HD SCREW	22	904-01-010-1604	FLAT WASHER
3	1343390	LOCK WASHER	24	901-01-060-0607	HEX HD SCREW
4	902-01-010-1300	HEX NUT	25	1346853	IMPELLER
5	902169	SUPPORT	28	903016	AIR SUCTION (4")
7	1346844	UPPER SUPPORT	29	1310547	PAN HD SCREW
9	898959	HANDLE ASSY	30	1346521	CAP
10	1346845	CLAMP	31	1342476	CLAMP
11	1346846	LOWER SUPPORT	32	50-194	4 IN X 10 FT HOSE
13	1346847	HANDLE COVER	35	903018	BASE MOTOR
14	1346850	MOTOR ASSY	37	1350307	HEX HD SCREW
15	902167	GASKET	40	903019	BASE
15A	1348463	SWITCH HOUSING	41	1350291	HEX NUT
15B	1348465	CLAMP	42	1350288	LOCK WASHER
15C	1348464	CAPACITOR (25UF)	43	903020	CASTER
15D	901-06-121-7383	SCREW-PAN HD	44	902737	ROTATION LABEL
15E	1320187	SCREW-PAN HD	45	902781	WARNING LABEL
15G	1343758	KEY	46	902713	WARNING LABEL BLADE
15F	1343759	SWITCH	47	902838	NAME PLATE
15H	1348466	POWER CORD			
16	902165	DUST BAG			
17	901-01-060-0606	HEX HD SCREW			
19	902166	OUTLET			
20	902168	GASKET			

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.