


## DBS125 BRAD NAILER & NARROW CROWN STAPLER

NA-3

PART NO. A04220 DATE 08-06-04

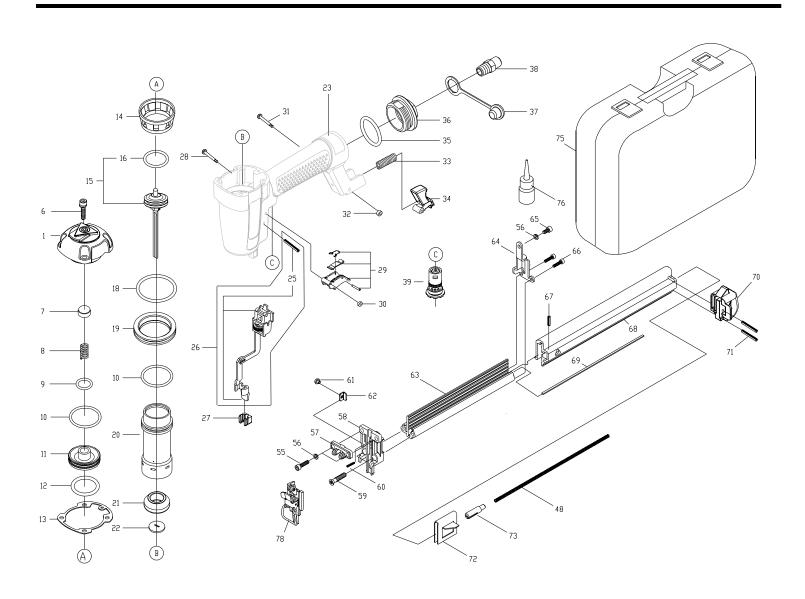

NOTE: PARTS LIGHTLY SHADED ARE NOT SERVICEABLE.

## REPLACEMENT PARTS

Ref.			Ref.		
No.	Part No.	Description	No.	Part No.	Description
		<u>Description</u>			<u>Description</u>
1	A05696	CAP ASSEMBLY	69	A05789	WEAR PLATE
6	A05658	5MM X 22MM SCREW	70	A05790	END CAP
7	A05687	SEAL	71	A05651	3MM X 20MM SPRING PIN
8	A05659	SPRING	72	A05718	PUSHER
9 10	A05663	O-RING O-RING	73 75	A05688 A04047	SPRING GUIDE
11	A05666 A05684	HEAD VALVE	76	884293	CARRYING CASE AIR TOOL OIL (18CC)
12	A05667	O-RING	78	A07062	LATCH ASSEMBLY
13	A05677	GASKET	70	A07002	EATOTI ASSEMBLT
14	A05680	COLLAR		ACCESSORIES: (Optional)	
15	A05794	DRIVER ASSY			(
16	A05675	O-RING	*	70079	OVERHAUL KIT
18	A05671	O-RING	*	70011	DRIVER KIT
19	A05694	SPACER			
20	A05678	CYLINDER SLEEVE	*	NOT SHO	WN
21	A05685	BUMPER			
22	A05717	DRIVER GUIDE			
23	904673	WARNING LABEL			
25	A05652	3MM X 24MM SPRING PIN			
26	A05795	SAFETY UNIT			
27	A05676	NO MAR PAD			
28 29	A05650 A05691	TRIGGER PIN RESTRICTIVE TRIGGER			
30	A05648	RETAINER			
31	A05649	PIN			
32	A05647	RETAINER			
33	A05662	SPRING			
34	A05689	LATCH			
35	A05672	O-RING			
36	A05681	END CAP			
37	884443	COVER			
38	60400	1/4" QUICK DISCONNECT			
39	A05693	TRIGGER VALVE			
48	A05660	FEEDER SPRING			
55	1344933	5MM X 20MM SCREW			
56	A05645	5 X 0.1MM WASHER COVER			
57 58	A05791 A05793	DRIVER GUIDE			
59	A05793	4MM X 18MM SCREW			
60	A05714	1.5MM X 10MM SPRING PIN			
61	A05713	M4 X 4MM SCREW			
62	A05772	CATCH COVER			
63	A05786	MAGAZINE RAIL			
64	A05788	BRACKET			
65	1246051	5MM X 12MM SCREW			
66	1341441	4MM X 12MM SCREW			
67	A05653	3MM X 12MM SPRING PIN			
68	A07063	MAGAZINE ASSEMBLY			

## STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Center for repair with damaged or missing standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department, your service outlet, or by visiting the Delta Website @ www.deltamachinery.com.