

POWERMATIC®

Instructions and Parts Manual 14-inch Cabinet Saw Model PM3000



WALTER MEIER (Manufacturing) Inc.

427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.powermatic.com

Part No. M-1720304

Revision C 04/2011

Copyright © 2011 Walter Meier (Manufacturing) Inc.

Warranty and Service



Walter Meier (Manufacturing) Inc., warrants every product it sells. If one of our tools needs service or repair, one of our Authorized Service Centers located throughout the United States can give you quick service. In most cases, any of these Walter Meier Authorized Service Centers can authorize warranty repair, assist you in obtaining parts, or perform routine maintenance and major repair on your POWERMATIC® tools. For the name of an Authorized Service Center in your area call 1-800-274-6848.

MORE INFORMATION

Walter Meier is consistently adding new products to the line. For complete, up-to-date product information, check with your local Walter Meier distributor, or visit powermatic.com.

WARRANTY

POWERMATIC products carry a limited warranty which varies in duration based upon the product.

 1 YEAR WARRANTY	Industrial Products Horizontal Panel Saws Cut Off Saws Rip Saws Bandsaws Jointers Planers Oscillating Edge Sanders Belt Sanders Shapers Power Feeders Mortisers Dovetailers	 5 YEAR WARRANTY	Non-Industrial Products Tablesaws Vertical Panel Saws Bandsaws Jointers Planers Planer/Molder Dust Collection Disc Sanders Edge Sanders Drum Sanders Shapers Drill Press's Mortisers Dovetailers
--	--	---	---

Warranty reverts to 1 Year if above products are used for commercial, industrial or educational purposes

WHAT IS COVERED?

This warranty covers any defects in workmanship or materials subject to the exceptions stated below. Cutting tools, abrasives and other consumables are excluded from warranty coverage.

WHO IS COVERED?

This warranty covers only the initial purchaser of the product.

WHAT IS THE PERIOD OF COVERAGE?

The general POWERMATIC warranty lasts for the time period specified in the product literature of each product.

WHAT IS NOT COVERED?

The Five Year Warranty does not cover products used for commercial, industrial or educational purposes. Products with a Five Year Warranty that are used for commercial, industrial or education purposes revert to a One Year Warranty. This warranty does not cover defects due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair or alterations, or lack of maintenance.

HOW TO GET SERVICE

The product or part must be returned for examination, postage prepaid, to a location designated by us. For the name of the location nearest you, please call 1-800-274-6848.

You must provide proof of initial purchase date and an explanation of the complaint must accompany the merchandise. If our inspection discloses a defect, we will repair or replace the product, or refund the purchase price, at our option.

We will return the repaired product or replacement at our expense unless it is determined by us that there is no defect, or that the defect resulted from causes not within the scope of our warranty in which case we will, at your direction, dispose of or return the product. In the event you choose to have the product returned, you will be responsible for the handling and shipping costs of the return.

HOW STATE LAW APPLIES

This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

LIMITATIONS ON THIS WARRANTY

WALTER MEIER (MANUFACTURING) INC., LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG THE IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

WALTER MEIER SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Walter Meier sells through distributors only. The specifications in Walter Meier catalogs are given as general information and are not binding. Members of Walter Meier reserve the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever.

Table of Contents

Warranty and Service.....	2
Table of Contents	3
Warnings.....	4
Introduction	6
Specifications	6
Shipping Contents	7
Unpacking	7
Cleaning	7
Contents of the Shipping Container	7
Mounting Extension Wings.....	9
Lock Knobs and Swivel Handles.....	9
Blade Installation/Replacement	10
Mounting Rails and Accu-Fence®	10
Wood Extension Table.....	10
Switch Installation.....	10
Motor Cover.....	11
Riving Knife and Guard Installation.....	11
Handwheel Adjustments	13
Zero-Clearance Insert Setup	13
Miter Slot Alignment	14
Tilt Stop Adjustment	15
Precision Miter Gauge	15
Drive Belt.....	16
Riving Knife Adjustment.....	17
Insert Adjustment	18
Arbor and Arbor Bearing Removal	18
Operating Controls.....	18
Start/Stop	18
Extension Cords.....	12
Safety Key	18
Operations	19
Overview	19
Kickback.....	19
Bevel and Miter Operations.....	22
Safety Devices	23
Feather Board and Push Blocks	23
Push Stick.....	23
Filler Piece.....	23
Maintenance	24
Cleaning	24
Lubrication.....	24
Miscellaneous	24
Optional Accessories	24
Troubleshooting.....	25
Replacement Parts	26
Table & Cabinet Assembly	26
Table & Cabinet Assembly Parts List.....	27
Trunnion & Motor Assembly	28
Trunnion & Motor Assembly Parts List	29
Motor Cover Assembly.....	31
Electrical Connections – 7.5HP 3PH 230V.....	34
Electrical Connections – 7.5HP 3PH 460V.....	35

Warnings

1. Read and understand the entire owner's manual before attempting assembly or operation.
2. Read and understand the warnings posted on the machine and in this manual. Failure to comply with all of these warnings may cause serious injury.
3. Replace the warning labels if they become obscured or removed.
4. This table saw is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe operation of a table saw, do not use until proper training and knowledge have been obtained.
5. Do not use this table saw for other than its intended use. If used for other purposes, Walter Meier (Manufacturing) Inc., disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.
6. Always wear approved safety glasses/face shields while using this table saw. Everyday eyeglasses only have impact resistant lenses; they are not safety glasses.
7. Before operating this table saw, remove tie, rings, watches and other jewelry, and roll sleeves up past the elbows. Remove all loose clothing and confine long hair. Non-slip footwear or anti-skid floor strips are recommended. Do **not** wear gloves.
8. Wear ear protectors (plugs or muffs) during extended periods of operation.
9. Some dust created by power sanding, sawing, grinding, drilling and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:
 - Lead from lead based paint.
 - Crystalline silica from bricks, cement and other masonry products.
 - Arsenic and chromium from chemically treated lumber.Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as face or dust masks that are specifically designed to filter out microscopic particles.
10. Do not operate this machine while tired or under the influence of drugs, alcohol or any medication.
11. Make certain the machine is properly grounded.
12. Make all machine adjustments or maintenance with the machine unplugged from the power source. A machine under repair should be RED TAGGED to show it must not be used until maintenance is complete.
13. Remove adjusting keys and wrenches. Form a habit of checking to see that keys and adjusting wrenches are removed from the machine before turning it on.
14. Keep safety guards in place at all times when the machine is in use. If removed for maintenance purposes, use extreme caution and replace the guards immediately.
15. Check the alignment of the riving knife, fence and miter slot to the blade. A caution decal is installed on each guard to remind the operator of the dangers of improper machine operation.
16. Check damaged parts. Before further use of the machine, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
17. Provide for adequate space surrounding work area and non-glare, overhead lighting.
18. Keep the floor around the machine clean and free of scrap material, oil and grease.

Warnings

19. Keep visitors a safe distance from the work area. Keep children away.
20. Make your workshop child proof with padlocks, master switches or by removing safety keys.
21. Give your work undivided attention. Looking around, carrying on a conversation and “horse-play” are careless acts that can result in serious injury.
22. Maintain a balanced stance at all times so that you do not fall or lean against the blade or other moving parts. Do not overreach or use excessive force to perform any machine operation.
23. Use the right tool at the correct speed and feed rate. Do not force a tool or attachment to do a job for which it was not designed. The right tool will do the job better and more safely.
24. Use recommended accessories; improper accessories may be hazardous.
25. Maintain tools with care. Keep blade sharp and clean for the best and safest performance. Follow instructions for lubricating and changing accessories.
26. Check the saw blade for cracks or missing teeth. Do not use a cracked or dull blade or one with missing teeth or improper set. Make sure the blade is securely locked on the arbor.
27. Keep hands clear of the blade area. Do not reach past the blade to clear parts or scrap with the saw blade running. Never saw freehand. Avoid awkward operations and hand positions where a sudden slip could cause your hand to contact the blade.
28. Do not attempt to saw boards with loose knots or with nails or other foreign material on its surface. Do not attempt to saw twisted, warped, bowed or “in wind” stock unless one edge has been jointed for guiding purposes prior to sawing.
29. Do not attempt to saw long or wide boards unsupported where spring or weight could cause the board to shift position.
30. Always use the riving knife, blade guard, push stick and other safety devices for all operations where they can be used. On operations such as dadoing or molding where the blade guard cannot be used, use feather boards, fixtures and other safety devices and use extreme caution. Reinstall the riving knife and blade guard immediately after completing the operation that required their removal.
31. Be sure the saw blade rotates clockwise when viewed from the motor side (left side) of the machine.
32. Turn off the machine before cleaning. Use a brush or compressed air to remove chips or debris — do not use your hands.
33. Do not stand on the machine. Serious injury could occur if the machine tips over.
34. Never leave the machine running unattended. Turn the power off and do not leave the machine until the blade comes to a complete stop.
35. Remove loose items and unnecessary work pieces from the area before starting the machine.

Familiarize yourself with the following safety notices used in this manual:

CAUTION This means that if precautions are not heeded, it may result in minor injury and/or possible machine damage.

WARNING This means that if precautions are not heeded, it may result in serious injury or possibly even death.

Introduction

This manual is provided by Walter Meier (Manufacturing) Inc., covering the safe operation and maintenance procedures for a Powermatic Model PM3000 Cabinet Saw. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. This machine has been designed and constructed to provide years of trouble free operation if used in accordance with instructions set forth in this manual. If there are any questions or comments, please contact either your local supplier or Walter Meier. Walter Meier can also be reached at our web site: www.waltermeier.com.

Specifications

Model number	PM3000
Stock Number	1720305K
Motor	TEFC, 7.5HP, 3Phase, 230/460V (pre-wired 230V)*
Table size with standard extensions (L x W/in.).....	48 x 38
Table size without extensions (L x W/in.).....	26 x 38
Arbor diameter (in.).....	1
Saw blade diameter (in.)	14
Arbor speed (RPM).....	3450
Left tilt range (deg.).....	0–45
Maximum depth of cut (in.)	5-1/8 at 90-degrees; 3-1/2 at 45-degrees
Maximum diameter of dado (in.).....	8
Maximum width of dado cut (in.)	13/16
Maximum rip to right of blade (in.).....	50
Maximum rip to left of blade (in.).....	14
Table surface in front of saw blade at max. depth of cut (in.).....	15-1/2
Drive system	Poly-V Belt
Table height to floor (in.)	35
Dust port diameter (in.)	4
Minimum dust collection required (CFM)	350
Approximate weight, complete kit:	
Net Weight (lbs.)	750
Shipping weight (lbs.)	820
Approximate weight, saw only (minus fence, rails, wood extension table and legs):	
Net Weight (lbs.)	610
Shipping (lbs.).....	695

* 460V operation requires additional purchase of 460V switch (stock no. PM3000-282A)

The above specifications were current at the time this manual was published, but because of our policy of continuous improvement, Walter Meier reserves the right to change specifications at any time and without prior notice, without incurring obligations.

⚠WARNING Read and understand the entire contents of this manual before attempting assembly or operation! Failure to comply may cause serious injury

Shipping Contents

Unpacking

Remove box and wood crating completely from around saw. Check for shipping damage. Report any damage immediately to your distributor and shipping agent. Do not discard any shipping material until the Table Saw is assembled and running properly.

Compare the contents of your container with the parts lists on this page and the following page to make sure all parts are intact. Missing parts, if any, should be reported to your distributor. Read the instruction manual thoroughly for assembly, maintenance and safety instructions.

1. Unbolt the saw from the skid.
2. Carefully remove the saw from the pallet and place it in position.

IMPORTANT: The saw is extremely heavy. It is strongly recommended that a sling or hoist system be used to remove the saw from the pallet.

The Table Saw should be placed in an area with a sturdy, level floor, good ventilation and sufficient lighting. Leave enough space around the machine for mounting extension wings and rail assemblies, and loading and off-loading stock and general maintenance work.

Cleaning

Exposed metal surfaces, such as the table top and extension wings, have been given a protective coating at the factory. This should be removed with a soft cloth moistened with kerosene. Do not use acetone, gasoline, or lacquer thinner for this purpose. Do not use solvents on plastic parts, and do not use an abrasive pad because it may scratch the surfaces.


Contents of the Shipping Container

Main Saw Container

- 1 Table Saw (A)
- 1 Table Insert (B)
- 1 Small Box (shown page 8)

The following items are inside the saw:


- 1 Miter Gauge Assembly (C)
- 1 Blade Guard Assembly (D)
- 1 Switch in box (E)
- 1 Owner's Manual (not shown)
- 1 Warranty Card (not shown)

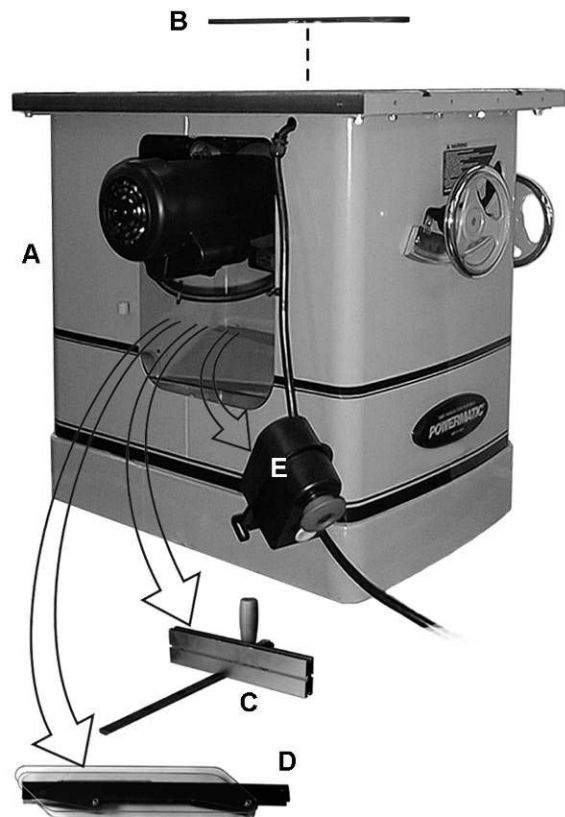

Small Box

The small box consists of the following items:

- 1 Push Stick (G)
- 1 32mm Arbor Wrench (H)
- 2 Lock Knobs (J)
- 2 Swivel Handles (K)
- 1 Riving Knife and Pawl Assembly (L)
- 1 Hardware Bag (M) consisting of:
 - 6 3/8-16 x 1 Hex Cap Screws (AA)
 - 6 3/8 Lock Washer (BB)
 - 6 3/8 Flat Washer (CC)

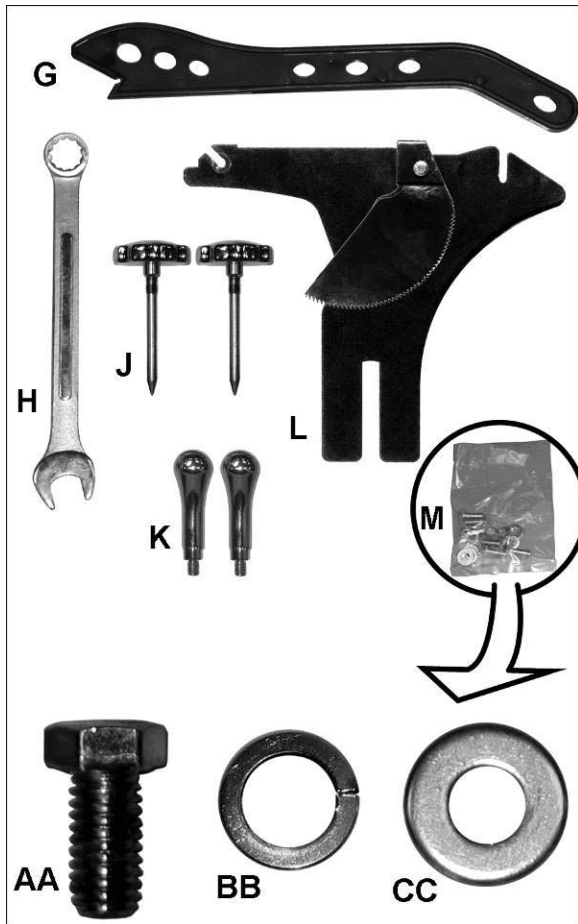

Contents of the Small Box

Extension Tables


Two extension tables are packaged in individual boxes.



Extension Tables

Side Cover Box

- 2 Hinge Pin (N)
- 1 Side Cover (O)

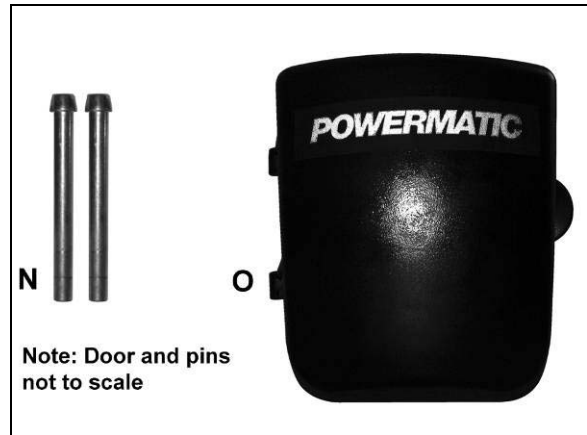

Contents of Side Cover Box

Fence and Rail

Carton contents and installation instructions for the fence, rail system, and wooden extension table are described in the *Accu-Fence Owner's Manual* (No. M-2195079Z).

Assembly

Mounting Extension Wings

Referring to Figure 1:

1. Mount a *cast iron extension wing* (A) to the right or left side of the *table* (B) using three each $3/8$ -16x1 *hex head screws* (C), $3/8$ *lock washers* (D) and $3/8$ *flat washers* (E). Have an assistant hold the extension wing up to the table while you insert the screws and washers. Finger-tighten only.

Note: If an assistant is not available, hold the wing in vertical position up to the saw table, insert the middle screw and lock washer finger tight, then pivot the wing to level position. Insert the other two screws and washers finger tight.

2. Mount the remaining extension wing to the other side of the table in the same manner.
3. Make sure that the *front edge* of the extension wings are flush with the front edge of saw table (Figure 2).
4. Level the extension wing with the saw table across its entire width (Figure 3) using a straight edge and a rubber hammer (or a metal hammer with a block of wood as shown).
5. As each area of the wing becomes flush with the table, tighten the screw under that area. Continue until all three screws are fully tightened.
6. Repeat for the other extension wing.

Lock Knobs and Swivel Handles

Referring to Figure 4:

1. Thread the swivel handles (A) into the front and side handwheels (C) and tighten with a 14mm wrench.
2. Screw lock knobs (B) into the threaded openings on the ends of the shafts located in the middle of the handwheels (C).

Note: Do not tighten the lock knobs all the way at this time.

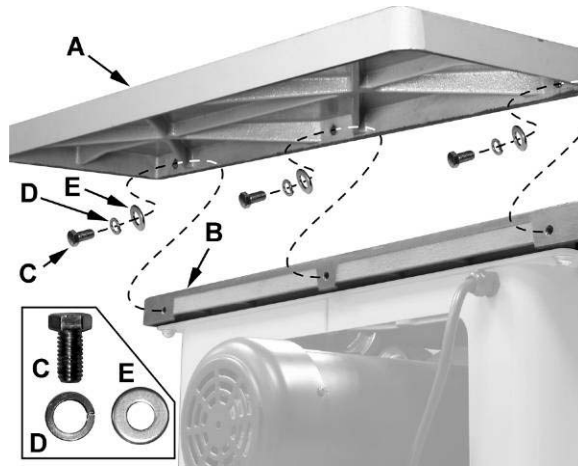


Figure 1

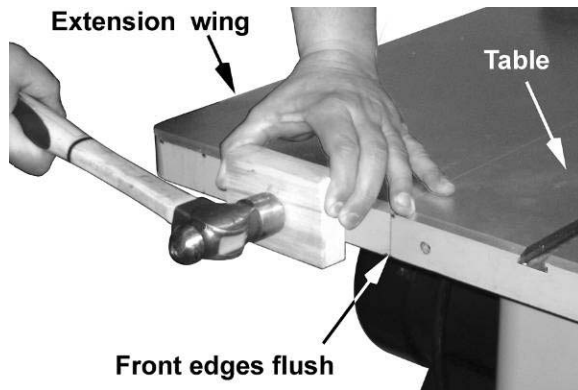


Figure 2

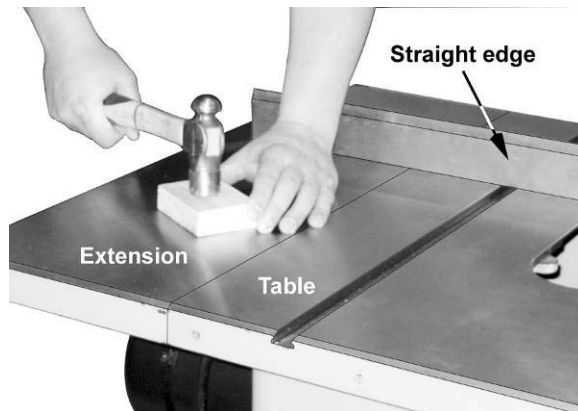


Figure 3

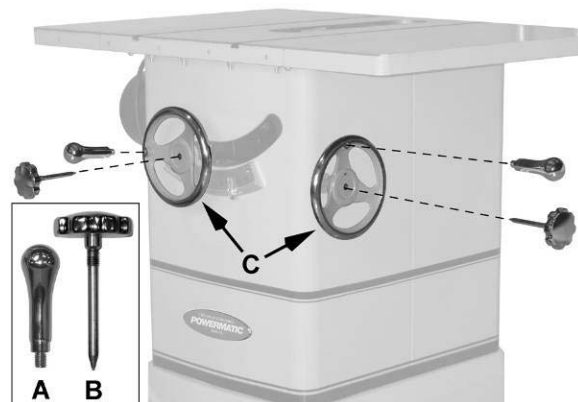


Figure 4

Blade Installation/Replacement

CAUTION Use care when working with or around sharp saw blade to prevent injury!

To install or replace a blade (refer to Figure 5):

1. Disconnect machine from power source.
2. Raise the blade height all the way up and set the blade tilt to 0° (refer to Handwheel Adjustments on page 13).
3. Press the arbor lock (D) in the direction shown by the arrow to engage it into the slot in the arbor (C). At the same time remove the arbor nut (A); loosen with a 32mm wrench if necessary.
4. Remove the collar (B).
5. Install the blade, making sure the cutting teeth at the top of the blade point toward the front of the saw. If unsure, refer to Figure 9 for the proper blade orientation.
6. Replace the collar (B) and arbor nut (A).
7. Engage the arbor lock (D) and tighten the nut (A) with a 32mm wrench.
8. Lower the blade below the table.

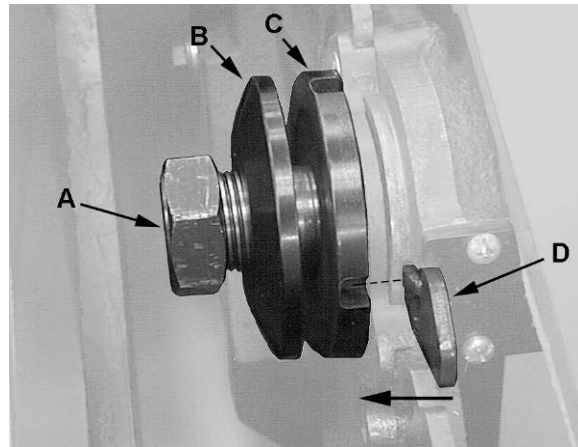


Figure 5

Mounting Rails and Accu-Fence®

With the extension wings properly aligned, the rail, guide tube and fence assembly can now be mounted to the saw. Consult the *Accu-Fence® Owner's Manual* (Part No. M-2195079Z) for instructions.

Wood Extension Table

For instructions on mounting the accessory wood extension table, consult the *Accu-Fence® Owner's Manual* (Part No. M-2195079Z) for instructions.

Switch Installation

Referring to Figure 6:

1. Place the *switch assembly* (A) under the *rail* (B) and *guide tube* (C) so that the two holes in the *switch bracket* (D) line up with the left two holes in the rail and guide tube.

Note: The screws and lock washers may already have been installed when the rail and guide tube were installed and need to be removed for this operation.

2. Secure with two $1/4$ lock washers (E) and $1/4 \times 3/4$ hex cap screws (F).

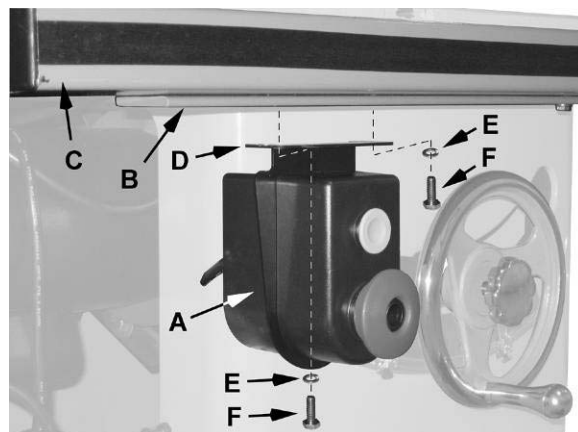


Figure 6

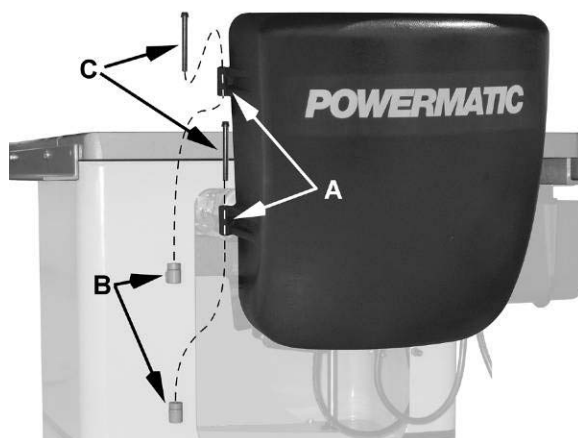


Figure 7

Motor Cover

Line up the *door hinges* (A, Figure 7) with the *cabinet hinges* (B, Figure 7) and insert *hinge pins* (C, Figure 7).

Note: The locking mechanism may require adjustment to insure proper alignment.

Riving Knife and Guard Installation

Description

Referring to Figure 8:

The complete *riving knife and guard assembly* is shown in A. Before installing onto the saw, the *anti-kickback pawl* (E) must be separated from the *riving knife* (H) as described below.

Press and hold the *quick-release button* (D) on the base of the *anti-kickback pawl* (E) and lift the pawl to remove from the *riving knife* (H).

Installation

Referring to Figure 9:

1. Set the saw blade to the 90 degree position and raise it all the way (refer to *Handwheel Adjustments* on page 13).
2. Remove the table insert (J).
3. Located inside the table and accessible through the insert opening (Figure 9 inset), place the quick-release clamp lock handle (K) in the *unlock* position.
4. The *floating clamp block* (L) is spring loaded and will move away (O) from the *fixed block* (M), leaving a gap.
5. Insert the bottom of the *riving knife* (N₁, N₂) all the way into the gap between the *clamp blocks* (L, M), then lock the handle (K).
6. Replace the *insert* (J) back on the table. The saw blade and riving knife should protrude through the slot in the insert.

Referring back to Figure 8:

7. Attach the *anti-kickback pawl* (E) by pressing and holding the *quick-release button* (D) and inserting the lock pin of the pawl into the appropriate *slot* (F) on the riving knife.
8. In a similar manner attach the guard (C) by pressing and holding the *quick-release button* (B) and inserting the lock pin of the guard into the appropriate *slot* (G) on the riving knife.
9. You should feel a snap as each piece locks in position. Attempt to lift as a test to make sure that they are securely locked in place.

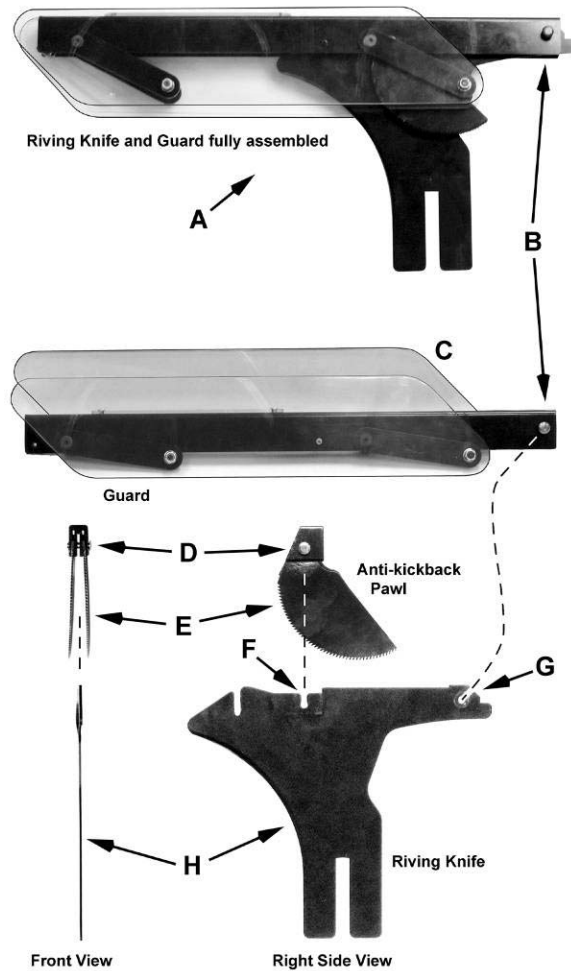


Figure 8

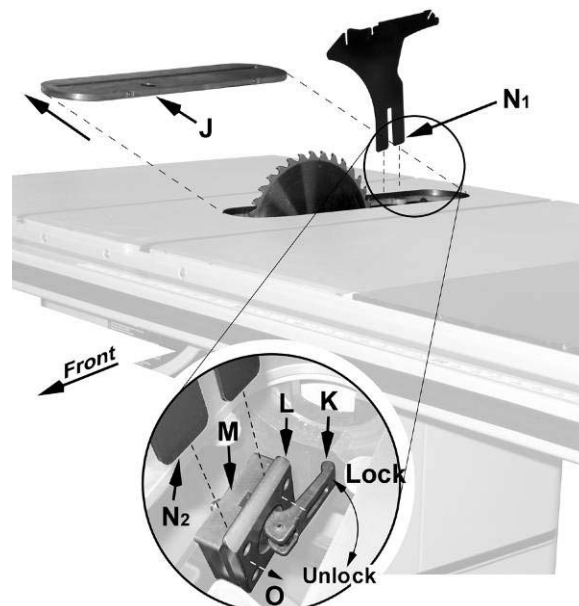


Figure 9

Adjustment

The clamping blocks (L, M, Figure 9) are adjusted at the factory and no further adjustment of the blade guard and riving knife assembly should be necessary. However, **proper alignment is very important.** Before operating the table saw, read the *Riving Knife Adjustment* section (page 16) to verify and follow the adjustment procedure if necessary.

Grounding Instructions

⚠WARNING Electrical connections must be made by a qualified electrician in compliance with all relevant codes. This machine must be properly grounded to help prevent electrical shock and possible fatal injury.

A power plug is not provided with the Model PM3000. You may either connect the proper UL/CSA listed plug or “hardwire” the machine directly to your electrical panel provided there is a disconnect near the machine for the operator. If hard-wiring, make sure the fuses have been removed or the breakers have been tripped in the circuit to which the machine will be connected. Place a warning placard on the fuse holder or circuit breaker to prevent it being turned on while the machine is being wired.

The **three phase** motor on the 1720305K is pre-wired for 230 volt but may be re-connected for 460 volts by changing the connections as illustrated in the diagram in the motor wiring box, and by installing a 460V switch (not included – call customer service to order stock no. PM3000-282A).

It is recommended that the three phase PM3000 table saw when operated at **230 volts**, be connected to a dedicated, *minimum* 30 amp circuit with a 30 amp circuit breaker or time delay fuse. When operated at **460 volts**, connect the table saw to a dedicated, *minimum* 20 amp circuit with 20 amp circuit breaker or time delay fuse. **Local codes take precedence over recommendations.**

This machine must be grounded. Grounding provides a path of least resistance to help divert current away from the operator in case of electrical malfunction.

Make sure the voltage of your power supply matches the specifications on the motor plate of the machine.

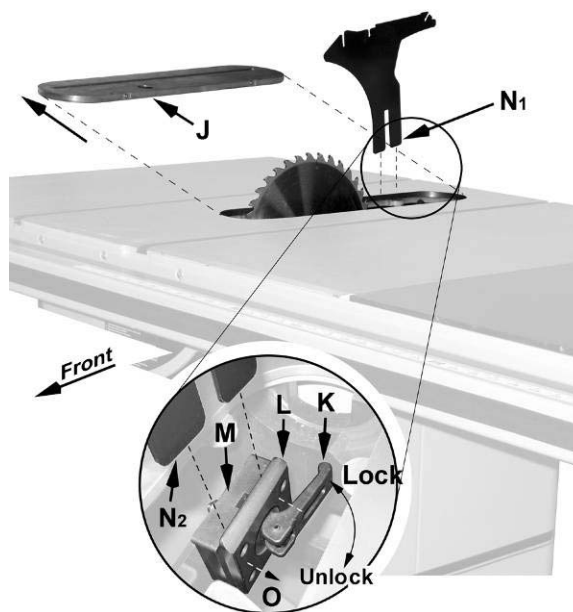


Figure 9 repeated

Extension Cords

Make sure the cord rating is suitable for the amperage listed on the machine's motor plate. An undersize cord will cause a drop in line voltage resulting in loss of power and overheating.

The chart in *Table 1* shows the correct size cord to use based on cord length and motor plate amp rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

Recommended Gauges (AWG) of Extension Cords

Amps	Extension Cord Length *					
	25 feet	50 feet	75 feet	100 feet	150 feet	200 feet
< 5	16	16	16	14	12	12
5 to 8	16	16	14	12	10	NR
8 to 12	14	14	12	10	NR	NR
12 to 15	12	12	10	10	NR	NR
15 to 20	10	10	10	NR	NR	NR
21 to 30	10	NR	NR	NR	NR	NR

*based on limiting the line voltage drop to 5V at 150% of the rated amperes.

NR: Not Recommended.

Table 1

Adjustments

Handwheel Adjustments

Referring to Figure 10:

The *front handwheel* (B) controls the raising and lowering of the blade (*blade height*).

The *side handwheel* (C) controls the *blade tilt*. The blade can be adjusted for a tilt between 90° (vertical or a setting of 0° on the scale) and 45° left tilt (D).

Blade height

1. Loosen the lock knob (A) on the blade height adjust handwheel.
2. Turn the handwheel (B) clockwise to raise and counterclockwise to lower the blade.
3. Tighten the lock knob (A).

Blade tilt adjustment

1. Loosen the lock knob (A) on the side handwheel (C).
2. Turn the handwheel (C) counterclockwise to adjust the saw blade down to 45° left tilt (D). Turn clockwise to adjust the saw blade to maximum of 90° (D).
3. After selecting the position, tighten the lock knob (A).

Zero-Clearance Insert Setup

Under normal operations where the standard *table insert* (which is provided) is used, the top edge of the saw blade will come to rest approximately 1/8" below the table surface when the blade height is positioned all the way down.

In situations where a zero-clearance insert is desired, the saw blade *may* be lowered further for accommodation of inserts that have potential clearance issues with the blade. This is done as follows:

1. Remove the guard and pawl (Figure 8, Items C, E).
2. Open the side cover and locate the blade depth stop screw (A, Figure 11) located between the arbor pulley and motor.
3. Using a 14mm open wrench, loosen the hex nut (B, Figure 11). This will allow the hex cap screw to loosen and the saw blade to be adjusted lower.
4. With the height adjust handwheel (B, Figure 10), lower the saw blade all the way.

The *zero-clearance insert* can now be placed in the table opening without contacting the blade.

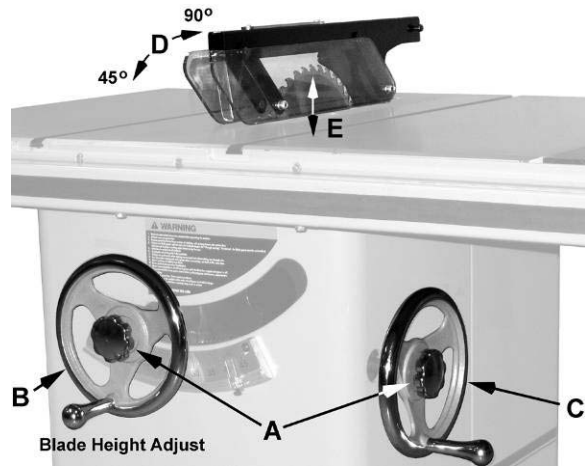


Figure 10

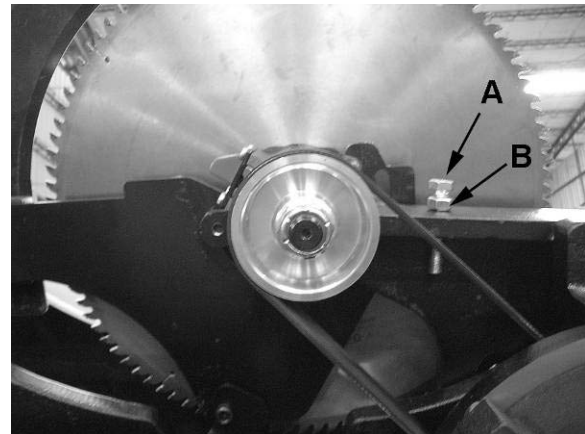


Figure 11

CAUTION Never use a zero-clearance insert with the saw blade in a tilted position. Never operate the saw without the blade guard, riving knife and anti-kickback pawls for operations where they can be used.

When the standard insert is to be used again, the saw blade must be readjusted as follows:

5. With the height adjust handwheel (B, Figure 10), adjust height of the blade until the top of the saw blade is 1/8" below the top of the table.
6. The blade depth stop screw (A, Figure 11) should be resting against the trunnion. Verify that this is the case; then tighten the hex nut (B, Figure 11).
7. Replace the standard insert, pawl and blade guard.

Miter Slot Alignment

WARNING Disconnect machine from power source before making this adjustment.

To check the alignment of the miter slot to the blade:

1. Raise the blade to its maximum height at the 90° vertical position (0° on scale).
2. Mark one tooth with a grease pencil and position the tooth slightly above the top edge of the table at the front.
3. Raise the miter gauge slightly out of its slot to serve as a shoulder. Using a combination square against the side of the bar, slide the scale over until it touches the tip of the blade, and lock the scale in position (A, Figure 12).
4. Rotate the marked tooth so that it is slightly above the table top at the rear (B, Figure 12) and using the square as before, check whether the distance to the blade is the same.
5. If the distance is not the same, loosen the four mounting screws that lock the table top to the cabinet (two in front, two in back).
6. Nudge the table to bring the miter slot in line with the blade.
7. The blade must be kept centered *with the slot in the table insert* to ensure clearance at both the 90° and 45° positions.
8. After alignment, secure the table to the cabinet by re-tightening the four mounting screws.

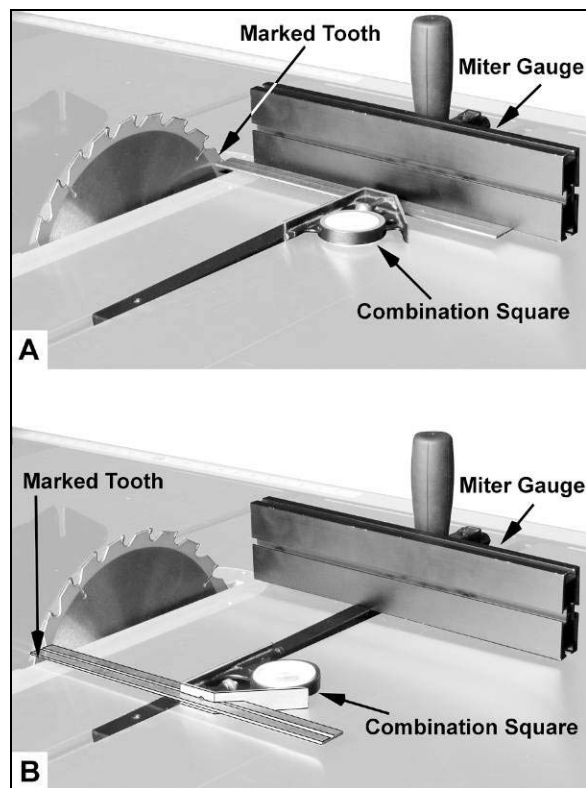


Figure 12

Tilt Stop Adjustment

1. Adjust the blade tilt for 90° as described in *Blade Tilt Adjustment* on page 13.
2. Using a combination square, check the 90° stop (Figure 13 shows the 90° stop being checked).
3. Adjust the 90° stop position if required, using the stop screws as shown.
4. The 90° stop adjustment is accessible through the left side opening. 14mm wrenches are required to loosen the lock nut and adjust the screw.
5. Check the accuracy of the *pointer* at 0° (blade at 90° vertical position) and adjust if required.
6. Adjust the blade tilt for 45°. If required, adjust the stop and pointer in the same manner as above. The 45° stop adjustment is accessible through the slot on the front of the cabinet.

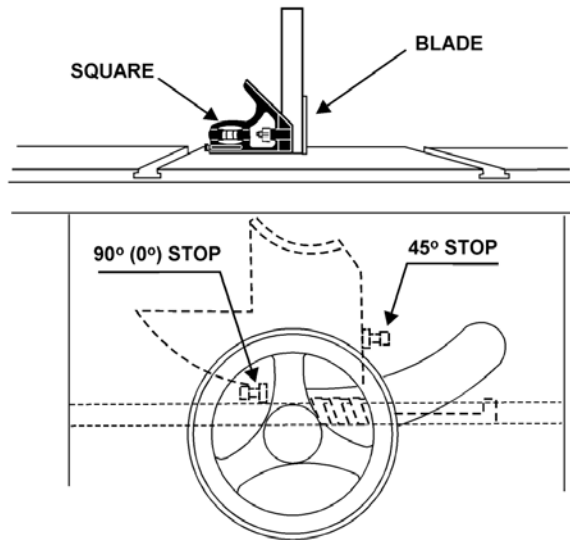


Figure 13

Precision Miter Gauge

Setting the miter gauge angle

Referring to Figure 14:

The precision miter gauge has a *rack and pinion adjustment* for setting the angle. To operate:

1. Slide the miter gauge into one of the slots on the table top.
2. Loosen lock handle (A).

To adjust the *body* (B) of the miter gauge to the desired angle:

3. Pull the spring-loaded knob (C) out and turn until the body (B) of the miter gauge is at the desired angle as indicated on the scale.
4. Tighten the lock handle (A).

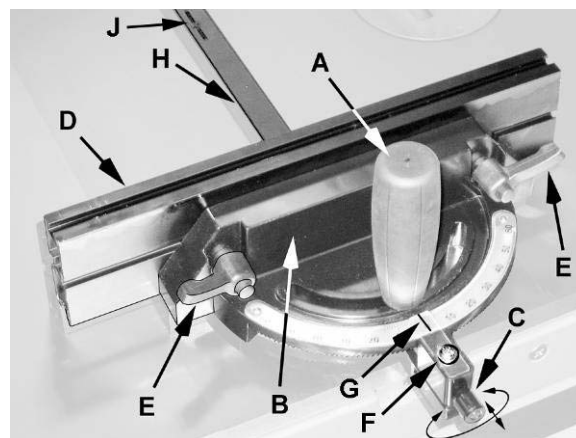


Figure 14

Indent settings

There are indents at the 0°, 30° and 45° right and left positions. At these settings, release the *knob* (C) to engage the stop rod. Then tighten the *lock handle* (A).

Note: Do not rely solely on the indents for an accurate setting. After the stop rod engages at the 0°, 30° and 45° positions, make a fine adjustment with the knob (C), if necessary, setting it against the scale indicator.

Extension plate

The *extension plate* (D, Figure 14) can be adjusted by sliding to the right or left or removed entirely.

To adjust – loosen two *lock handles* (E), position the extension plate and tighten the lock handles.

To remove – slide the extension plate completely off and remove the lock handles (E) and mounting hardware.

Calibrating the miter gauge

1. Place the miter gauge in one of the *slots* (H, Figure 14) on the table top.
2. Set the miter gauge to 90° (0° setting on the scale) by loosening the *lock handle* (A), then pulling the *spring-loaded knob* (C) out and turning the body (B) until 0° is indicated on the scale (G).
3. Measure the accuracy of the gauge against the slot with a combination square.

If adjustment is necessary:

4. Adjust the *body* (B) until it is perfectly square (90°) to the *miter slot* (H).
5. Tighten the *lock handle* (A).
6. Verify that the *scale indicator* (G) reads 0°. If further adjustment is necessary:
7. Loosen the *screw* (F) and adjust the *indicator* (G) until it reads 0°
8. Tighten the *screw* (F).

Removing play in the miter slot

If any “play” occurs between the miter bar and the table miter slot, tighten one or both set screws (J) on the miter bar as needed.

Drive Belt

The saw is equipped with a poly-V belt.

Referring to Figure 15:

To adjust the belt tension – loosen the *hex nut* (B) on the motor pivot and *hex cap screw* (A) on the bracket with a 19mm socket or wrench. Use the handle (E) to pivot the motor (C) and bracket to the right to increase the belt tension. Retighten screw (A) and nut (B).

To remove and replace belt – loosen the *hex nut* (B) on the motor pivot and *hex cap screw* (A) on the bracket with a 19mm socket or wrench. Use the handle (E) to pivot the motor (C) and bracket to the left as far as possible. Remove the old *poly-V belt* (D) and replace. Adjust the belt tension as described above.

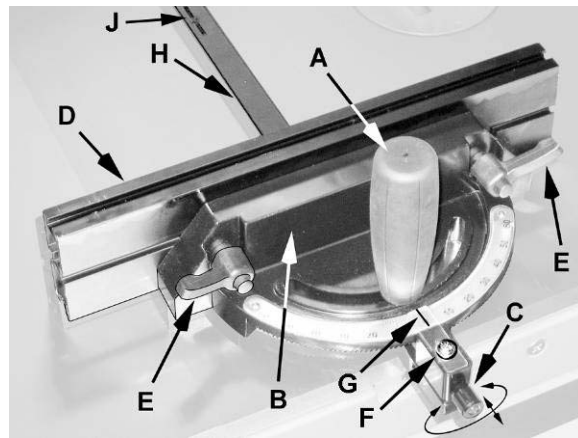


Figure 14 repeated

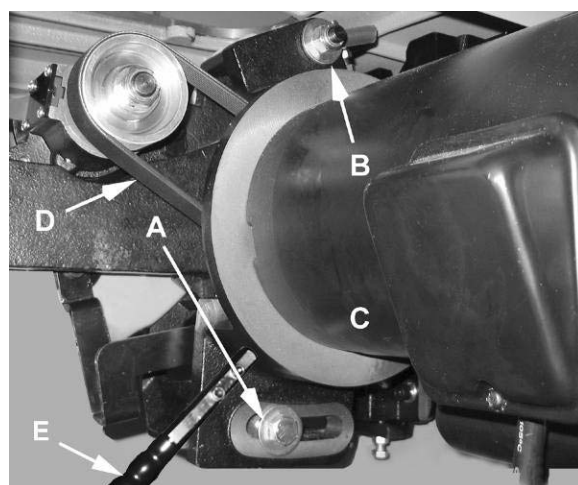


Figure 15

Riving Knife Adjustment

Lateral alignment

The saw blade and riving knife must be in line as close as possible with each other (*lateral alignment*) for the prevention of kickback. Upon initial blade guard and riving knife installation no further adjustment should be necessary. Alignment should be checked and adjusted, if required, after each blade change.

Check the alignment as follows:

1. Remove the *blade guard* and *pawl* (C, E, Figure 8).
2. Place a *straightedge* (A, Figure 16) on the table so it rests against the *blade* (B, Fig 16) and *riving knife* (C, Figure 16). Rotate the blade so the top of the blade tooth touches the straightedge.

The saw blade and riving knife must be in line.

If adjustment is required:

3. Remove the *blade guard* (C, Figure 8) and *table insert*.
4. Loosen the *lock handle* (A, Figure 17) and remove the riving knife, making a note as to which direction the riving knife needs to be moved to align it with the saw blade.
5. Using a 3mm hex wrench, make adjustments to four *set screws* (D, Figure 18) accessible through openings located in the corners of the *floating clamp block* (B, Figure 18).

Adjust any number of setscrews required to bring the riving knife in alignment with the saw blade. Then reinsert the riving knife, secure by tightening the *lock handle* (A, Figure 17) and check the alignment per step 2.

Note: Position the lock handle *towards* the saw blade as shown in Figure 17. This will avoid the table insert from being lifted when the blade is raised with the handwheel.

6. Repeat steps 3–5 until the alignment is correct.

Blade proximity alignment

The gap between the saw blade and riving knife must be between 3 and 8mm (Figure 19). If adjustment is needed, note whether the blade to knife gap needs to be increased or decreased. Then adjust as follows:

1. Remove the blade guard, pawl, table insert and riving knife.

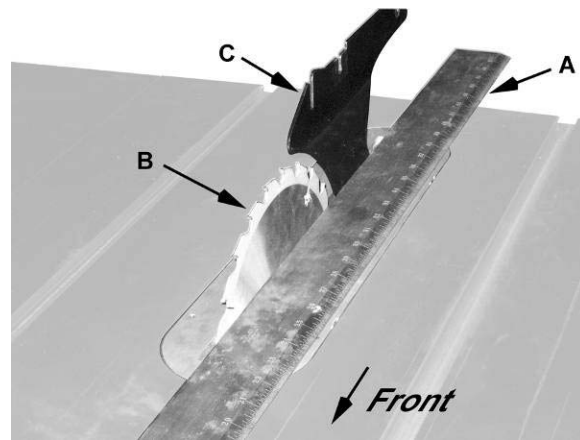


Figure 16

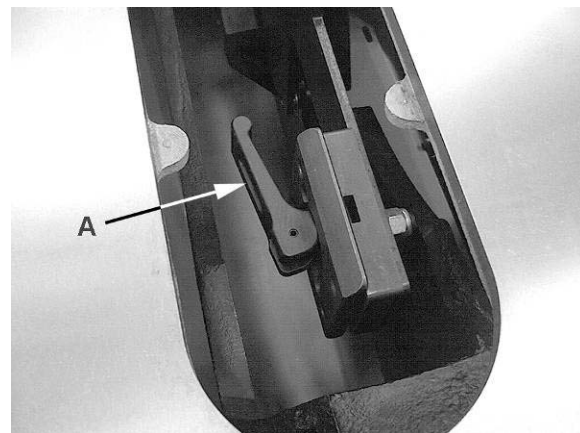


Figure 17

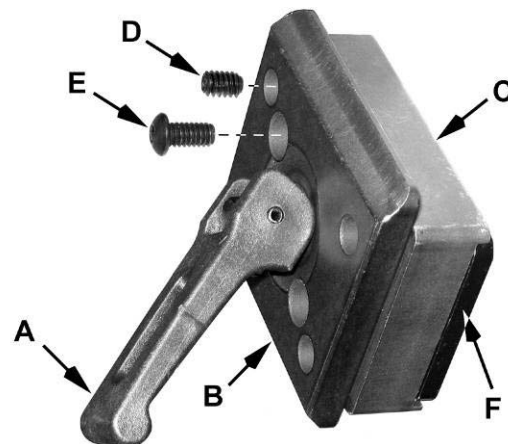


Figure 18

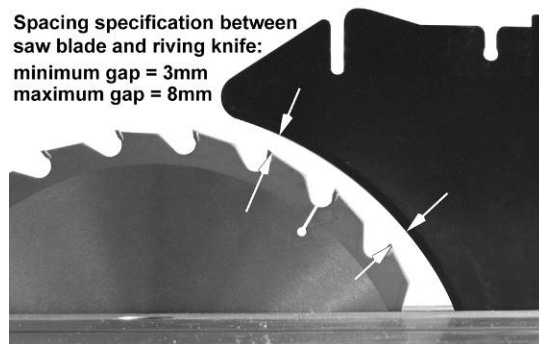


Figure 19

Referring to Figure 18:

2. With a 5mm hex wrench, loosen two *socket head button screws* (E).

Note: These screws are accessible through openings on the *floating clamp block* (B) located diagonally on either side of the *lock handle* (A). They secure the *fixed clamp block* (C) to the *living knife extension plate* (F).

Loosening these screws (E) will allow the *fixed clamp block* (C) to slide back and forth on the *extension plate* (F).

3. Slide the *fixed clamp block* (F) toward or away from the saw blade as required.
4. Tighten the *socket head button screws* (E).
5. Reinsert the *living knife*; tighten the *lock handle* (A, Figure 17) and check that the saw blade/knife gap is between 3 - 8mm (Figure 19).

Note: Attempt to make the gaps as even as possible.

Insert Adjustment

Adjust the setscrews in the insert with a 3mm hex wrench (Figure 20) to ensure that the insert is stable and flush with the table top.

Arbor and Arbor Bearing Removal

The saw arbor is *press fitted* in the saw raising arm housing. If the arbor needs to be removed for bearing replacement, it should be done by a qualified service technician. Call your customer service representative at the phone number on the front cover.

Operating Controls

Start/Stop

Power Indicator Light – The *start switch* has a power indicator lamp which is *on whenever there is power connected* to the saw, not just when the saw is running. *Do not assume that no light means there is no power to the machine.* If the bulb is bad, there will be no indication. Always check before use.

⚠WARNING Do not rely that no light means no power to the machine. Always check for power first. Failure to comply may cause serious injury!

Referring to Figure 21:

Start – Press the green start switch.

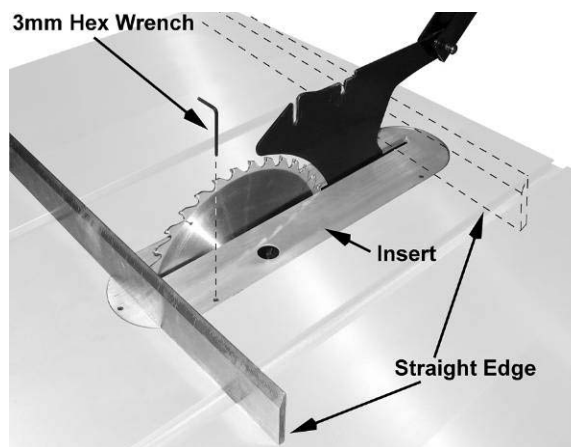


Figure 20

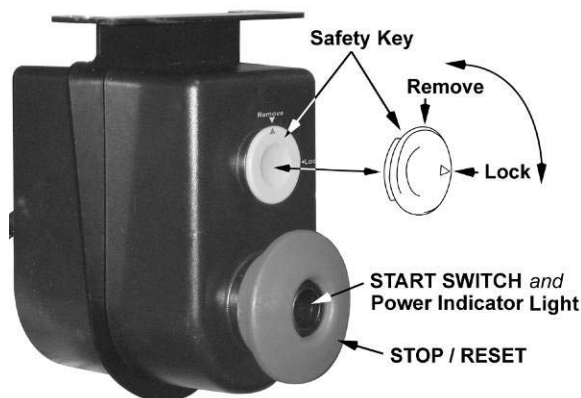


Figure 21

Stop – Press the red switch to stop.

Reset – In the event that the saw stops without pressing the stop button, as the result of a tripped fuse or circuit breaker, etc.:

1. Press red button to reset.
2. Press the green button to restart the machine.

Safety Key

The start/stop switch is equipped with a magnetic safety key. When in place on the switch as shown in Figure 21, the magnetic safety key trips a relay which will allow the machine to start and stop when the respective switches are pressed. Being magnetic, the lock can be removed to make the machine inoperable and can be hidden for safe storage by attaching it underneath the rail or another magnetic surface.

When using the saw, place the key on the switch cover lining up the arrow on the key with the REMOVE arrow on the cover. Then rotate the key so the arrow lines up with the LOCK arrow. This will prevent the safety key from coming loose from vibration when the machine is in use.

Operations

(NOTE: The following Figure illustrations may or may not show your specific table saw model, but the procedures are identical.)

Overview

Familiarize yourself with the location and operation of all controls and adjustments and the use of accessories such as the miter gauge and rip fence.

Kickback

Serious injury can result from kickbacks which occur when a work piece binds on the saw blade or binds between the saw blade and rip fence or other fixed object. This binding can cause the work piece to lift up and be thrown toward the operator.

Listed below are conditions, which can cause kickbacks:

- Confining the cutoff piece when crosscutting or ripping.
- Releasing the work piece before completing the operation or not pushing the work piece all the way past the saw blade.
- Not using the riving knife when ripping or not maintaining alignment of the riving knife with the saw blade.
- Using a dull saw blade.
- Not maintaining alignment of the rip fence so that it tends to angle toward rather than away from the saw blade front to back.
- Applying feed force when ripping to the cutoff (free) section of the work piece instead of the section between the saw blade and fence.
- Ripping wood that is twisted (not flat), or does not have a straight edge, or a twisted grain.

To minimize or prevent injury from kickbacks:

- Avoid conditions listed above.
- Wear a face shield, goggles, or glasses.
- Do not use the miter gauge and rip fence in the same operation unless provision is made by use of a facing board on the fence so as to allow the cutoff section of the workpiece to come free before the next cut is started (see Figure 29).
- As the machine receives use, the operation of the anti-kickback pawls should be checked periodically (Figure 22). If the pawls do not stop the reverse motion of a workpiece, sharpen all the points.
- Where possible, keep your face and body out of line with potential kickbacks including when starting or stopping the machine.

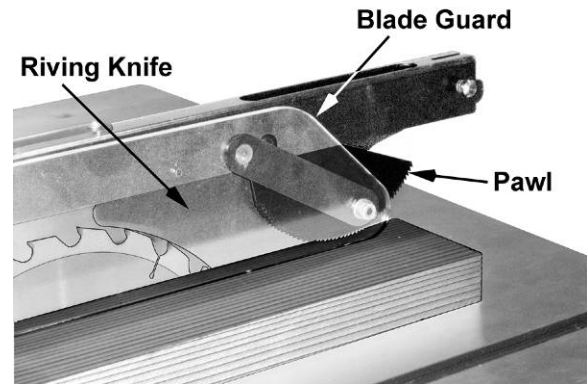


Figure 22

Dull, badly set, improper, or improperly filed cutting tools and cutting tools with gum or resin adhering to them can cause accidents. Never use a cracked saw blade. The use of a sharp, well maintained, and correct cutting tool for the operation will help to avoid injuries.

Support the work properly and hold it firmly against the gauge or fence. Use a push stick or push block when ripping short, narrow (6" width or less), or thin work. Use a push block or miter gauge holddown when dadoing or molding.

For increased safety in crosscutting, use the provided *extension plate* (Figure 23) attached to the *miter gauge* using the holes provided in the gauge.

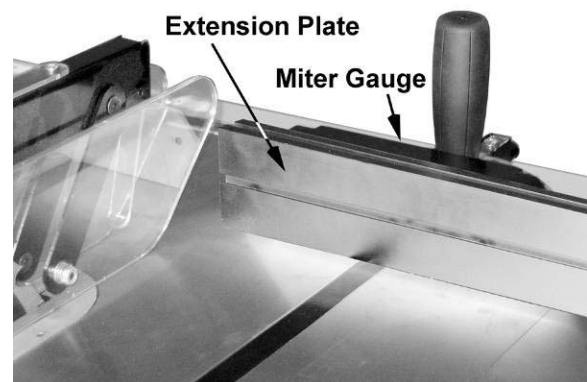


Figure 23

Never use the fence as a length stop when crosscutting. Do not hold or touch the free end or cutoff section of a workpiece. On through-sawing operations, the cutoff section must NOT be confined.

Always keep your hands out of the line of the saw blade and never reach back of the cutting blade with either hand to hold the workpiece.

Bevel ripping cuts should always be made with the fence on the right side of the saw blade so that the blade tilts away from the fence and minimizes the possibility of the work binding and the resulting kickback.

Rip Sawing

Ripping is where the work piece is fed with the grain into the saw blade using the fence as a guide and a positioning device to ensure the desired width of cut (Figure 24).



Figure 24

CAUTION Before starting a ripping cut, be sure the fence is clamped securely and aligned properly.

- Never rip freehand or use the miter gauge in combination with the fence.
- Never rip workpieces shorter than the saw blade diameter.
- Never reach behind the blade with either hand to hold down or remove the cutoff piece with the saw blade rotating.

Always use the blade guard, riving knife and anti-kickback pawls. Make sure the riving knife is properly aligned. When wood is cut along the grain, the kerf tends to close and bind on the blade and kickbacks can occur.

Note: A caution decal is installed on each guard to remind the operator of the dangers of improper machine operation.

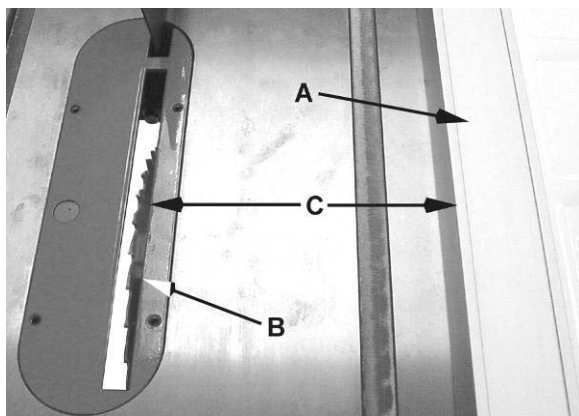


Figure 25

The rip fence (A, Fig. 25) should be set for the width of the cut (C, Fig. 25) by using the scale on the front rail, or by measuring the distance between the blade (B) and fence (A). Stand out

of line with the saw blade and workpiece to avoid sawdust and splinters coming off the blade or a kickback, if one should occur.

If the work piece does not have a straight edge, attach an auxiliary straight edged board on it to provide one against the fence. To cut properly, the board must make good contact with the table.

In ripping, use one hand to hold the board down against the fence or fixture, and the other to push it into the blade between the blade and the fence. If the workpiece is narrower than 6" or shorter than 12", use a push stick or push block to push it through between the fence and saw blade (Figure 26). Never push in a location such that the pushing hand is in line with the blade. Move the hand serving as a hold-down a safe distance from the blade as the cut nears completion. For very narrow ripping where a push stick cannot be used, use a push block or auxiliary fence. Always push the workpiece completely past the blade at the end of a cut to minimize the possibility of a kickback.

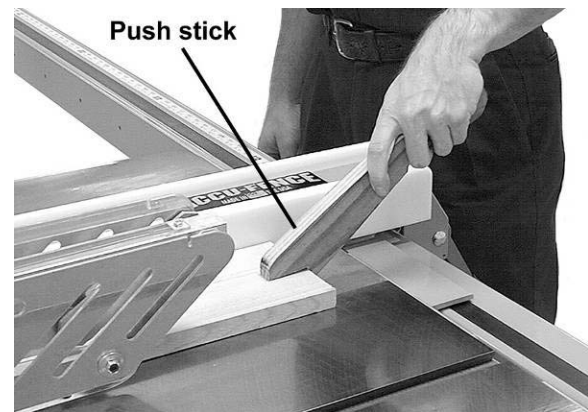


Figure 26

When ripping long boards, use a support at the front of the table, such as a roller stand, and a support or "tailman" at the rear as shown in Figure 27.

Never use the rip fence beyond the point where the carriage is flush with the end of the rails.

Have the blade extend about 1/8" above the top of the workpiece. Exposing the blade above this point can be hazardous.

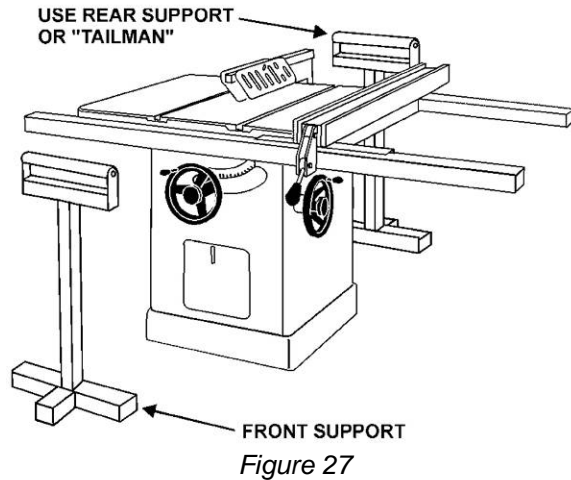


Figure 27

Crosscutting

Crosscutting is where the workpiece is fed cross grain into the saw blade using the miter gauge to support and position the workpiece (Figure 28).

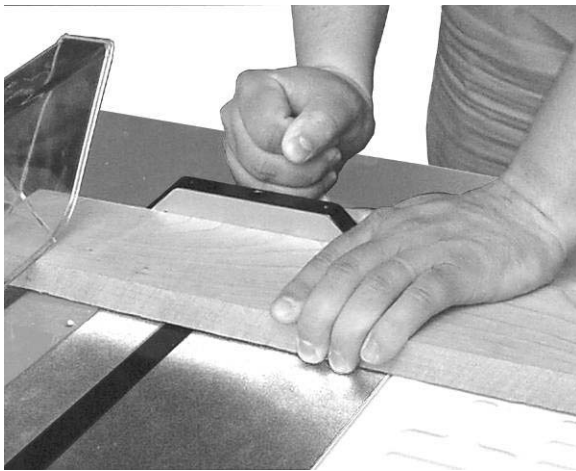


Figure 28

Crosscutting should **never** be done freehand nor should the fence be used as an end stop unless an auxiliary block is clamped to the front of the blade area such that the cutoff piece comes free of the block before cutting starts (Figure 29).

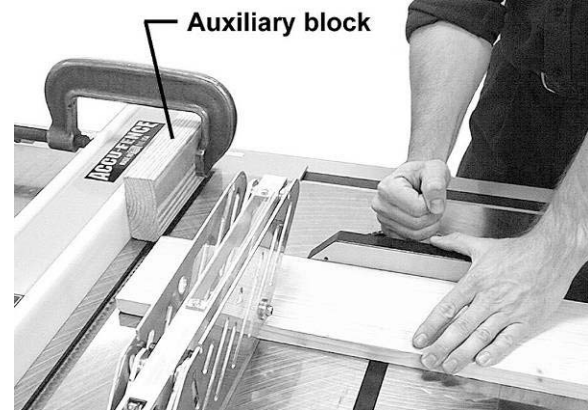


Figure 29

Length stops should not be used on the free end of the workpiece in the cutoff area.

Do **not** crosscut workpieces shorter than 6". Before starting a cut, be sure the miter gauge is securely clamped at the desired angle. Hold the workpiece firmly against the table and back against the miter gauge. **Always** use the saw guard and riving knife and make sure the riving knife is properly aligned.

For 90 degree crosscutting, most operators prefer to use the left-hand miter gauge slot. When using it in this position, hold the workpiece against the gauge with the left hand and use the right hand to advance the workpiece. When using the right hand slot for miter and compound crosscutting so that the blade tilts **away** from the gauge, the hand positions are reversed.

When using the miter gauge, the workpiece must be held firmly and advanced smoothly at a slow rate. If the workpiece is not held firmly, it can vibrate causing it to bind on the blade and dull the saw teeth.

Bevel and Miter Operations

Bevel Cut – A bevel cut is a special type of operation where the saw blade is tilted at an angle less than 90 degrees to the table top (Figure 30). Operations are performed in the same manner as ripping or crosscutting except the fence or miter gauge should be used on the right-hand side of the saw blade to provide added safety in avoiding a binding action between the saw blade and the table top. When beveling with the miter gauge, the workpiece must be held firmly to prevent creeping.

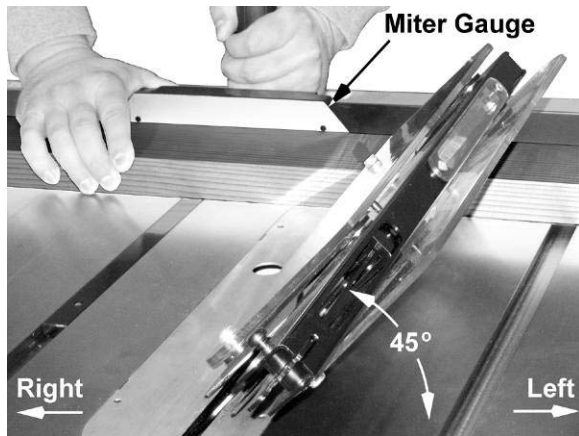


Figure 30

Crosscut – Crosscuts made at an angle to the edge of the workpiece are called miters (Figure 31). Set the miter gauge at the required angle, lock the miter gauge, and make the cut the same as a normal crosscut except the workpiece must be held extra firmly to prevent creeping.

Note: When making compound miters (with blade tilted) use the miter gauge in the **right** hand slot to provide more hand clearance and safety.

Have the blade extend only 1/8" above the top of the workpiece. Exposing the blade above this point can be hazardous.

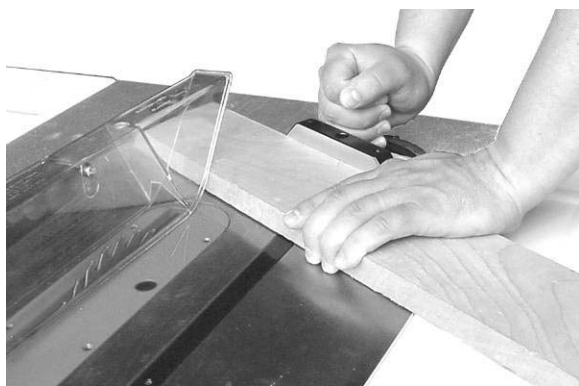


Figure 31

Dado Cutting – Dadoing is cutting a wide groove into a workpiece or cutting a rabbet along the edge of a workpiece. A dado insert, shown in Figure 32, is necessary for this type of operation. [A dado insert for the PM3000, stock no. 1791081, is available from your Powermatic dealer.]

CAUTION Do not use the standard table insert for dadoing operations.

Dado Insert



Figure 32

The process of cutting 1/8" to 13/16" grooves in workpieces is accomplished by the use of a stacked dado blade set or an adjustable type blade mounted on the saw arbor. By using various combinations of the stacked dado blades, or properly setting the dial on an adjustable blade, an accurate width dado can be made. This is very useful for shelving, making joints, tenoning, etc.

The guard, riving knife, and anti-kickback pawls supplied with the saw should be used for all cutting operations where they can be used. When performing operations where the guard can not be used, as in some dadoing operations, alternative safety precautions should be taken. These include push sticks, feather boards, filler pieces, fixtures, jigs and any other appropriate device that can be utilized to keep operator's hands away from the blade.

Upon completion of the operation requiring removal of the guard, the entire guard assembly must be placed back on the machine in its proper working order.

CAUTION Never use a dado head in a tilted position. Never operate the saw without the blade guard, riving knife and anti-kickback pawls for operations where they can be used.

Safety Devices

Feather Board and Push Blocks

A push stick is included with the PM3000 table saw. In addition, a multitude of after market products are available that can be used in conjunction with the miter slot and fence, including feather boards and push blocks. These can be purchased at most woodworking stores that sell table saws and accessories.

Push Stick

The use of a push stick provides an added level of safety for the operator and is provided with this machine.

Filler Piece

A filler piece (Figure 33) is necessary for narrow ripping and permits the blade guard to remain on the machine. It also provides space for the safe use of a push stick.

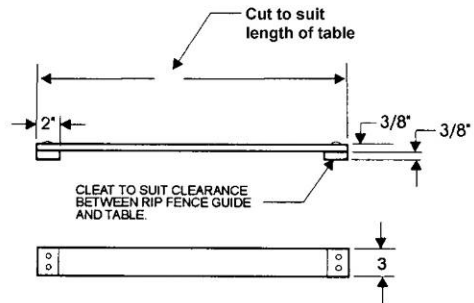
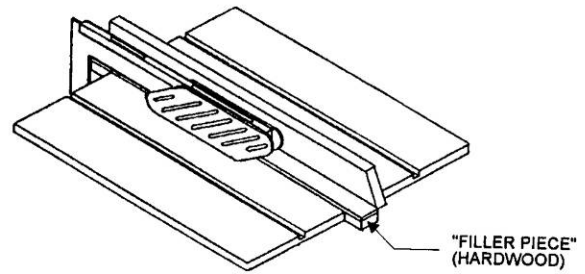


Figure 33 – Filler Piece

Maintenance

⚠WARNING Always disconnect power to the machine before performing maintenance. Failure to do this may result in serious personal injury.

Cleaning

Note: The following maintenance schedule assumes the saw is being used every day.

Daily:

- Wipe down the table surface and grooves with a rust preventive.
- Clean the pitch and resin from the saw blade.

Weekly:

- Table surface must be kept clean and free of rust for best results. Apply a coat of paste wax to the surface to facilitate this. An alternative is to apply white talcum powder, rubbed in vigorously once a week with a blackboard eraser; this will fill casting pores and form a moisture barrier. This method provides a table top that is slick and allows rust rings to be easily wiped from the surface. Important also is the fact that talcum powder will not stain wood or mar finishes as wax pickup does.
- Clean the motor housing with compressed air.
- Wipe down the fence rails with a dry silicon lubricant.

Periodic:

- Keep the inside of the cabinet and trunnion area clean.
- Check for excessive play in the tilting and raising mechanism and in the saw arbor and re-adjust as required.
- Check for belt tension and wear. Readjust or replace belt as required.

Lubrication

- Grease the tilting worm gear, raising worm gear, castor system worm gear and the trunnion areas with a good grade non-hardening grease.
- Check all adjustments after lubricating.

Miscellaneous

Always be aware of the condition of your machine. Routinely check the condition of the following items and repair or replace as necessary:

- Mounting bolts
- Power switch
- Saw blade
- Blade guard assembly

Optional Accessories

PM3000-282A ... 460V magnetic switch

1791080..... Zero clearance insert, PM3000

1791081..... Dado insert, PM3000

Troubleshooting

Trouble	Probable Cause	Remedy
Excessive vibration.	Tilt or raising clamp knobs not tightened.	Tighten knobs.
	Blade out of balance.	Change blade. [page 10]
	Bad motor.	Replace motor.
	Loose arbor or motor sheave.	Tighten set screws.
Cuts out-of-square when crosscutting.	Miter gauge out of adjustment.	Reset pointer. [page 15-16]
	Miter slot misaligned.	Realign table. [page 14]
Motor stalls or workpiece binds or burns.	Excessive feed.	Reduce feed.
	Bad motor.	Replace motor.
	Dull or incorrect blade.	Replace blade. [page 10]
	Miter slot misaligned.	Realign miter slot. [page 14]
	Fence misalignment.	Realign fence. [see <i>Fence Manual</i> No. M-2195079Z]
Cuts not true at 90 or 45 degrees.	Stop screws not set properly.	Readjust stop screws. [page 15]
Tilt or saw raising handwheels difficult to turn.	Lock knob not released.	Loosen lock knob.
	Worm and worm gear segment caked with sawdust and pitch.	Clean and re-grease.
	Worm and worm gear segment out of alignment.	Realign worm and worm gear segment.
Motor overheats.	Motor overloaded.	Correct overload condition such as reducing the feed rate.
	Improper cooling of motor.	Clean sawdust from fan and duct areas of motor.
Motor starts slowly or fails to come up to speed.	Low voltage.	Request voltage check from power company and correct low voltage condition.
	Centrifugal switch not operating.	Replace switch.
	Bad motor.	Replace motor.
Motor fails to develop full power.	Power line overloaded.	Correct overload condition.
	Undersize wires in supply system.	Increase supply wire size.
	Low voltage.	Request voltage check from power company and correct condition.
	Bad motor.	Replace motor.

Replacement Parts

To order parts or reach our service department, call 1-800-274-6848, Monday through Friday (see our website for business hours, www.powermatic.com). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Table & Cabinet Assembly


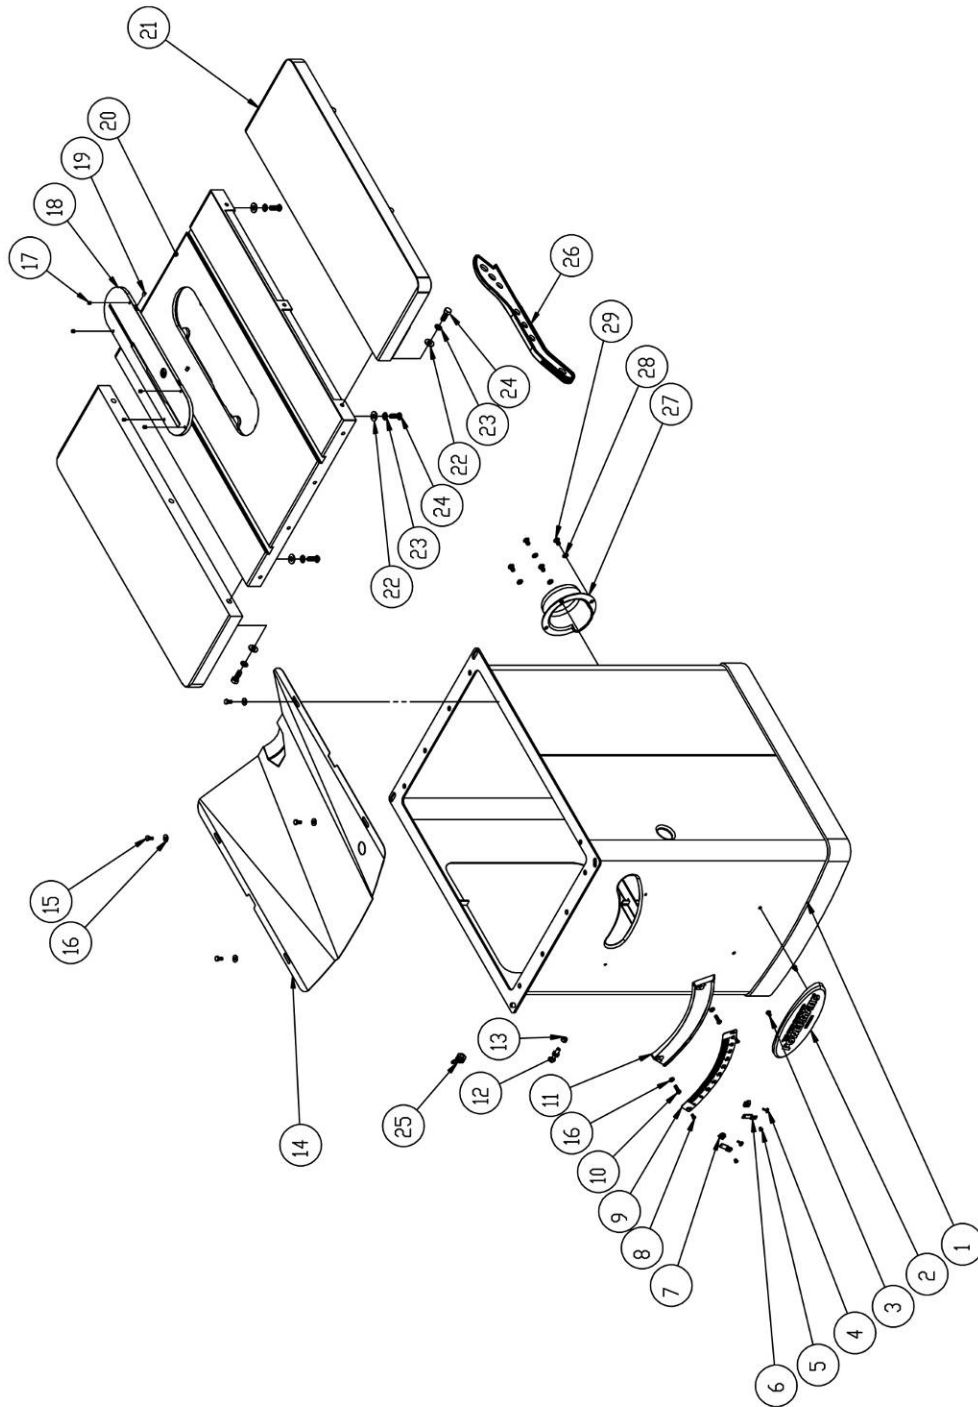


Table & Cabinet Assembly Parts List

Index No.	Part No.	Description	Size	Qty
1	PM3000-101	Cabinet		1
2	PM2000-105	Powermatic Name Plate		1
3	TS-0254011	Button Head Socket Screw	1/4-20x3/8	2
4	PM2000-107	Lock Screw		2
5	TS-081C011	Flat Head Machine Screw	#10-24x1/4	2
6	PM2000-109	Pointer		2
7	PM2000-110	Pointer Block		2
8	TS-081C032	Pan Head Screw	#10-24x1/2	2
9	PM2000-112	Tilt Angle Scale		1
10	TS-0254021	Button Head Socket Screw	1/4-20x1/2	2
11	PM2000-114	Scale Base		1
12	PM2000-115	Latch Post		1
13	TS-0561021	Hex Nut	5/16-18	1
14	PM3000-114	Dust Plate		1
15	TS-0050011	Hex Cap Screw	1/4-20x1/2	4
16	TS-0680021	Flat Washer	1/4	6
17	TS-0267021	Set Screw	1/4-20x1/4	5
18	PM3000-118	Table Insert		1
19	PM2000-124	Ball Plunger		2
20	PM3000-120	Table		1
21	PM3000-121	Extension Table		2
22	TS-0680041	Flat Washer	3/8	10
23	TS-0720091	Lock Washer	3/8	10
24	TS-0060051	Hex Cap Screw	3/8-16x1	10
25	PM2000-130A	Strain Relief (for 5HP / 1Ph)		1
	PM2000-130	Strain Relief (for 7-1/2HP / 3Ph)		1
26	PM2000-135	Push Stick		1
27	PM2000-132	Dust Chute		1
28	TS-0720081	Lock Washer	5/16	4
29	TS-0255021	Button Head Socket Screw	5/16-18x1/2	4

Trunnion & Motor Assembly

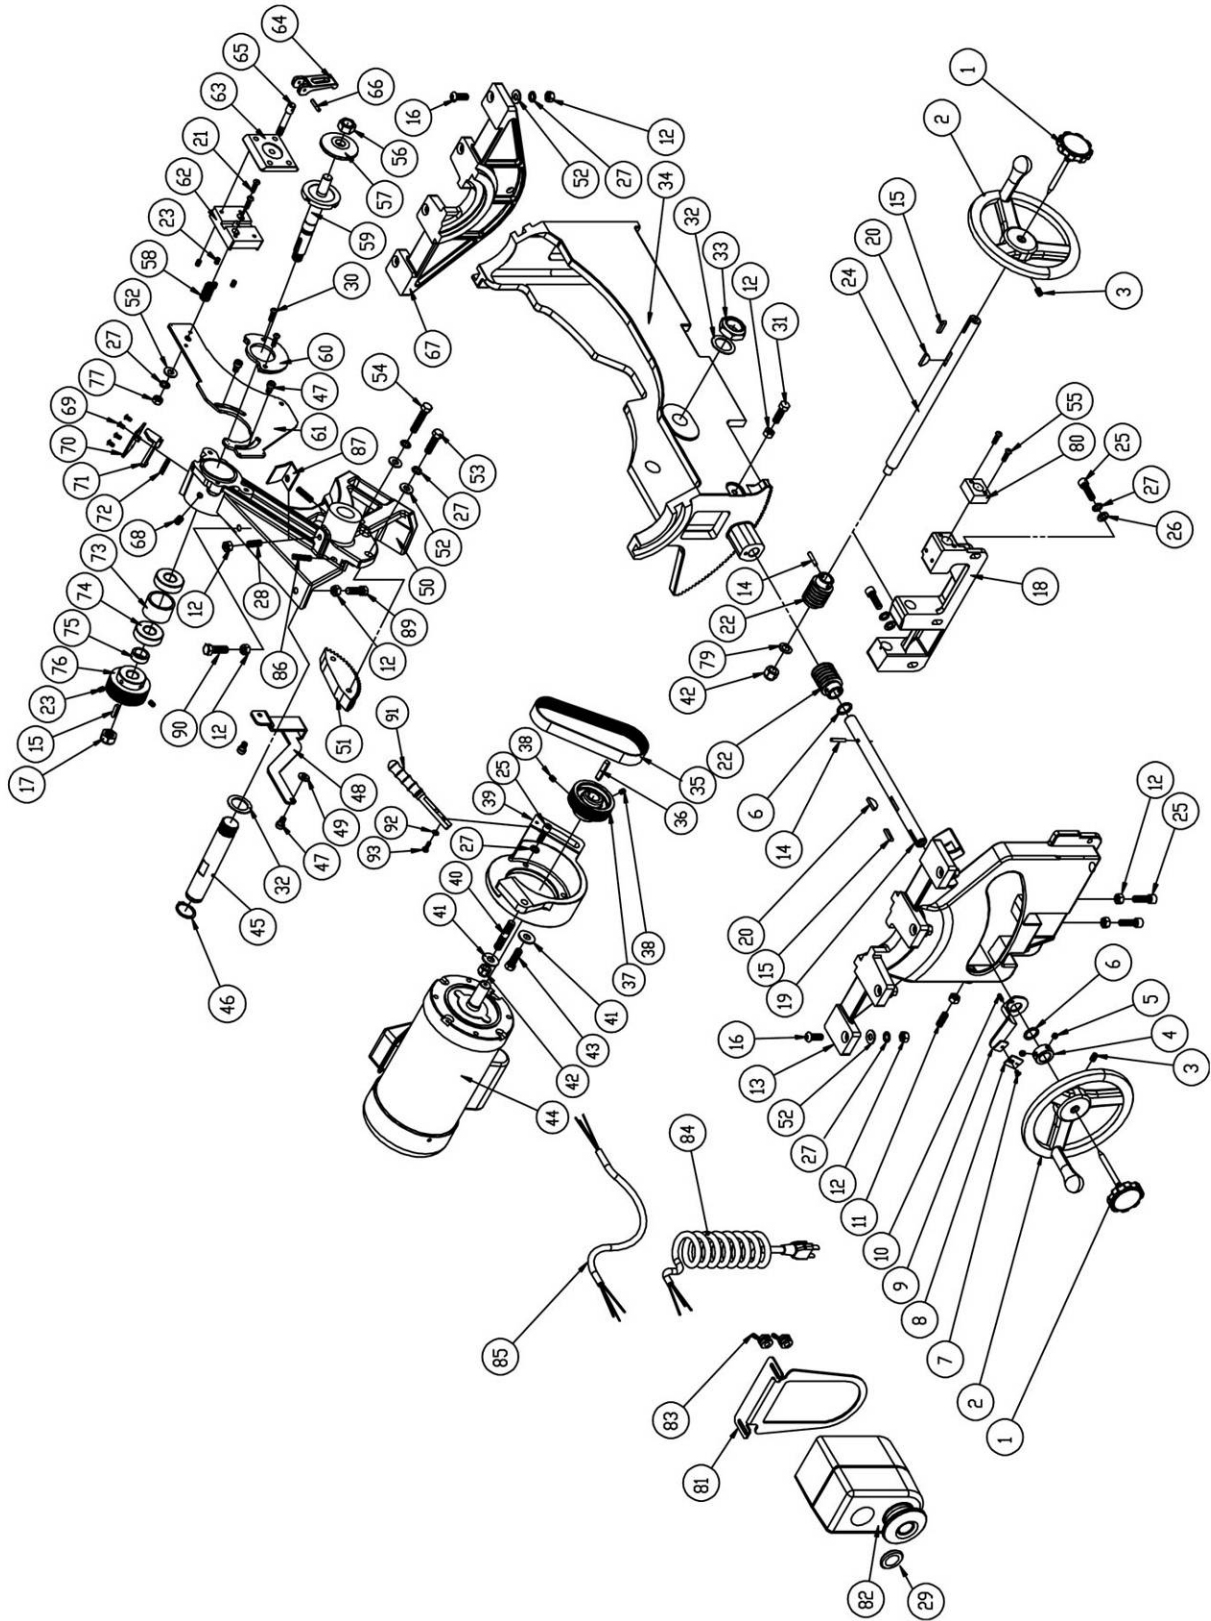


Trunnion & Motor Assembly Parts List

Index No.	Part No.	Description	Size	Qty
1	PM2000-201	Knob		2
2	PM2000-202	Hand Wheel		2
3	TS-0270051	Set Screw	5/16-18x1/2	2
4	PM2000-204	Collar		1
5	TS-0270011	Set Screw	5/16-18x1/4	2
6	PM2000-206	Washer		1
7	TS-0810012	Round Head Screw	#10-24x1/4	1
8	PM2000-208	Pointer		1
9	PM2000-209	Bracket		1
10	PM2000-210	Roll Pin		1
11	TS-0271131	Set Screw	3/8-16x2	1
12	TS-0561031	Hex Nut	3/8-16	15
13	PM2000-213	Front Trunnion		1
14	PM2000-222	Roll Pin		2
15	PM2000-215	Key	5x5x25	3
16	TS-0256051	Button Head Socket Screw	3/8-16x1	8
17	PM2000-218	Lock Nut	5/8-18 L.H.	1
18	PM3000-218	Support Base		1
19	PM3000-219	Raising Shaft		1
20	PM2000-221	Woodruff Key		2
21	TS-0254021	Button Head Socket Screw	1/4-20x1/2	2
22	PM2000-224	Worm		2
23	TS-0267041	Set Screw	1/4-20x3/8	6
24	PM3000-224	Shaft		1
25	TS-0209061	Socket Head Cap Screw	3/8-16x1-1/4	9
26	TS-0680041	Flat Washer	3/8	3
27	TS-0720091	Lock Washer	3/8	18
28	TS-0271011	Set Screw	3/8-16x1-1/4	1
29	PM2000-298	Safety Key for Magnetic Switch		1
30	TS-081F051	Flat Head Machine Screw	1/4-20x3/4	2
31	TS-0060061	Hex Cap Screw	3/8-16x1-1/4	1
32	PM2000-236	Washer		2
33	PM2000-237	Lock Nut	1-1/8-12	1
34	PM3000-234	Center Trunnion		1
35	PM3000-235	Poly-V Belt		1
36	PM2000-240	Key	7x7x25	1
37	PM2000-241	Motor Pulley		1
38	TS-0270031	Set Screw	5/16-18x3/8	2
39	PM2000-243	Motor Base		1
40	PM2000-244	Stud		1
41	TS-0680061	Flat Washer	1/2	2
42	TS-0640111	Nylon Insert Lock Nut	1/2-13	2
43	TS-0070031	Hex Cap Screw	1/2-13x1-1/2	1
44	PM3000-244	Motor	5HP, 230V, 1Ph	1
	PM3000-MF	Motor Fan (not shown)		1
	PM3000-MFCA	Motor Fan Cover (not shown)		1
	PM2000-CSA	Centrifugal Switch (not shown)		1
	PM3000-SCA	Starting Capacitor (not shown)	250MFD, 250VAC	1
	PM2000-RCA	Running Capacitor (not shown)	35µF, 450VAC	1
	PM2000-SCCA	Starting Capacitor Cover (not shown)		1
	PM3000-JBA	Junction Box (not shown)		1
	PM3000-JBC	Junction Box Cover (not shown)		1
	PM3000-244A	Motor	7-1/2HP, 230/460V, 3Ph	1
	PM3000-MFA	Motor Fan (not shown)		1
	PM3000-MFCA	Motor Fan Cover (not shown)		1
	PM2000-JB	Junction Box (not shown)		1
	PM2000-JBC	Junction Box Cover (not shown)		1



Index No.	Part No.	Description	Size	Qty
45	PM2000-245	Shaft		1
46	PM2000-250	Retaining Ring		1
47	PM2000-251	Shoulder Screw		4
48	PM3000-248	Extension Support Bracket		1
49	TS-0680031	Flat Washer	5/16	2
50	PM3000-250	Bearing Arm		1
51	PM2000-255	Gear Block		1
52	TS-0680041	Flat Washer	3/8	3
53	TS-0060071	Hex Cap Screw	3/8-16x1-1/2	1
54	TS-0060091	Hex Cap Screw	3/8-16x2	1
55	PM2000-405	Button Head Socket Screw	1/4-20x1-1/4	1
56	PM3000-256	Arbor Nut		1
57	PM3000-257	Arbor Collar		1
58	PM2000-263	Spring		1
59	PM3000-259	Arbor		1
	PM3000-AA	Arbor Assembly (Index #56, #57, #59, #73 thru #75)		
60	PM3000-260	Fixed Plate		1
61	PM3000-261	Riving Knife Extension Plate		1
62	PM2000-267	Clamping Block		1
63	PM2000-268	Clamping Block		1
64	PM2000-269	Lock Handle		1
65	PM2000-270	Locking Pin		1
66	PM2000-271	Roll Pin		1
67	PM2000-272	Rear Trunnion		1
68	TS-0271031	Set Screw	3/8-16x3/8	1
69	TS-081C032	Pan Head Screw	#10-24x1/2	4
70	PM2000-275	Plate		1
71	PM3000-271	Arbor Lock Insert		1
72	PM2000-277	Spring		1
73	PM3000-273	Bushing		1
74	BB-6205VV	Ball Bearing	6205VV	2
75	PM3000-275	Bushing		1
76	PM3000-276	Arbor Pulley		1
77	TS-0640091	Nylon Insert Lock Nut	3/8-16	1
79	PM2000-286	Washer		1
80	PM3000-280	Block		1
81	PM2000-292	Switch Plate		1
82	PM2000-293A	Magnetic Switch	5HP, 230V, 1Ph	1
	PM3000-282	Magnetic Switch	7-1/2HP, 230V, 3Ph	1
	PM3000-282A	Magnetic Switch	7-1/2HP, 460V, 3Ph	1
83	PM2000-294A	Strain Relief (for 5HP/1Ph)		2
	PM2000-294	Strain Relief (for 7-1/2HP/3Ph)		2
84	PM2000-295A	Power Cord (for 5HP/1Ph)		1
	PM2000-295B	Power Cord (for 7-1/2HP/3Ph)		1
85	PM2000-296A	Motor Cord (for 5HP/1Ph)		1
	PM2000-296B	Motor Cord (for 7-1/2HP/3Ph)		1
86	TS-0270101	Set Screw	5/16-18x1-1/4	2
87	PM3000-287	Dust Shield		1
88	477460	Combination Wrench (not shown)	32mm	1
89	TS-0060111	Hex Cap Screw	3/8-16x1-1/2	1
90	TS-0060091	Hex Cap Screw	3/8-16x2	1
91	PM3000-291	Handle		1
92	TS-0720071	Lock Washer	1/4	2
93	TS-0207041	Socket Head Cap Screw	1/4-20x3/4	2

Motor Cover Assembly

Index No.	Part No.	Description	Size	Qty
.....	6827044	PM2000 Motor Cover Assembly (Index #1 thru #9)		1
1.....	PM2000-401	Cover		1
2.....	PM2000-402	Hinge Pin		2
3.....	PM2000-403	Bracket		1
4.....	PM2000-404	Latch Clip		1
5.....	PM2000-405	Button Head Socket Screw	1/4-20x1-1/4	1
6.....	TS-0640071	Nylon Insert Lock Nut	1/4-20	1
7.....	TS-081C032	Pan Head Screw	#10-24x1/2	1
8.....	TS-069204	Flat Washer	#10	1
9.....	TS-0560071	Hex Nut	#10-24	1

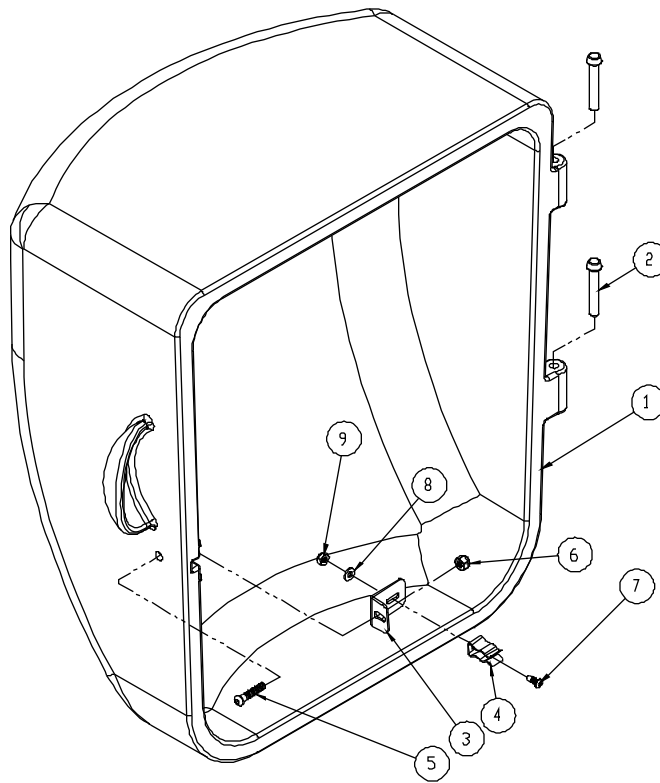

Blade Guard & Miter Gauge Assembly

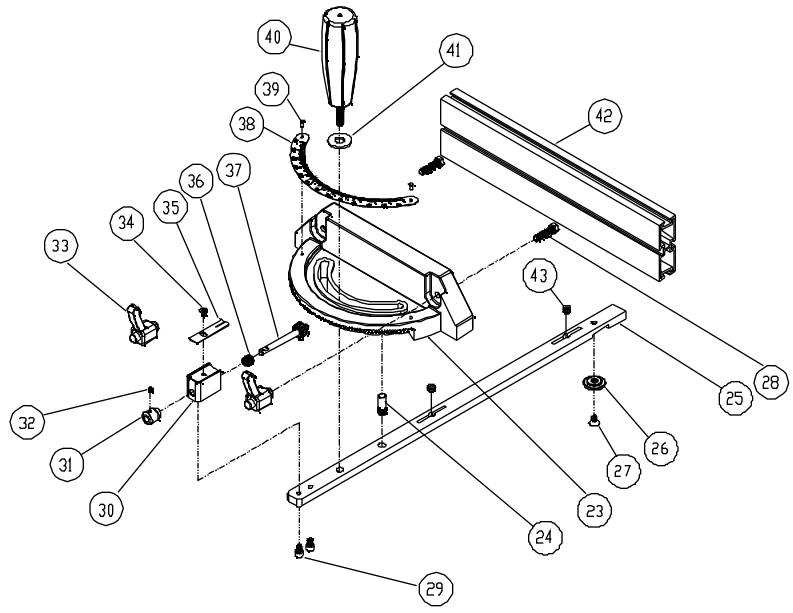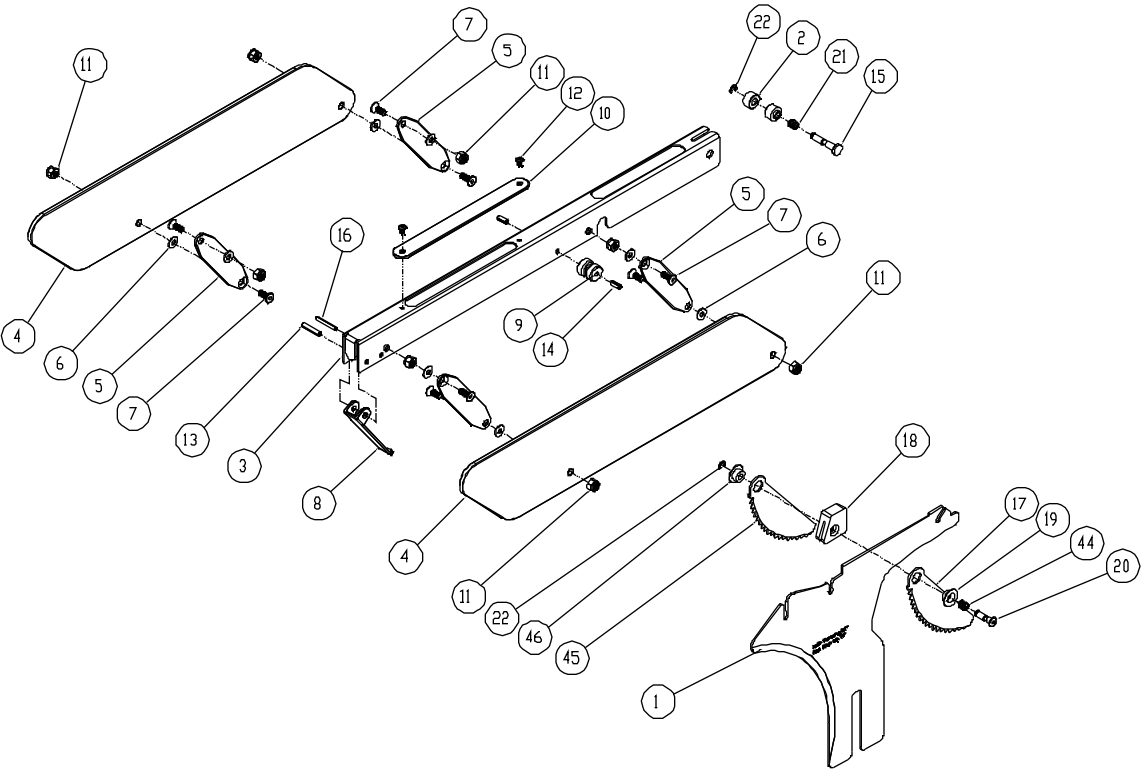


Blade Guard & Miter Gauge Assembly Parts List

Index No.	Part No.	Description	Size	Qty
1	PM3000-301	Riving Knife		1
	PM3000-BGA	Blade Guard Assembly (Index #2 thru 16, 21, 22)		1
2	PM2000-302	Bushing		2
3	PM3000-303	Blade Guard Body		1
4	PM3000-304	Blade Guard Side Shield		2
5	PM3000-305	Linking Plate		4
6	TS-1550041	Flat Washer	M6	8
7	TS-1514021	Flat Head Socket Screw	M6x16	8
8	PM3000-308	Front Shield		1
9	PM2000-309	Bushing		1
10	PM2000-310	Top Sight Shield		1
11	TS-1541021	Nylon Insert Lock Nut	M6	8
12	TS-081B012	Pan Head Screw	#8-32x1/4	2
13	PM2000-313	Roll Pin	5x25	1
14	PM2000-314	Roll Pin	5x12	2
15	PM2000-315	Lock Pin		1
16	PM2000-316	Roll Pin	4x30	1
	PM3000-AKPA	Anti-Kickback Pawl Assembly (Index #17 thru 20, 22, 44, 45, 46)		1
17	PM3000-317	Right Anti-Kickback Pawl		1
18	PM2000-318	Pawl Base		1
19	PM2000-319	Right Flange		1
20	PM2000-320	Lock Pin		1
21	PM2000-321	Spring		1
22	PM2000-322	E-Clip		2
	1791789	Miter Gauge Assembly (Index #23 thru 43)		1
23	PM2000-323	Miter Gauge Body		1
24	PM2000-324	Pin		1
25	PM2000-325	Miter Bar		1
26	PM2000-326	Guide Washer		1
27	PM2000-327	Flat Head Machine Screw	M6x9	1
28	TS-0050051	Hex Cap Screw	1/4-20x1	2
29	PM2000-329	Socket Head Cap Screw	M5x8	2
30	PM2000-330	Support Base		1
31	PM2000-331	Knob		1
32	TS-1521011	Set Screw	M4x4	1
33	PM2000-333	Locking Handle		2
34	TS-0810012	Round Head Screw	#10-24x1/4	1
35	PM2000-335	Pointer		1
36	PM2000-336	Spring		1
37	PM2000-337	Gear Shaft		1
38	PM2000-338	Scale		1
39	PM2000-339	Rivet		2
40	PM2000-340	Handle		1
41	TS-0680031	Flat Washer	5/16	1
42	PM2000-342	Fence		1
43	PM2000-343	Set Screw	M8x6	2
44	PM3000-344	Spring		1
45	PM3000-345	Left Anti-Kickback Pawl		1
46	PM2000-345	Left Flange		1

Electrical Connections – 7.5HP 3PH 230V

Magnetic Switch


Electrical Board

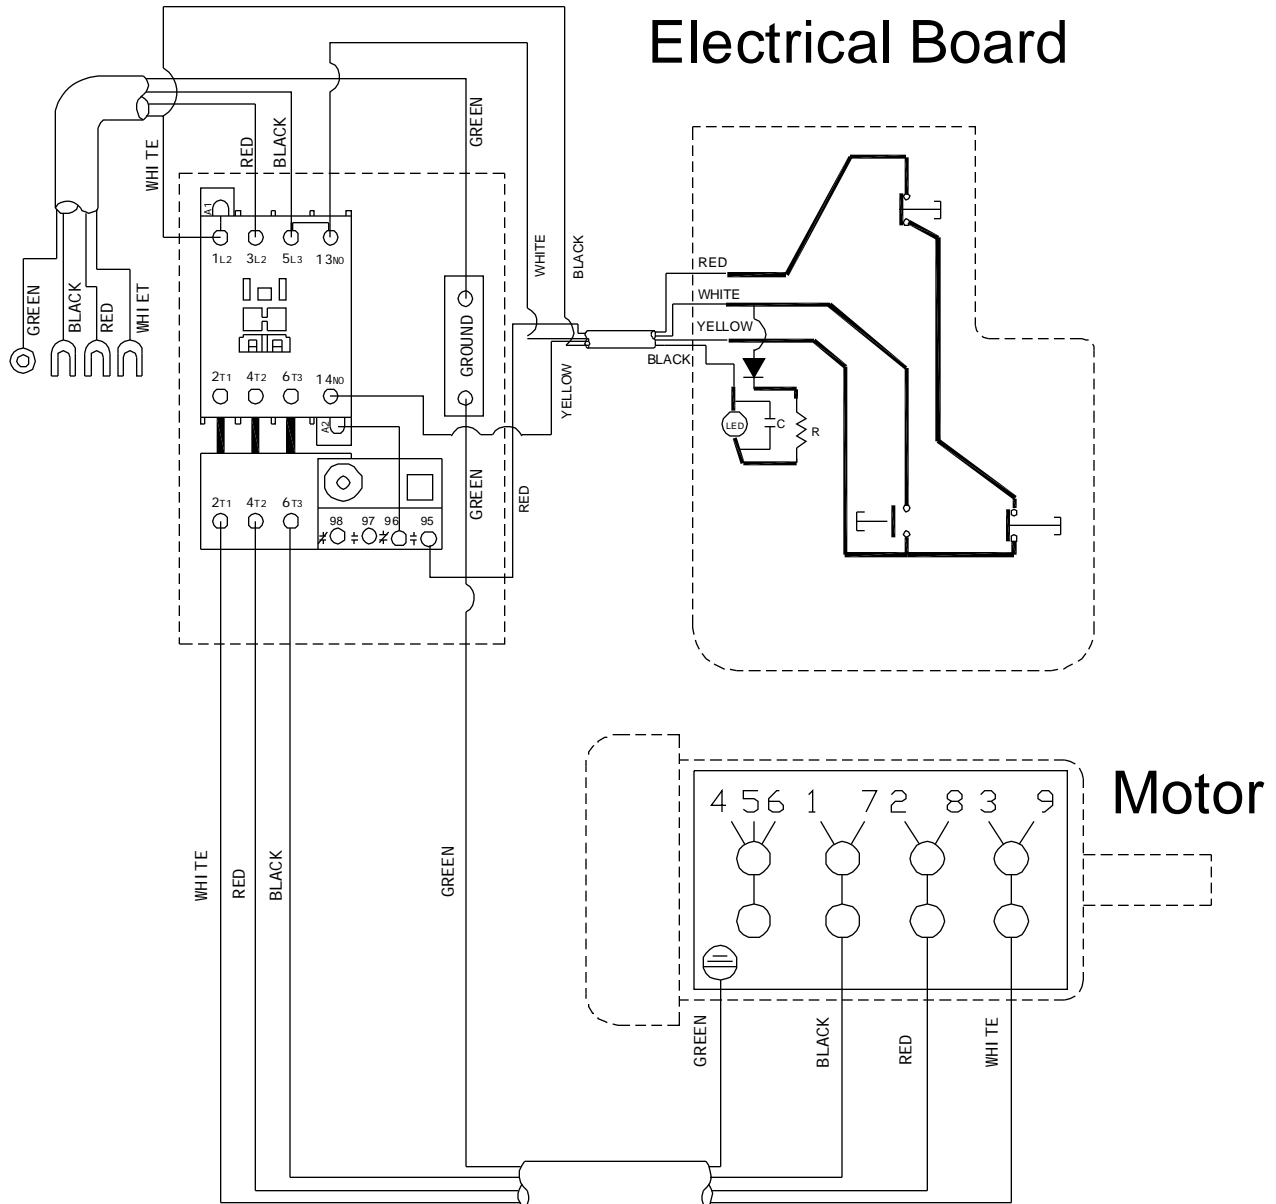

Electrical Connections – 7.5HP 3PH 460V

Magnetic Switch

Electrical Board

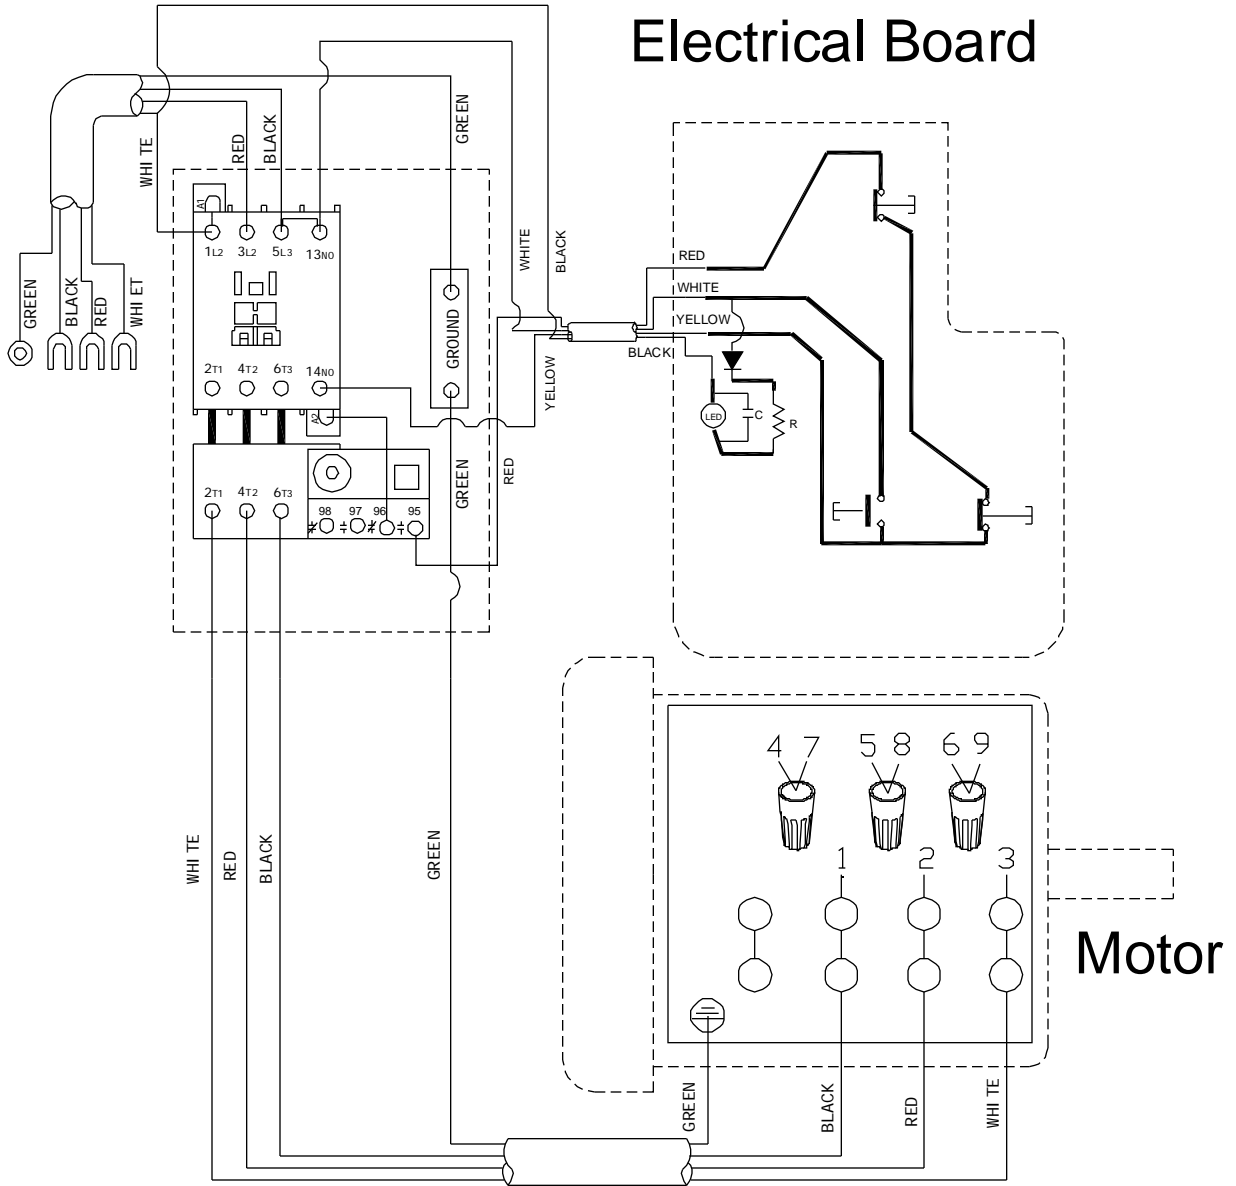



WALTER MEIER (Manufacturing) Inc.

427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.powermatic.com
www.waltermeier.com