


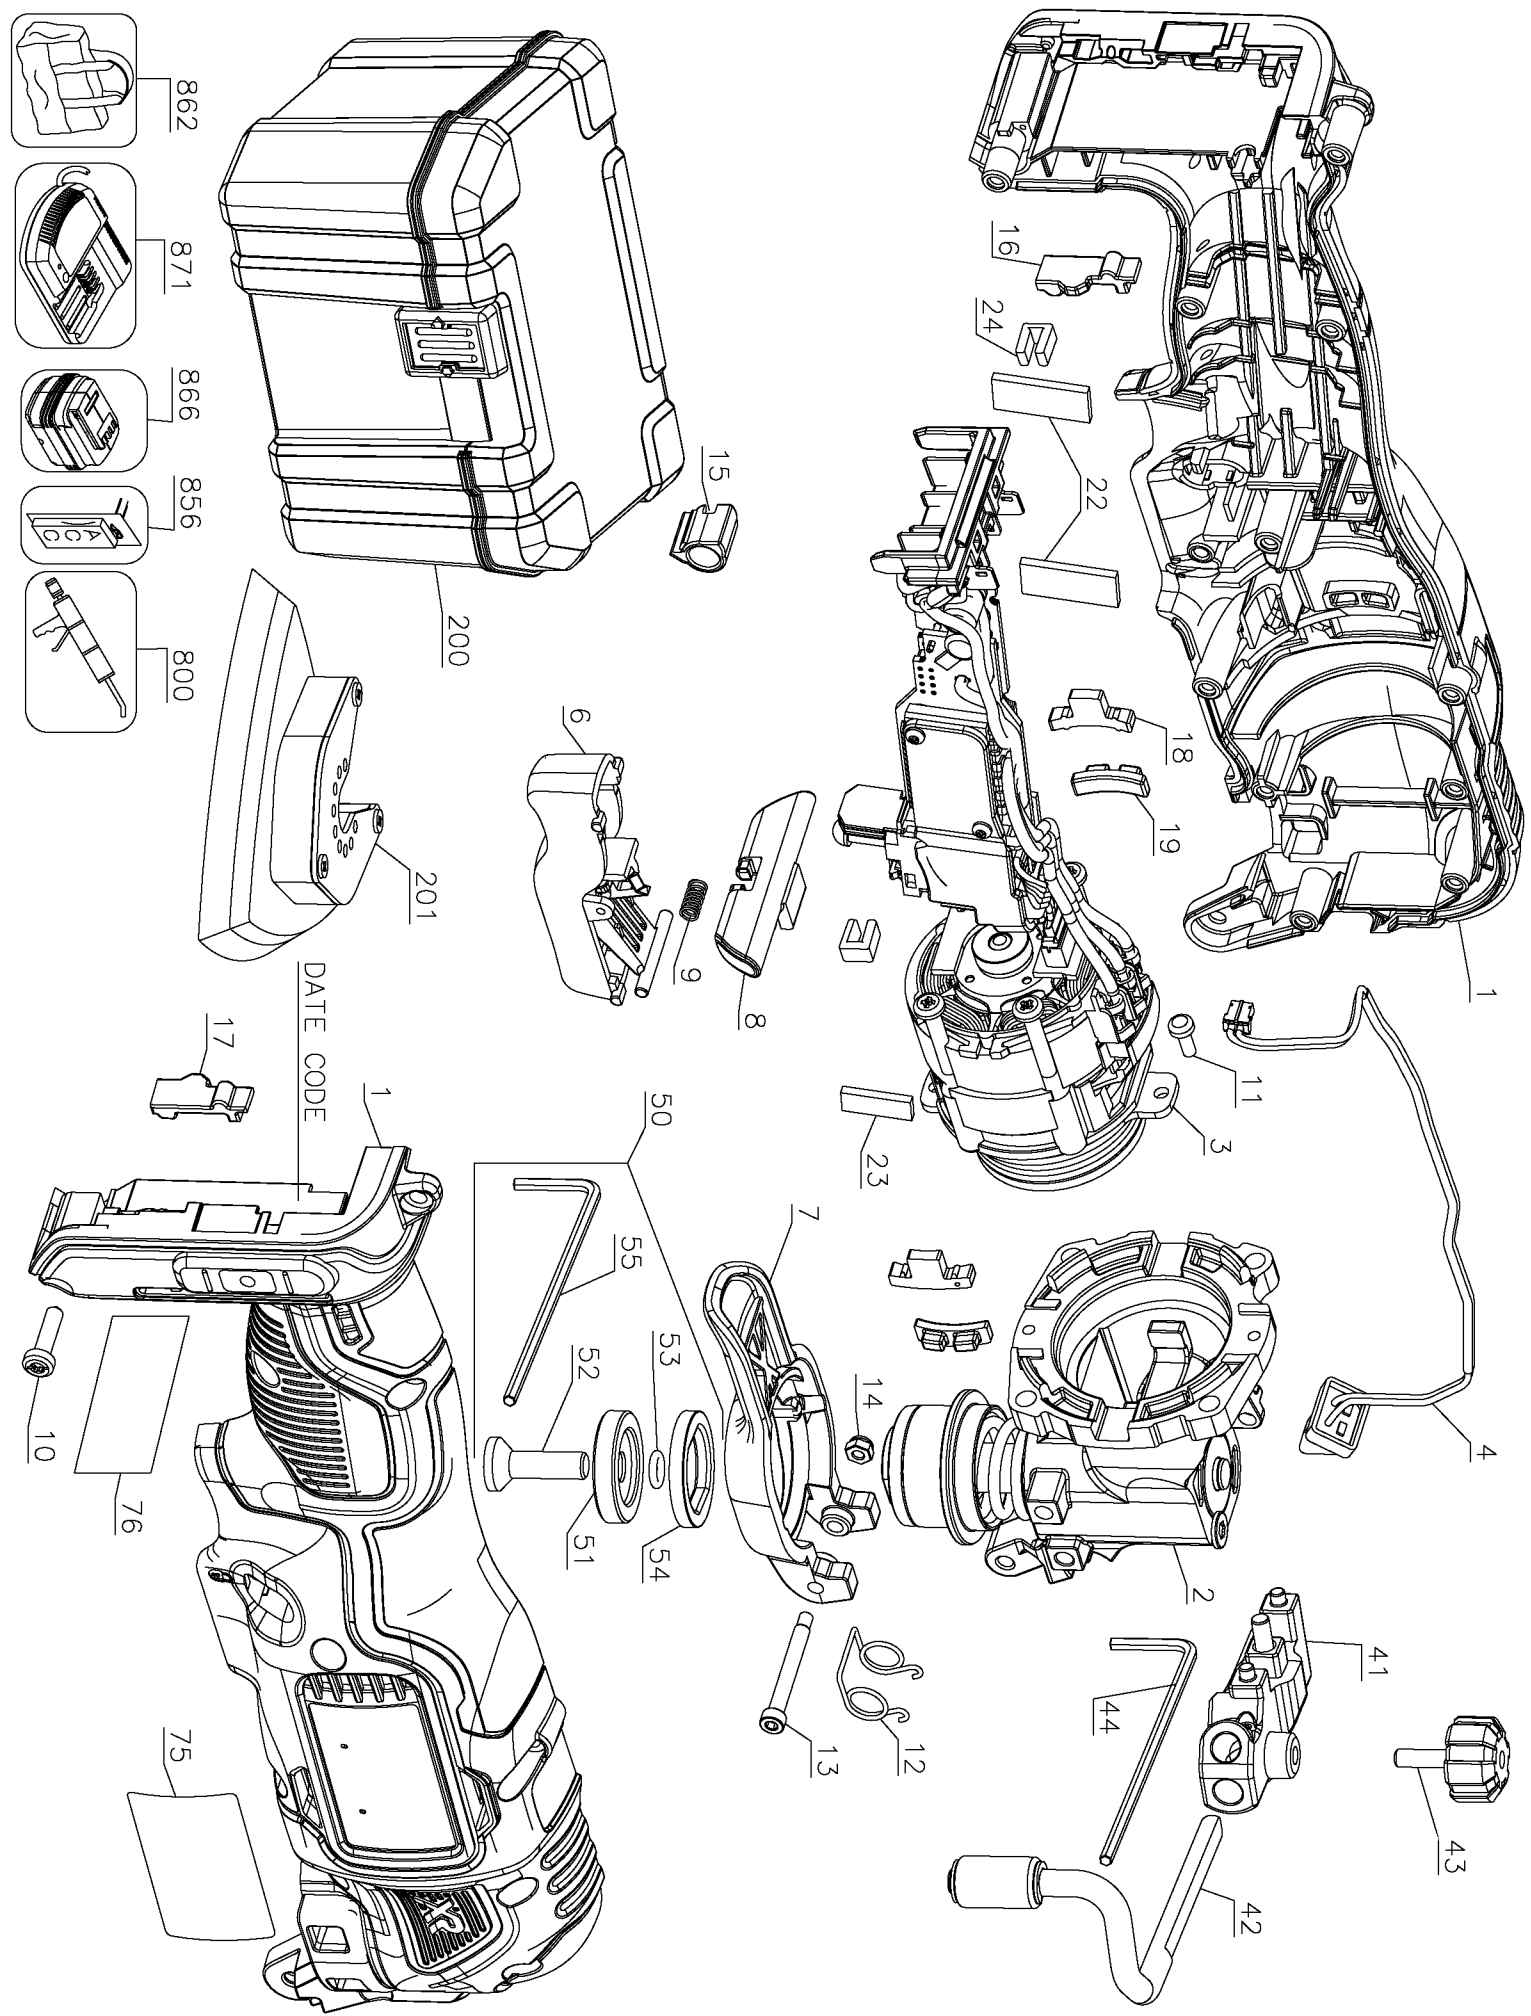

Parts List for DCS355B Type 1

Item Number	Part Number	Description	Qty Required
1	N232916	HOUSING ASSEMBLY	1
2	N341719	GEAR CASE ASSY	1
3	N341720	MOTOR & SWITCH ASSY.	1
4	N233819	LED ASSY	1
6	N255379	TRIGGER ASSEMBLY	1
7	N254620	CLAMP LEVER	1
8	N163918	LOCK-ON BUTTON	1
9	N165498	SPRING	1
10	330019-03	SCREW, PLASTITE	11
11	330045-43	SCREW, TAPTITE	2
12	N140357	TORSION SPRING	1
13	N175484	SCREW	1
14	N243985	ELASTIC STOP NUT	1
15	N238819	RUBBER BUMPER	1
16	N239159	RUBBER BUMPER	1
17	N239160	RUBBER BUMPER	1
18	N241039	RUBBER BUMPER	2
19	N266442	RUBBER BUMPER	2
22	N328739	RUBBER BUMPER	2
23	N328740	RUBBER BUMPER	1
24	N328741	RUBBER BUMPER	2
41	N275350	BLOCK ASSY.	1
42	N275341	DEPTH GUIDE	1
43	N278801	KNOB	1
44	891903	HEX WRENCH 2.5MM	1
50	90587554	FLANGE ASSY.	1
51	90583886	OUTER FLANGE	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCS355B Type 1

Item Number	Part Number	Description	Qty Required
52	90583887	SCREW	1
53	90583888	O-RING	1
54	90583885	INNER FLANGE	1
55	90584745	WRENCH	1
76	N238179	WARNING LABEL	1
200	N276779	BLADE BOX	1
201	N364479	PLATEN	1
800	870889-03	GREASE	1
856	N283301	SANDPAPER PACK	1
856	DWA4203	BLADE	1
856	DWA4206	BLADE	1
862	629053-00	TOOL BAG	1
866	DCB203	BATTERY PACK	1
871	DCB101	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.