

# 14" Wood Cutting Band Saw (28-293 & 28-299)



Model 28-293 Shown

PART NO. 426-02-651-0040 - 09-30-01  
Copyright © 2001 Delta Machinery



To learn more about DELTA MACHINERY  
visit our website at: [www.deltamachinery.com](http://www.deltamachinery.com).

**For Parts, Service, Warranty or other Assistance,**

**please call 1-800-223-7278 (In Canada call 1-800-463-3582).**

## GENERAL SAFETY RULES

Woodworking can be dangerous if safe and proper operating procedures are not followed. As with all machinery, there are certain hazards involved with the operation of the product. Using the machine with respect and caution will considerably lessen the possibility of personal injury. However, if normal safety precautions are overlooked or ignored, personal injury to the operator may result. Safety equipment such as guards, push sticks, hold-downs, featherboards, goggles, dust masks and hearing protection can reduce your potential for injury. But even the best guard won't make up for poor judgment, carelessness or inattention. Always use common sense and exercise caution in the workshop. If a procedure feels dangerous, don't try it. Figure out an alternative procedure that feels safer. **REMEMBER:** Your personal safety is your responsibility.

This machine was designed for certain applications only. Delta Machinery strongly recommends that this machine not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, **DO NOT** use the machine until you have first contacted Delta to determine if it can or should be performed on the product.

**Technical Service Manager**  
**Delta Machinery**  
**4825 Highway 45 North**  
**Jackson, TN 38305**  
(IN CANADA: 505 SOUTHGATE DRIVE, GUELPH, ONTARIO N1H 6M7)



**WARNING: FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS PERSONAL INJURY!**

1. **FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING THE TOOL.** Learn the tool's application and limitations as well as the specific hazards peculiar to it.

2. **KEEP GUARDS IN PLACE** and in working order.

3. **ALWAYS WEAR EYE PROTECTION.** Wear safety glasses. Everyday eyeglasses only have impact resistant lenses; they are not safety glasses. Also use face or dust mask if cutting operation is dusty. These safety glasses must conform to ANSI Z87.1 requirements. Note: Approved glasses have Z87 printed or stamped on them.

4. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it "on".

5. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.

6. **DON'T USE IN DANGEROUS ENVIRONMENT.** Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well-lighted.

7. **KEEP CHILDREN AND VISITORS AWAY.** All children and visitors should be kept a safe distance from work area.

8. **MAKE WORKSHOP CHILDPROOF** – with padlocks, master switches, or by removing starter keys.

9. **DON'T FORCE TOOL.** It will do the job better and be safer at the rate for which it was designed.

10. **USE RIGHT TOOL.** Don't force tool or attachment to do a job for which it was not designed.

11. **WEAR PROPER APPAREL.** No loose clothing, gloves, neckties, rings, bracelets, or other jewelry to get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.

12. **SECURE WORK.** Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.

13. **DON'T OVERREACH.** Keep proper footing and balance at all times.

14. **MAINTAIN TOOLS IN TOP CONDITION.** Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.

15. **DISCONNECT TOOLS** before servicing and when changing accessories such as blades, bits, cutters, etc.

16. **USE RECOMMENDED ACCESSORIES.** The use of accessories and attachments not recommended by Delta may cause hazards or risk of injury to persons.

17. **REDUCE THE RISK OF UNINTENTIONAL STARTING.** Make sure switch is in "OFF" position before plugging in power cord. In the event of a power failure, move switch to the "OFF" position.

18. **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted.

19. **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to ensure that it will operate properly and perform its intended function – check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

20. **DIRECTION OF FEED.** Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.

21. **NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF.** Don't leave tool until it comes to a complete stop.

22. **STAY ALERT, WATCH WHAT YOU ARE DOING, AND USE COMMON SENSE WHEN OPERATING A POWER TOOL. DO NOT USE TOOL WHILE TIRED OR UNDER THE INFLUENCE OF DRUGS, ALCOHOL, OR MEDICATION.** A moment of inattention while operating power tools may result in serious personal injury.

23. **MAKE SURE TOOL IS DISCONNECTED FROM POWER SUPPLY** while motor is being mounted, connected or reconnected.

24. **THE DUST GENERATED** by certain woods and wood products can be injurious to your health. Always operate machinery in well ventilated areas and provide for proper dust removal. Use wood dust collection systems whenever possible.

25.  **WARNING: SOME DUST CREATED BY POWER SANDING, SAWING, GRINDING, DRILLING, AND OTHER CONSTRUCTION ACTIVITIES** contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

**SAVE THESE INSTRUCTIONS.**

**Refer to them often and use them to instruct others**

## ADDITIONAL SAFETY RULES FOR BAND SAWS

1. **IF you are not thoroughly familiar** with the operation of band saws, obtain advice from your supervisor, instructor, or some other qualified person.
  2. **Make sure wiring codes** and recommended electrical connections are followed and that tool is properly grounded..
  3. **Make sure** that the saw blade teeth point downward toward the table.
  4. **Adjust** the upper guide about 1/8" above the work.
  5. **Make sure** that the blade tension and blade tracking are properly adjusted.
  6. **Stop the machine** before removing scrap pieces from the table.
  7. **Always** keep hands and fingers away from the blade..
  8. **Check** for proper blade size and type.
  9. **Hold workpiece** firmly against the table. **DO NOT** attempt to saw stock that does not have a flat surface, unless a suitable support is used.
  10. **Hold** material firmly and feed into blade at a moderate speed.
  11. **Turn off the tool** if the material is to be backed out of an uncompleted or jammed cut.
  12. Make "release cuts before cutting long curves.
  13. **Shut off power** and clean the band saw and work area before leaving the tool.
- IMPORTANT: When the tool is not in use, the switch should be locked in the "OFF" position to prevent unauthorized use.**
14. **ADDITIONAL INFORMATION** regarding the safe and proper operation of this product is available from the National Safety Council, 1121 Spring Lake Drive, Itasca, IL 60143-3201 in the Accident Prevention Manual for Industrial Operations and also in the Safety Data Sheets provided by the NSC. Please also refer to the American National Standards Institute ANSI O1.1 Safety Requirements for Woodworking Machinery and the U.S. Department of Labor OSHA 1910.213 Regulations.†

## CONNECTING TOOL TO POWER SOURCE

### POWER CONNECTIONS

A separate electrical circuit should be used for your tools. This circuit should not be less than #12 wire and should be protected with a 20 Amp time lag fuse. If an extension cord is used, use only 3-wire extension cords which have 3-prong grounding type plugs and 3-hole receptacles which accept the tool's plug. Before connecting the motor to the power line, make sure the switch is in the "OFF" position and be sure that the electric current is of the same characteristics as indicated on the tool. All line connections should make good contact. Running on low voltage will damage the motor.



**WARNING: DO NOT EXPOSE THE TOOL TO RAIN OR OPERATE THE TOOL IN DAMP LOCATIONS.**

## MOTOR SPECIFICATIONS

Your tool is wired for 120 volt, 60 Hz. alternating current. **Before connecting the tool to the power source, make sure the switch is in the "OFF" position.**

## GROUNDING INSTRUCTIONS



**WARNING: THIS TOOL MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRIC SHOCK.**

### 1. All grounded, cord-connected tools:

In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided - if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Improper connection of the equipment-grounding conductor can result in risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.

Use only 3-wire extension cords that have 3-prong grounding type plugs and matching 3-conductor receptacles that accept the tool's plug, as shown in Fig. 1.

Repair or replace damaged or worn cord immediately.

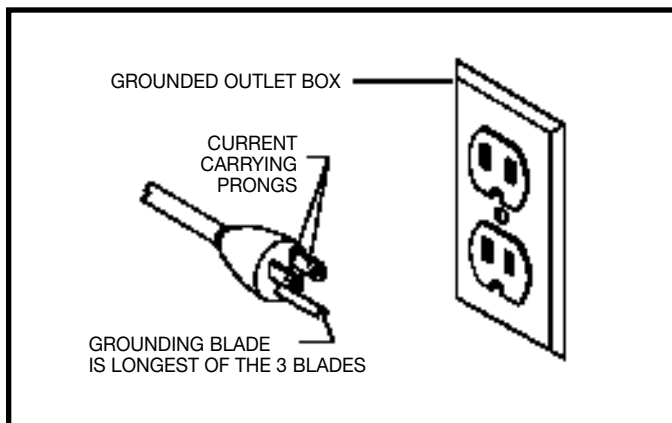


Fig. 1

2. Grounded, cord-connected tools intended for use on a supply circuit having a nominal rating less than 150 volts:

This tool is intended for use on a circuit that has an outlet that looks like the one illustrated in Fig. 1. The tool has a grounding plug that looks like the plug illustrated in Fig. 1. A temporary adapter, which looks like the adapter illustrated in Fig. 2, may be used to connect this plug to a matching 2-conductor receptacle as shown in Fig. 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green-colored rigid ear, lug, and the like, extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. Whenever the adapter is used, it must be held in place with a metal screw.

**NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electric Code.**

**WARNING: IN ALL CASES, MAKE CERTAIN THE RECEPTACLE IN QUESTION IS PROPERLY GROUNDED. IF YOU ARE NOT SURE HAVE A QUALIFIED ELECTRICIAN CHECK THE RECEPTACLE.**

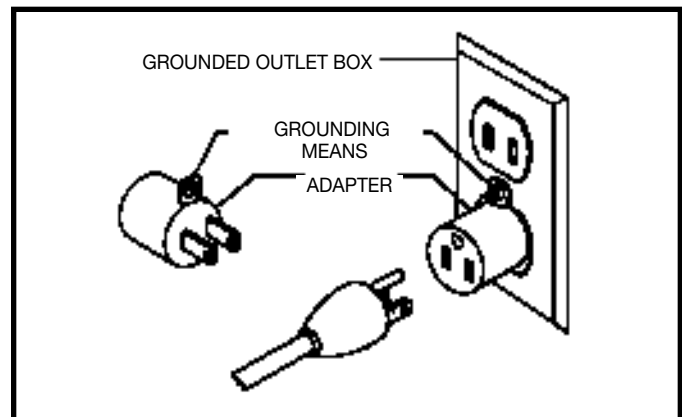


Fig. 2

## EXTENSION CORDS

Use proper extension cords. Make sure your extension cord is in good condition and is a 3-wire extension cord which has a 3-prong grounding type plug and matching receptacle which will accept the tool's plug. When using an extension cord, be sure to use one heavy enough to carry the current of the tool. An undersized cord will cause a drop in line voltage, resulting in loss of power and overheating. Fig. 3, shows the correct gauge to use depending on the cord length. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

MINIMUM GAUGE EXTENSION CORD			
RECOMMENDED SIZES FOR USE WITH STATIONARY ELECTRIC TOOLS			
Ampere Rating	Volts	Total Length of Cord in Feet	Gauge of Extension Cord
0-6	120	up to 25	18 AWG
0-6	120	25-50	16 AWG
0-6	120	50-100	16 AWG
0-6	120	100-150	14 AWG
6-10	120	up to 25	18 AWG
6-10	120	25-50	16 AWG
6-10	120	50-100	14 AWG
6-10	120	100-150	12 AWG
10-12	120	up to 25	16 AWG
10-12	120	25-50	16 AWG
10-12	120	50-100	14 AWG
10-12	120	100-150	12 AWG
12-16	120	up to 25	14 AWG
12-16	120	25-50	12 AWG
12-16	120	GREATER THAN 50 FEET NOT RECOMMENDED	

Fig. 3

# OPERATING INSTRUCTIONS

## FOREWORD

Delta Models 28-293 and 28-299 are 14" Band Saws. These tools are equipped with a 1 HP, 115V guarded drip-proof motor inside an enclosed stand. Included with each saw is a push button switch, a blade and belt guard, an arbor and motor pulleys with a V-belt, blade guides, a wood cutting blade, and an instruction manual.

## UNPACKING AND CLEANING

Carefully unpack the tool and all loose items from the shipping container(s). Remove the protective coating from all unpainted surfaces. This coating may be removed with a soft cloth moistened with kerosene (do not use acetone, gasoline or lacquer thinner for this purpose). After cleaning, cover the unpainted surfaces with a good quality household floor paste wax.

**NOTICE: THE MANUAL COVER PHOTO ILLUSTRATES THE CURRENT PRODUCTION MODEL. ALL OTHER ILLUSTRATIONS ARE REPRESENTATIVE ONLY AND MAY NOT DEPICT THE ACTUAL COLOR, LABELING, OR ACCESSORIES.**

## ASSEMBLY

### STAND

The stand is shipped top-down in the shipping container with the motor mounted to the inside top of the stand. The on/off switch is wired to the end of the power cord.

To make the motor operational, do the following:

1. Remove the stand (A) Fig. 4 from the shipping container. Be careful not to crimp the switch cord that extends through the top of the stand. **NOTE:** Set the stand on several blocks of wood to raise the stand off the floor.
2. Take the panel (B) Fig. 4 off of the stand (A) by removing two screws (C) and loosening the two other screws (D). Remove the panel on the opposite side of the stand in the same way.

3. Remove the two mounting screws that are holding the motor (F) Fig. 5 to the top of the stand. One screw is shown at (E) Fig. 5. **IMPORTANT: DO NOT REMOVE THE CABLE TIE (G) THAT HOLDS THE SWITCH CORD (H) TO THE VERTICAL MOUNTING BAR (J), UNLESS THE ACCESSORY HEIGHT ATTACHMENT WILL BE USED ON THE TOOL. THE CABLE TIE PREVENTS CONTACT BETWEEN THE SWITCH CORD AND THE MOTOR PULLEY OR BELT.**

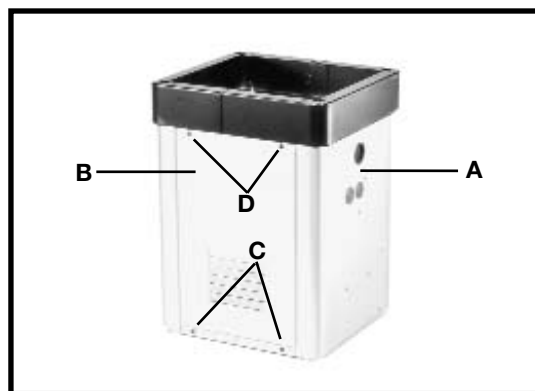


Fig. 4

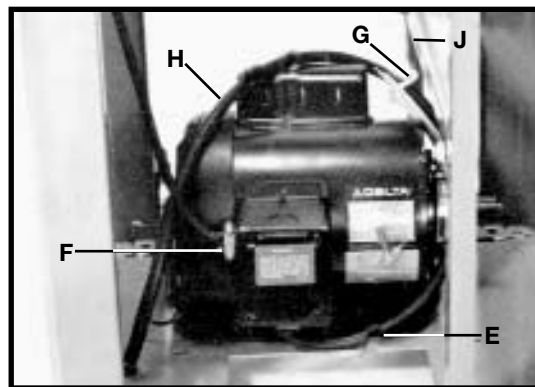


Fig. 5

### ATTACHING MOTOR TO STAND

1. Turn the stand on its side with the two bars (B) Fig. 6 down.
2. Position the motor (C), Fig. 6 on the two horizontal support bars (B), and fasten with the four 5/16x18 carriage bolts and flanged nuts, two of which are shown at (D). **IMPORTANT: PLACE THE MOTOR SHAFT (E) ON THE SAME SIDE OF THE STAND AS THE LARGE OPENING AT THE TOP OF THE STAND (SEE (B) FIG. 8) BEFORE LOOSELY TIGHTENING THE CARRIAGE BOLTS (D).** Further alignment will be necessary after the saw is attached to the stand.
3. Carefully turn the stand right side up.

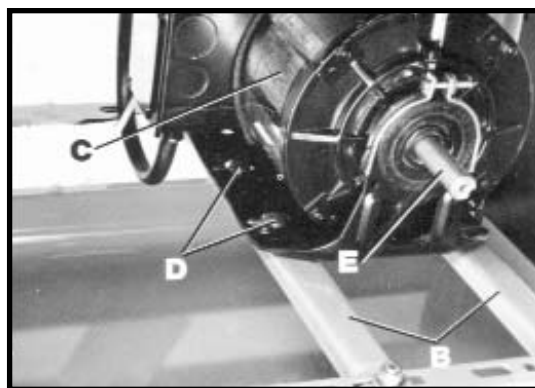


Fig. 6

## ATTACHING MOTOR PULLEY

Attach the motor pulley (A) Fig. 7 to the motor shaft, making sure that the set screw (B) in the motor pulley engages with the key (C) in the motor shaft. **NOTE:** The key is shipped taped to the motor. Remove it, place it on the motor shaft and then attach the pulley over it.

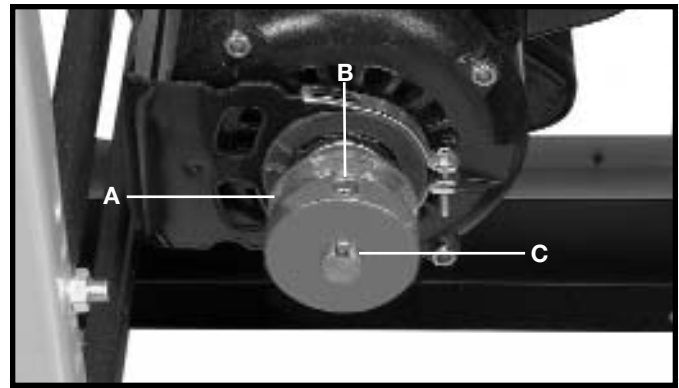


Fig. 7

## ATTACHING BAND SAW TO THE STAND

**CAUTION:** The band saw is very heavy. Use a helper when attaching the saw to the stand.

Attach the band saw to the stand in the four holes provided (two of which are shown at (A) Fig. 8). Place one 5/16 -18 x 1-3/4" hex head screw and one 5/16" flat washer through each hole through the bottom of the band saw and the top of the stand, and attach with a 5/16" lock washer, and 5/16-18 hex nut.

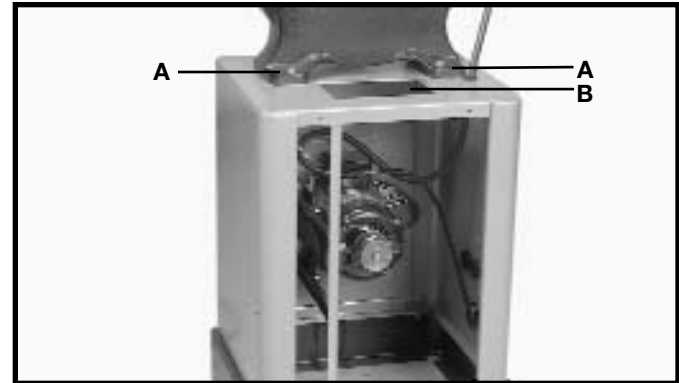


Fig. 8

## ATTACHING AND ALIGNING V-BELT, ADJUSTING BELT TENSION

1. Attach the V-belt (E) Fig. 9 on the two pulleys (A and B), and adjust the belt tension by raising or lowering the motor (C) on the motor mounting bars (D). (If necessary, the motor mounting bars (D) can be repositioned on the two posts (F). Tension is correct when the belt is deflected approximately 1" in the center.
2. Place a straight edge against the belt along the V-groove of both pulleys. Visually check to see that both pulleys are in line. Either pulley can be moved in or out by loosening the set screw (the lower pulley set screw is shown at (B) Fig. 7). After aligning, tighten the set screw. The motor can also be moved on the mounting bars.

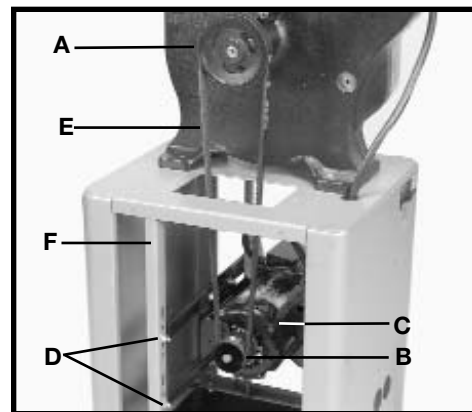


Fig. 9

## ATTACHING THE BELT AND THE PULLEY GUARD

1. **DISCONNECT TOOL FROM POWER SOURCE.**

2. Attach the belt and pulley guard (A) to the top of the stand (B) Fig. 10 using the two 1/4-20 x 1/2" hex head screws (C) Fig. 10 through the top of the guard and the stand, and attach those to 1/4" washers and 1/4-20 nuts (D) Fig. 10 from the bottom.

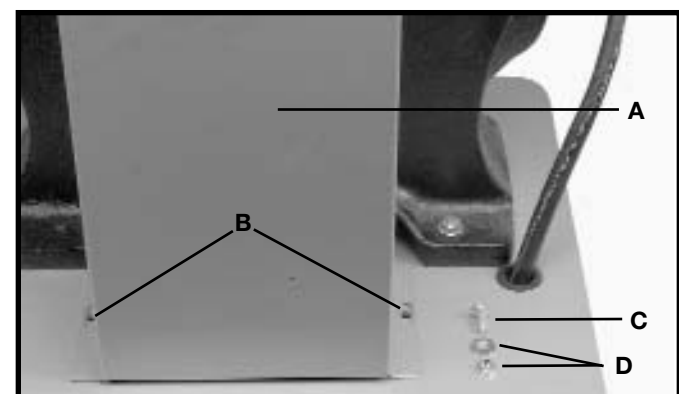


Fig. 10



## ATTACHING THE SWITCH

A push-button switch (mounted in a switch box), and a cord set are supplied with the unit. To attach the switch to the band saw arm, do the following:

1. **DISCONNECT TOOL FROM POWER SOURCE.**

2. **CAUTION:** The on/off switch-to-motor cord (F) Fig. 11 is tied to the vertical mounting post (G) opposite the motor pulley. This cable tie (H) prevents the switch-to-motor cord (F) from contacting the belt or motor pulley during operation of the unit. **IMPORTANT: Leave this cable tie in place. Remove it ONLY when using the Accessory Height Attachment with the tool.**



Fig. 11

3. Remove the two outer hex nuts and lock washers (A) Fig. 12, from the two screws extending out from the back of the switch box (B).

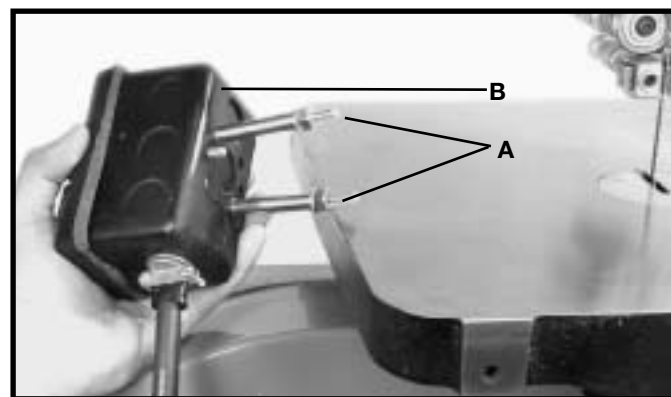


Fig. 12

4. Insert two screws (C) Figs. 13, located on back of switch box, into two holes (D) located in the band saw arm.

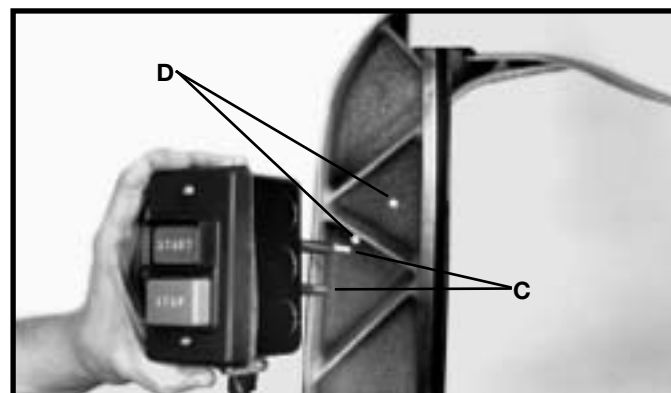


Fig. 13

5. Use the two nuts and lockwashers (E) Fig. 14, removed in STEP 3, to fasten the switch box to the bandsaw arm (Fig. 14).

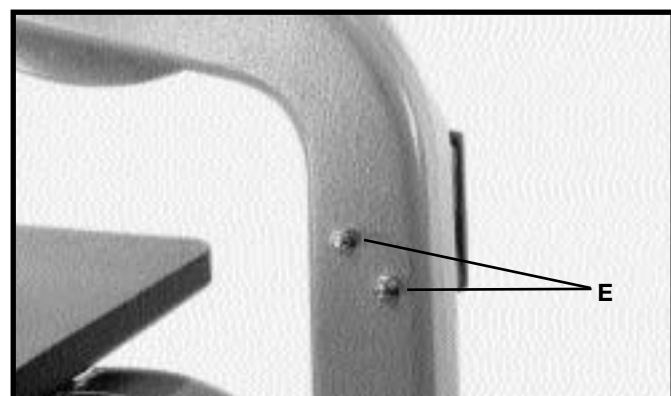


Fig. 14

6. Remove the screw and cable clamp (E) Figs. 15 and 16 from the lower arm of the band saw.

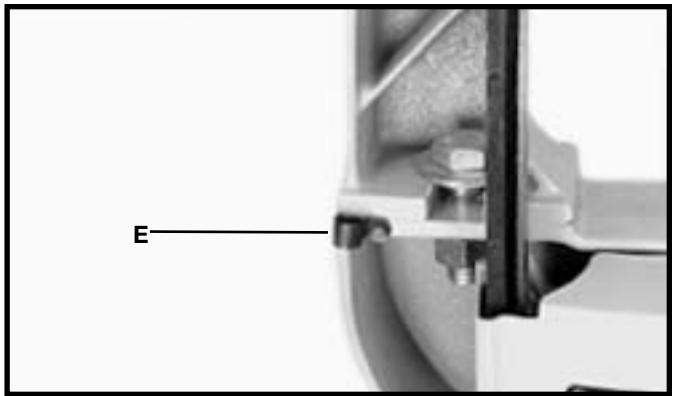


Fig. 15

7. Insert the switch cord (F) Fig. 16, into the clamp (E) (removed in **STEP 6**), and fasten the switch cord (F) to the bandsaw.

**IMPORTANT:** Be certain to prevent contact between the on/off switch-to-motor cord (F) Fig. 16 and the motor pulley or belt. If necessary, adjust the cord, then tighten the cable tie (H) Fig.11.

8. Attach the two side panels removed earlier.

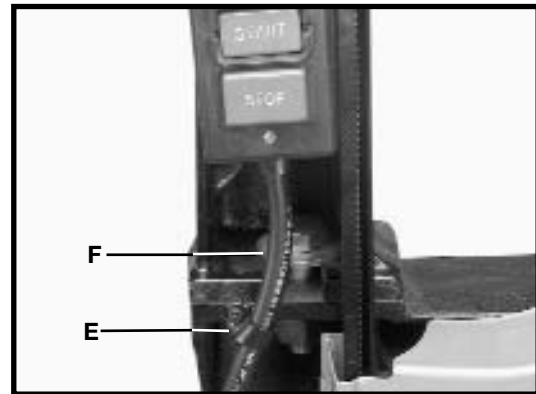


Fig. 16

## STARTING AND STOPPING SAW

To start the tool, press the “START” button (K) Fig. 17. To stop the tool, press the “STOP” button (L) Fig. 17.

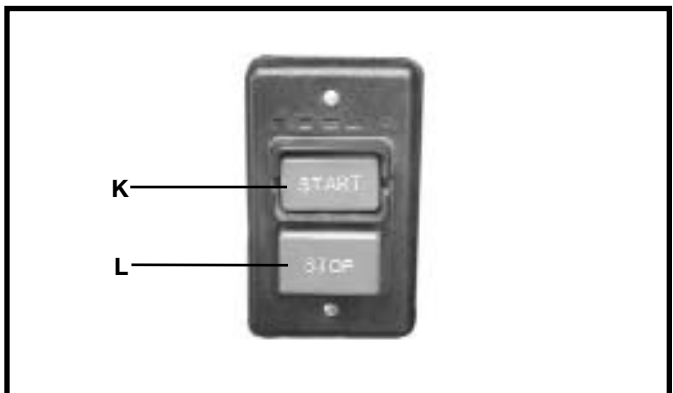


Fig. 17

## LOCKING SWITCH IN THE OFF POSITION

**IMPORTANT:** When the tool is not in use, the switch should be locked in the “OFF” position to prevent unauthorized use, using a padlock (M) Fig. 18 with a 3/16" diameter shackle.

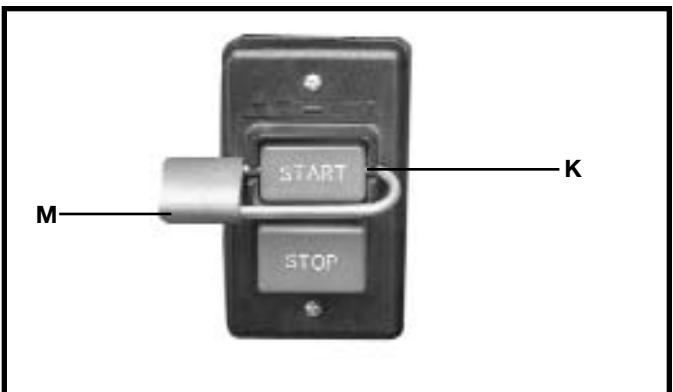


Fig. 18



## TABLE INSERT

Place the table insert (A) Fig. 19 in the hole provided in the table. Engage the protrusion on the insert in the indents (B) in the table.

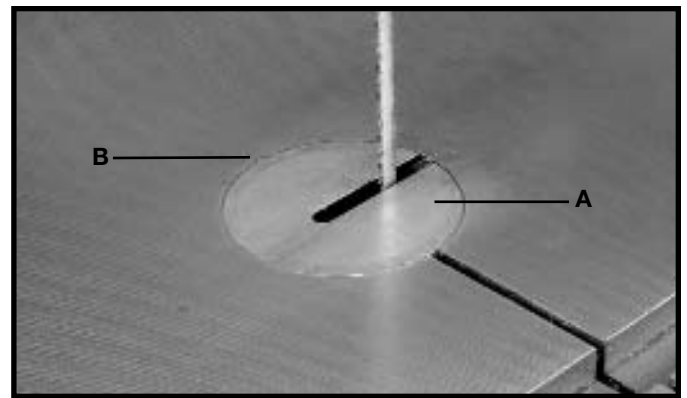


Fig. 19

## TILTING THE TABLE

1. The table on the band saw can be tilted 45 degrees to the right and 10 degrees to the left. To tilt the table to the right, loosen the two locking knobs (A) Fig. 20, tilt the table to the desired angle as shown on Scale (D), and tighten two locking knobs (A).

2. To tilt the table to the left, loosen the two locking knobs (A) Fig. 20, and tilt the table to the right until access to the table stop (A) Fig. 21 is gained. Remove the table stop (A) Fig. 19, and tilt the table to the left 10 degrees. Tighten the two locking knobs (A) Fig. 20.

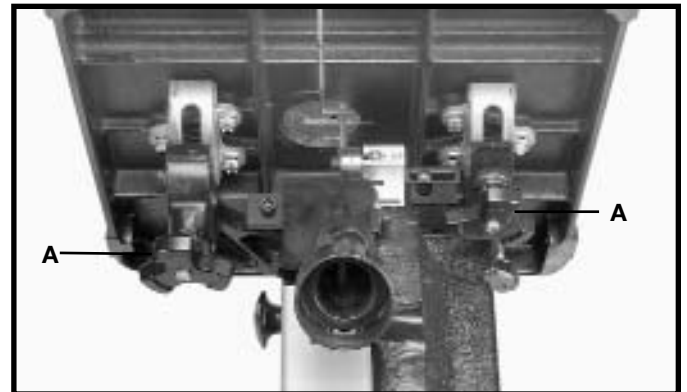


Fig. 20

## ADJUSTING THE TABLE STOP

The tool is equipped with an adjustable table stop (A) Fig. 21 that allows the table to be set at 90 degrees to the blade.

Tilt the table to the right until the table stop (A) Fig. 21 contacts the table. Place a square on the table against the blade (Fig. 22). Check to see if the blade is 90 degrees to the table surface. If not, then do the following:

1. Tilt the table slightly to the left and tighten the table lock knobs.
2. Loosen the locknut (B) Fig. 21 to free the adjustment nut (A) Fig. 21. Turn the adjustment nut (A) right or left to raise or lower the table stop, then tighten the locknut (B).
3. Lower the table. Check to see that the table is 90 degrees to the blade (Fig. 22). If it is, then hold the stop (A) Fig. 21 and tighten nut (B).
4. Adjust pointer, if necessary.

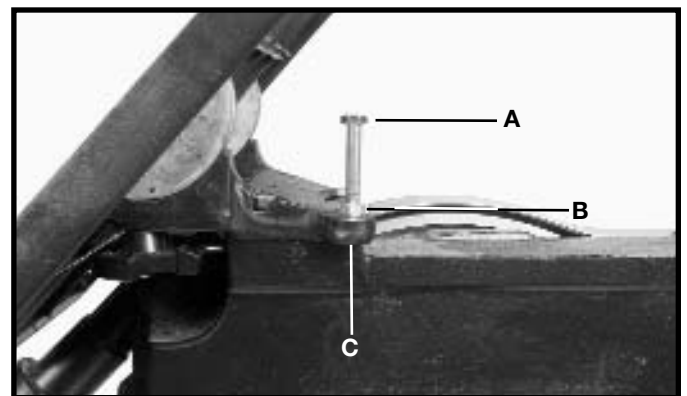


Fig. 21



Fig. 22

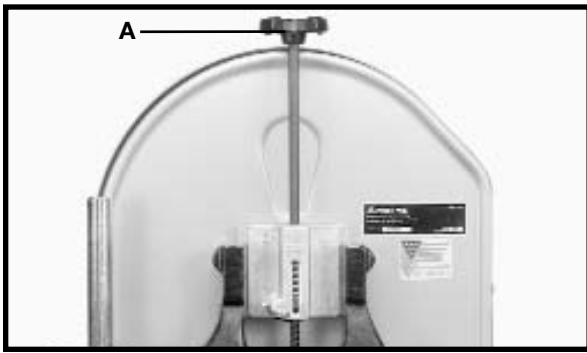


Fig. 23

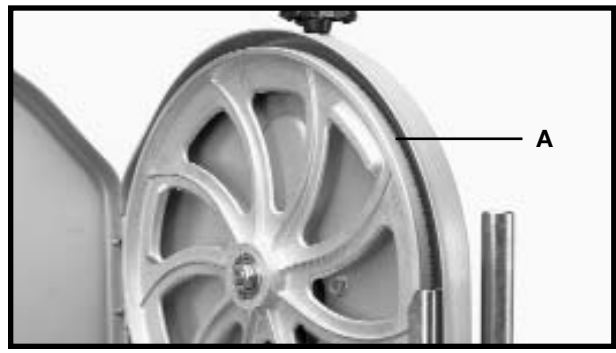


Fig. 24

## ADJUSTING BLADE TENSION

**CAUTION: DISCONNECT TOOL FROM POWER SOURCE.**

A series of graduations is located on the back of the upper wheel slide bracket. These graduations indicate the proper tension for various widths of blades. With the blade on the wheels, turn the knob (A) Fig. 21 to raise or lower the wheel, until the red fiber washer (B) is in line with the proper graduation for the size of the blade used.

These graduations are correct for average work, and will not be affected by rebracing of the saw blade. Use these graduations until you become familiar enough with the operation of the band saw to vary the tension for different kinds of blades or work.

**IMPORTANT: OVER-STRAINING IS A COMMON CAUSE OF BLADE BREAKAGE AND OTHER UNSATISFACTORY BLADE PERFORMANCE. RELEASE THE TENSION WHEN THE TOOL IS NOT IN USE.**

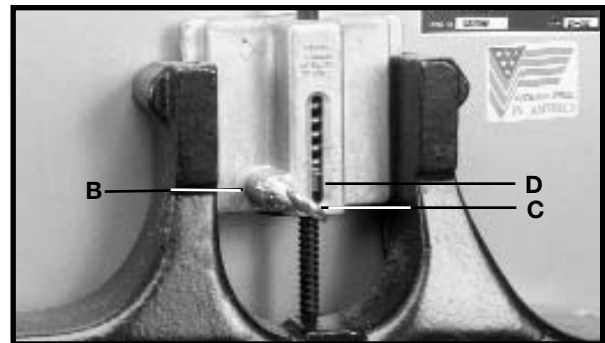


Fig. 25

## TRACKING THE BLADE

**CAUTION: DISCONNECT TOOL FROM POWER SOURCE.**

**IMPORTANT:** Before tracking the blade, make sure that the blade guides and blade support bearings are clear of the blade.

After applying tension to the blade, rotate the wheels slowly forward by hand and observe the blade's movement. The blade (A) Fig. 24 should travel in the center of the upper tire. If the blade creeps toward the front edge, loosen the wing nut (B) Fig. 25, and tighten the thumb screw (C). This action draws the blade toward the center of the tire. If the blade creeps toward the back edge, turn the thumb screw in the opposite direction. Adjust the thumb screw (C) Fig. 25 only a fraction of a turn each time. **NEVER TRACK THE BLADE WHILE THE TOOL IS RUNNING.** After the blade is tracking in the center of the tires, tighten the wing nut (B) Fig. 25.

## VERTICAL ADJUSTMENT OF THE UPPER BLADE GUIDE ASSEMBLY

**CAUTION: DISCONNECT TOOL FROM POWER SOURCE.**

Readjust the blade guides and bearings according to the following instructions.

Set the upper blade guide assembly (A) Fig. 26 as close as possible to the top surface of the workpiece. Loosen the lock knob (B) and move the guide assembly (A) to the desired position.

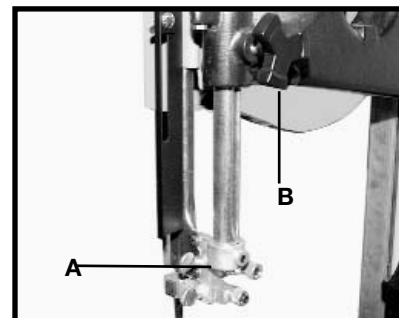


Fig. 26

# ADJUSTING THE UPPER BLADE GUIDES AND BLADE SUPPORT BEARING

Adjust the upper blade guides and blade support bearings **ONLY AFTER** the blade has the correct tension and is tracking properly. To adjust, do the following:

## 1. DISCONNECT TOOL FROM POWER SOURCE

2. Make sure that the bottom blade guides and support bearings are clear of the blade.

3. Check the upper blade guide assembly. The blade guides (A) Fig. 27 should be parallel to the blade. To adjust, loosen the screw (B) and rotate the complete guide assembly (C). When the blade guides are parallel with the blade, tighten the screw (B).

4. Adjust the guides (A) Fig. 28, so that the front edge of the guides are just behind the "gullets" of the saw teeth. The complete guide block bracket can be moved in or out by loosening the thumb screw (C) and turning the knurled knob (D) Fig. 28. When the guides (A) are set properly, tighten thumb screw (C).

5. Two set screws (B) Fig. 28 hold the upper blade guides (A) in place. Loosen the set screws (B) to move the guides (A). Place them as close as possible to the side of the blade. (Be careful not to pinch the blade). Tighten the screws (B).

6. The upper blade support bearing (E) Fig. 28 prevents damage to the set in the saw teeth by keeping the blade from being pushed too far toward the back. The support bearing (E) should be set 1/64" behind the blade by loosening the thumb screw (F) and turning the knurled knob (G) to move the support bearing (E) in or out.

7. Adjust the blade support bearing (E) so that the back edge of the blade overlaps the outside diameter of the ball bearing by about 1/16". The bearing (E) is set on an eccentric. To change the position, remove the screw (H) and bearing (E) Fig. 28. Loosen the thumb screw (F), back out the knurled knob from the set screw. Remove the hex shaft from the hole, and rotate it to move the eccentric for the bearing.

8. When the blade guide wears to a point that it cannot be adjusted close to the blade, loosen screw (B) Fig. 28 and reverse the blade guides (A) Fig. 28.

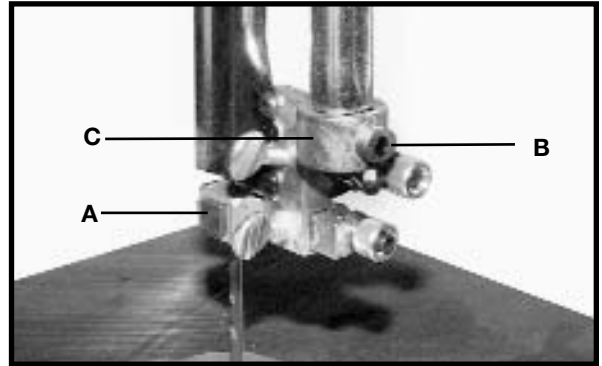


Fig. 27

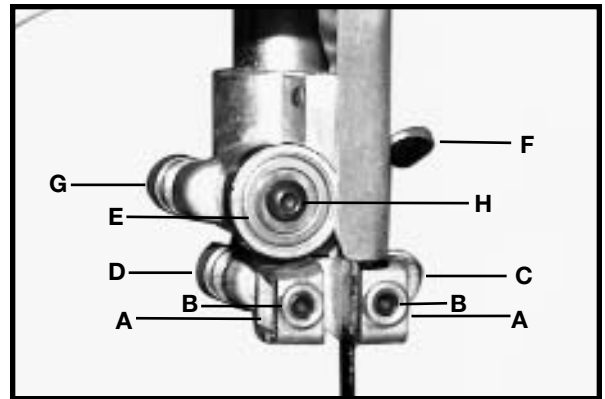


Fig. 28

# ADJUSTING LOWER BLADE GUIDES AND BLADE SUPPORT BEARING

Adjust the lower blade guides and blade support bearing after the the upper guides and bearing have been adjusted.

## 1. DISCONNECT TOOL FROM POWER SOURCE.

2. Adjust the front edge of the guide blocks (B) so that they are just behind the "gullets" of the saw teeth. Turn the knurled knob (C) Fig. 29 to make this adjustment. Check the support bearing. It should not be touching the back of the blade.

3. Loosen the two screws (A) Fig. 29. Move the guides (B) as close as possible to the side of the blade, being careful not to pinch the blade. Tighten screws (A).

3. Turn the other knurled knob (E) to adjust the lower blade support bearing (D) Fig. 29 so that it is about 1/64" behind the back of the blade.

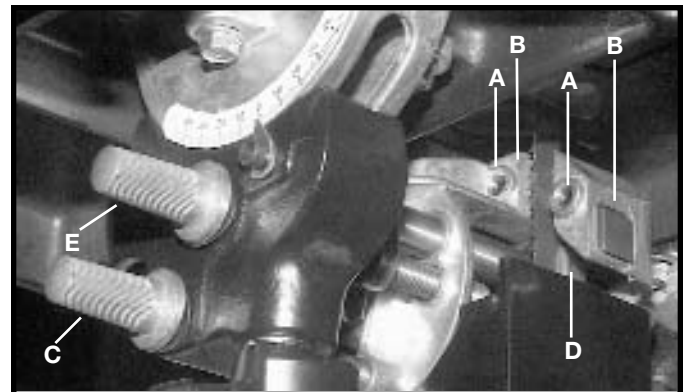


Fig. 29

# CHANGING THE BLADES

## 1. DISCONNECT TOOL FROM POWER SOURCE.

2. Open the upper and lower wheel guards.

3. Release tension on the saw blade.

4. Loosen the table alignment pin with a wrench and pull out. Remove table insert.

5. Take the blade off the wheel, and guide it through the slot in the table.

6. Install the new blade by reversing the procedure. (Table alignment pin should be seated by gently tapping it with a hammer).

## BAND SAW BLADES

A bandsaw blade is a delicate piece of steel that is subjected to a great deal of strain. Proper blade care results in optimal performance. Always use blades of the proper thickness, width, and temper to correspond to the workpiece.

Use the widest blade possible. Narrow blades should be reserved for small, abrupt curves and delicate work.

When pressure is required to push a workpiece through the blade, either file and set the blade, or replace it. A broken blade can be welded or brazed, but if the blade has been work-hardened, it will soon break again. A good rule of thumb is to sharpen the blade after 4 hours of operation.

Band saw blades will break because of the peculiar stresses to which they are subjected. However, many blades break because the operator (1) does not check the alignment and adjust the guides; (2) forces or twists the blade around a short-radius curve; (3) feeds the workpiece too fast; (4) allows the blade to become dull; (5) tightens the blade tension excessively; (6) sets the top blade guide too high; (7) uses a blade that has been improperly brazed or welded; and/or (8) runs the blade continuously when not cutting.

Blades for the standard 14" Band Saw are 93-1/2" long. The saw can adjust to a maximum length of 94" and a minimum of 91-1/2". If the saw is equipped with the accessory Height Attachment, the blades should be 105" long. Maximum and minimum lengths are 106" and 103-1/2".

## OPERATING THE BAND SAW

### CAUTION: DISCONNECT TOOL FROM POWER SOURCE.

Before starting the tool, make all adjustments and put all guards in place. Turn the upper wheel clockwise by hand to be sure that everything is correct prior to turning the tool on.

Keep the top guide close to the work. Do not force the material against the blade.

Light contact with the blade will permit easier following of the line and will prevent excess friction, heating, and work-hardening of the blade at its back edge.

Keep the saw blade sharp and very little pressure will be required for average cutting.

Avoid twisting the blade by turning abrupt corners.

## CUTTING CURVES

When cutting curves, turn the stock carefully so that the blade may follow without being twisted. If a curve is so abrupt that repeated new kerfs are needed, then use either a narrower blade or one that has more set. The more set a blade has, the easier the stock is to turn. However, the cut is usually rougher than when using a medium set.

When withdrawing the blade, be careful not to draw the blade off of the wheels. In most cases, it is easier and safer to turn the saw and saw out through waste material. Do not back the blade out while the saw is running.

## ACCESSORIES

A complete line of accessories is available from your Delta Supplier, Porter-Cable • Delta Factory Service Centers, and Delta Authorized Service Stations. Please visit our Web Site [www.deltamachinery.com](http://www.deltamachinery.com) for a catalog or for the name of your nearest supplier.



**WARNING:** Since accessories, other than those offered by Delta, have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Delta recommended accessories should be used with this product.



## PARTS, SERVICE OR WARRANTY ASSISTANCE

All Delta Machines and accessories are manufactured to high quality standards and are serviced by a network of Porter-Cable • Delta Factory Service Centers and Delta Authorized Service Stations. To obtain additional information regarding your Delta quality product or to obtain parts, service, warranty assistance, or the location of the nearest service outlet, please call 1-800-223-7278 (In Canada call 1-800-463-3582).



### Two Year Limited Warranty

Delta will repair or replace, at its expense and at its option, any Delta machine, machine part, or machine accessory which in normal use has proven to be defective in workmanship or material, provided that the customer returns the product prepaid to a Delta factory service center or authorized service station with proof of purchase of the product within two years and provides Delta with reasonable opportunity to verify the alleged defect by inspection. Delta may require that electric motors be returned prepaid to a motor manufacturer's authorized station for inspection and repair or replacement. Delta will not be responsible for any asserted defect which has resulted from normal wear, misuse, abuse or repair or alteration made or specifically authorized by anyone other than an authorized Delta service facility or representative. Under no circumstances will Delta be liable for incidental or consequential damages resulting from defective products. This warranty is Delta's sole warranty and sets forth the customer's exclusive remedy, with respect to defective products; all other warranties, express or implied, whether of merchantability, fitness for purpose, or otherwise, are expressly disclaimed by Delta.

Printed in U.S.A.

# NOTES



# NOTES

## PORTER-CABLE • DELTA SERVICE CENTERS (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA)

Parts and Repair Service for Porter-Cable • Delta Power Tools are Available at These Locations  
(Obtenga Refaccion de Partes o Servicio para su Herramienta en los Siguientes Centros de Porter-Cable • Delta)

### ARIZONA

Tempe 85282 (Phoenix)  
2400 West Southern Avenue  
Suite 105  
Phone: (602) 437-1200  
Fax: (602) 437-2200

### CALIFORNIA

Ontario 91761 (Los Angeles)  
3949A East Guasti Road  
Phone: (909) 390-5555  
Fax: (909) 390-5554  
  
San Leandro 94577 (Oakland)  
3039 Teagarden Street  
Phone: (510) 357-9762  
Fax: (510) 357-7939

### FLORIDA

Davie 33314 (Miami)  
4343 South State Rd. 7 (441)  
Unit #107  
Phone: (954) 321-6635  
Fax: (954) 321-6638  
  
Tampa 33609  
4538 W. Kennedy Boulevard  
Phone: (813) 877-9585  
Fax: (813) 289-7948

### GEORGIA

Forest Park 30297 (Atlanta)  
5442 Frontage Road,  
Suite 112  
Phone: (404) 608-0006  
Fax: (404) 608-1123

### ILLINOIS

Addison 60101 (Chicago)  
311 Laura Drive  
Phone: (630) 628-6100  
Fax: (630) 628-0023  
  
Woodridge 60517 (Chicago)  
2033 West 75th Street  
Phone: (630) 910-9200  
Fax: (630) 910-0360

### MARYLAND

Elkridge 21075 (Baltimore)  
7397-102 Washington Blvd.  
Phone: (410) 799-9394  
Fax: (410) 799-9398

### MASSACHUSETTS

Braintree 02185 (Boston)  
719 Granite Street  
Phone: (781) 848-9810  
Fax: (781) 848-6759  
  
Franklin 02038 (Boston)  
Franklin Industrial Park  
101E Constitution Blvd.  
Phone: (508) 520-8802  
Fax: (508) 528-8089

### MICHIGAN

Madison Heights 48071 (Detroit)  
30475 Stephenson Highway  
Phone: (248) 597-5000  
Fax: (248) 597-5004

### MINNESOTA

Minneapolis 55429  
5522 Lakeland Avenue North  
Phone: (763) 561-9080  
Fax: (763) 561-0653

### MISSOURI

North Kansas City 64116  
1141 Swift Avenue  
P.O. Box 12393  
Phone: (816) 221-2070  
Fax: (816) 221-2897  
  
St. Louis 63119  
7574 Watson Road  
Phone: (314) 968-8950  
Fax: (314) 968-2790

### NEW YORK

Flushing 11365-1595 (N.Y.C.)  
175-25 Horace Harding Expwy.  
Phone: (718) 225-2040  
Fax: (718) 423-9619

### NORTH CAROLINA

Charlotte 28270  
9129 Monroe Road, Suite 115  
Phone: (704) 841-1176  
Fax: (704) 708-4625

### OHIO

Columbus 43214  
4560 Indianola Avenue  
Phone: (614) 263-0929  
Fax: (614) 263-1238

Cleveland 44125  
8001 Sweet Valley Drive  
Unit #19  
Phone: (216) 447-9030  
Fax: (216) 447-3097

### OREGON

Portland 97230  
4916 NE 122 nd Ave.  
Phone: (503) 252-0107  
Fax: (503) 252-2123

### PENNSYLVANIA

Willow Grove 19090  
520 North York Road  
Phone: (215) 658-1430  
Fax: (215) 658-1433

### TEXAS

Carrollton 75006 (Dallas)  
1300 Interstate 35 N, Suite 112  
Phone: (972) 446-2996  
Fax: (972) 446-8157  
  
Houston 77055  
West 10 Business Center  
1008 Wirt Road, Suite 120  
Phone: (713) 682-0334  
Fax: (713) 682-4867

### WASHINGTON

Renton 98055 (Seattle)  
268 Southwest 43rd Street  
Phone: (425) 251-6680  
Fax: (425) 251-9337

Authorized Service Stations are located in many large cities. Telephone **800-438-2486** or **731-541-6042** for assistance locating one. Parts and accessories for Porter-Cable • Delta products should be obtained by contacting any Porter-Cable-Delta Distributor, Authorized Service Center, or Porter-Cable-Delta Factory Service Center. If you do not have access to any of these, call **800-223-7278** and you will be directed to the nearest Porter-Cable-Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Llame al **800-438-2486** ó al **731-541-6042** para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable-Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable-Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable-Delta. Si no tiene acceso a ninguna de estas opciones, llame al **800-223-7278** y le dirigirán al Centro de Servicio de Fábrica Porter-Cable-Delta más cercano.

## CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS

### ALBERTA

Bay 6, 2520-23rd St. N.E.  
Calgary, Alberta  
T2E 8L2  
Phone: (403) 735-6166  
Fax: (403) 735-6144

### BRITISH COLUMBIA

8520 Baxter Place  
Burnaby, B.C.  
V5A 4T8  
Phone: (604) 420-0102  
Fax: (604) 420-3522

### MANITOBA

1699 Dublin Avenue  
Winnipeg, Manitoba  
R3H 0H2  
Phone: (204) 633-9259  
Fax: (204) 632-1976

### ONTARIO

505 Southgate Drive  
Guelph, Ontario  
N1H 6M7  
Phone: (519) 836-2840  
Fax: (519) 767-4131

### QUÉBEC

1515 ave.  
St-Jean Baptiste,  
Québec, Québec  
G2E 5E2  
Phone: (418) 877-7112  
Fax: (418) 877-7123

1447, Begin  
St-Laurent, (Montréal),  
Québec  
H4R 1V8  
Phone: (514) 336-8772  
Fax: (514) 336-3505

The following are trademarks of PORTER-CABLE-DELTA (Las siguientes son marcas registradas de PORTER-CABLE S.A.): BAMMER®, INNOVATION THAT WORKS®, JETSTREAM®, LASERLOC®, OMNIJIG®, POCKET CUTTER®, PORTA-BAND®, PORTA-PLANE®, PORTER-CABLE®, QUICKSAND®, SANDTRAP®, SAW BOSS®, SPEED-BLOC®, SPEEDMATIC®, SPEEDTRONIC®, STAIR-EASE®, THE PROFESSIONAL EDGE®, THE PROFESSIONAL SELECT®, TIGER CUB®, TIGER SAW®, TORQBUSTER®, WHISPER SERIES®, DURATRONIC™, FLEX™, FRAME SAW™, MICRO-SET™, MORTEN™, NETWORK™, RIPTIDE™, TRU-MATCH™, WOODWORKER'S CHOICE™, THE AMERICAN WOOD SHOP™ (design), AUTO-SET™, B.O.S.S.™, BUILDER'S SAW™, CONTRACTOR'S SAW™, DELTA™, DELTACRAFT™, HOME-CRAFT™, JET-LOCK™, KICKSTAND™, THE LUMBER COMPANY™ (design), MICRO-SET™, Q3™, QUICKSET II™, QUICKSET PLUS™, SAFEGUARD II™, SANDING CENTER™, SIDEKICK™, UNIFENCE™, UNIGUARD™, UNIRIP™, UNISAW™, VERSA-FEEDER™.

Trademarks noted with ™ and ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Las Marcas Registradas con el signo de ™ y ® son registradas por la Oficina de Registros y Patentes de los Estados Unidos y también pueden estar registradas en otros países.

Printed in U.S.A.