

INSTALLATION

The 15-009 Table Raising Mechanism is shipped completely assembled and can easily be installed on the column of the drill press, as shown in Fig. 1, after the drill press base has been removed. The top of the head raising sleeve (A) Fig. 1, should be positioned directly underneath the table bracket (B) and the complete mechanism should be locked on the column by tightening the nut of the other end of the bolt (C).

To raise or lower the table, loosen the table lock nut (D) Fig. 1, and turn the crank (E) clockwise to raise or counterclockwise to lower the table. Then tighten table lock nut (D). **IMPORTANT: ALWAYS LOOSEN TABLE LOCK NUT BEFORE RAISING OR LOWERING TABLE.**


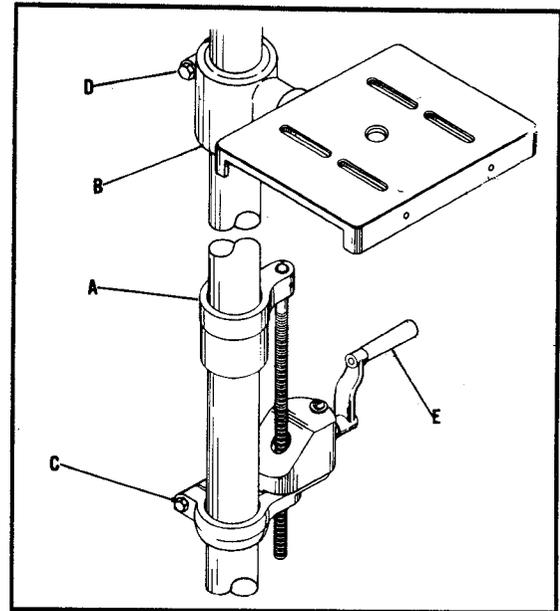


Fig. 1

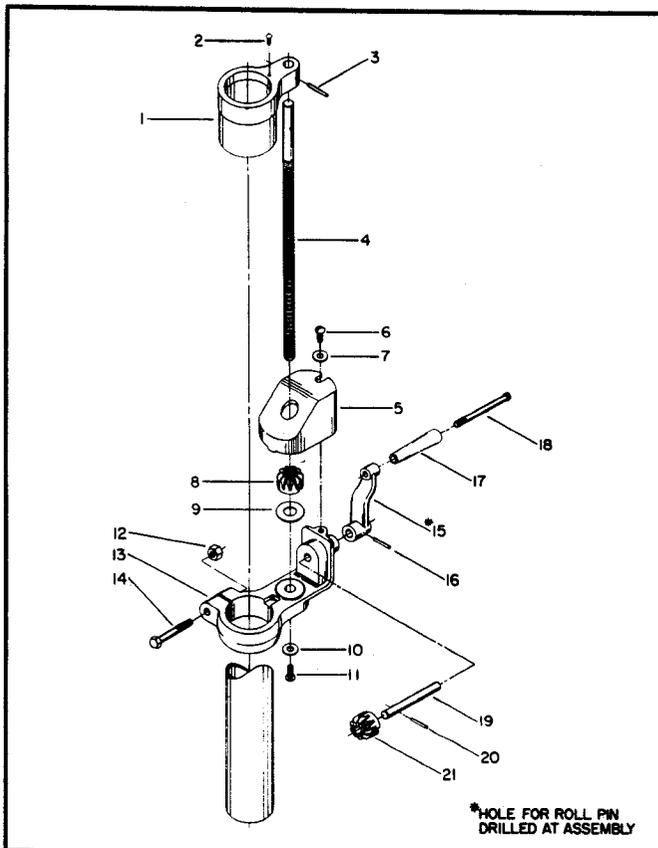

REPLACEMENT PARTS

REF NO	PART NUMBER	DESCRIPTION
*	15-009	RAISING MECHANISM, CONST OF:
1	432-04-105-0001	HEAD RAISING SLEEVE
2	901-06-450-8221	#10 X 3/8" ROUND HD SCREW
3	905-01-010-2708	3/16" X 1 1/4" SPRING PIN
4	432-04-112-0007	HEAD RAISING SCREW
5	432-04-031-0002	BRACKET COVER
6	901-02-010-0512	5/16-18 X 1/2" ROUND HD SCREW
7	904-01-010-1605	3/8" FLAT WASHER
8	432-04-051-0004	GEAR-10 TEETH
9	904-07-011-7752	FIBER WASHER
10	904-01-010-1605	3/8" FLAT WASHER
11	901-02-010-0512	5/16-18 X 1/2" ROUND HD SCREW
12	902-01-040-1026	3/8-16 HEX NUT
13	432-04-014-0002	GEAR HOUSING BRACKET
14	901-01-060-0604	3/8-16 X 2 1/4" HEX HD SCREW
15	432-04-060-0001	CRANK HANDLE
16	905-01-010-2732	5/32" X 1" SPRING PIN
17	1086395	HANDLE
18	422-04-071-5002	PIN
19	432-04-106-0003	PINION SHAFT
20	905-01-010-2732	5/32" X 1" SPRING PIN
21	424-02-051-0008	GEAR - 10 TEETH

* NOT SHOWN ASSEMBLED

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta International Machinery Corp. strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Center for service/repairs. Any product which is presented to a Delta Authorized Service Center for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.