


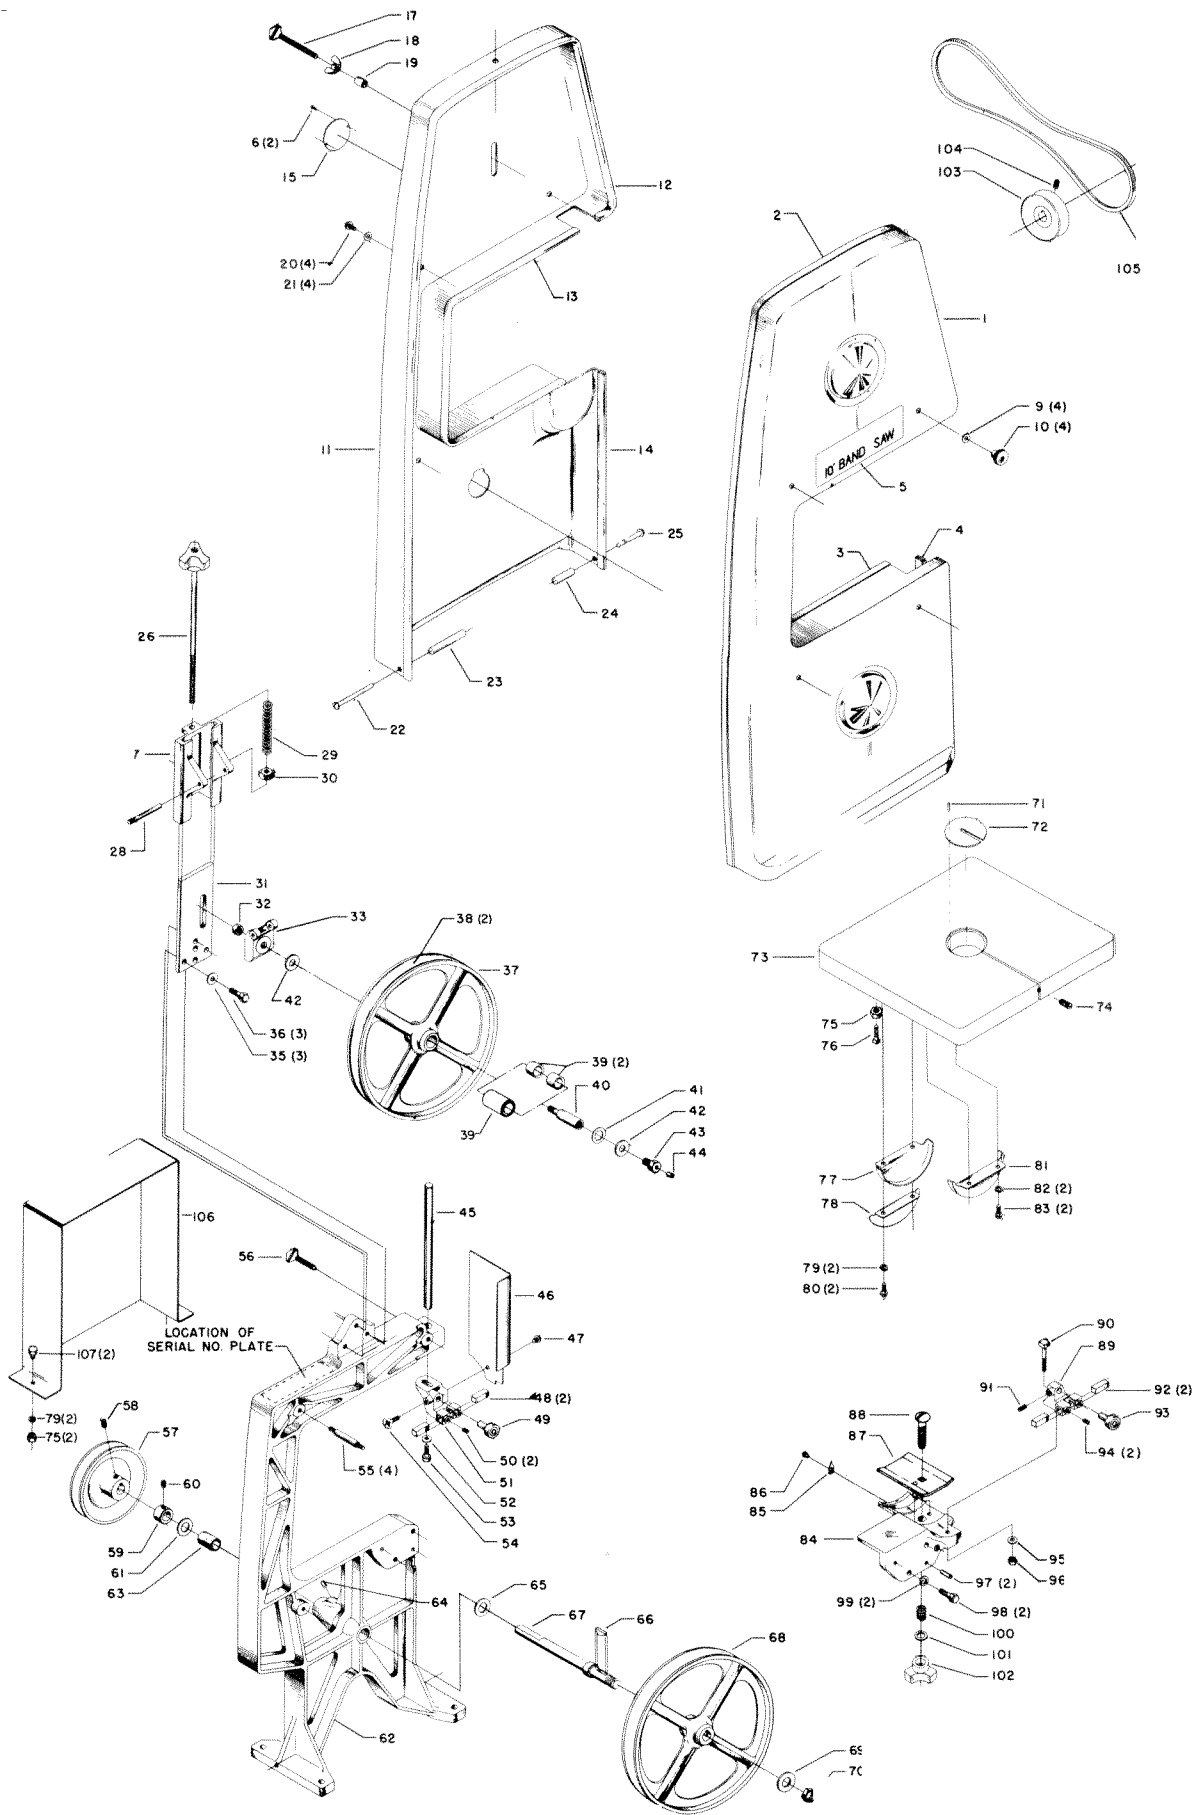

Replacement Parts

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	426-01-331-0005	Front Cover, Incl:	55	426-01-111-0001	Shoulder Stud
2	962-01-021-4403	Moulding	56	901-04-291-4003	Thumb Screw
3	962-01-021-4401	Moulding	57	41-083	Band Saw Pulley, Incl:
4	962-01-021-4402	Moulding	58	901-04-150-0206	5/16-18 x 5/16" Soc. Set Scr.
5	Nameplate	By Request Only	59	422-01-404-0002	Collar, Incl:
6	901-06-450-2250	#4 x 3/16" Drive Screw	60	901-04-150-0205	5/16-18 x 1/4" Soc. Set Scr.
9	904-01-010-1603	1/4 x 9/16 x 3/64" Washer	61	904-07-010-5563	Fiber Washer
10	902-04-030-1413	Handknob	62	426-01-349-0001	Frame, Incl:
11	426-01-331-0006	Rear Cover, Incl:	* 63	920-75-011-2796	Bearing
12	962-01-021-4403	Moulding	64	907-00-000-2486	Oiler
13	962-01-021-4401	Moulding	65	904-07-010-5563	Fiber Washer
14	962-01-021-4402	Moulding	66	927-01-100-2605	Key
15	Nameplate	By Request Only	67	426-01-406-0002	Drive Shaft
16	901-06-450-2250	#4 x 3/16" Drive Screw	68	1087431	Lower Wheel, Incl:
17	901-04-261-4005	5/16-18 x 2-1/2" Tracking Scr.	38	426-01-094-0001	Rubber Tire
	902-04-010-1403	5/16"-18 Wing Nut	69	904-01-031-2923	Special Washer
19	1087841	Spacing Collar	70	902-01-200-9764	Special Nut
20	901-02-010-0514	1/4-20 x 3/8" Rd. Hd. Scr.	71	905-01-010-6711	1/8 x 3/8" Roll Pin
21	904-01-010-1603	1/4 x 9/16 x 3/64" Washer	72	426-02-063-0001	Insert
22	901-02-120-7533	1/4-20 x 2-3/4" Truss Hd. Scr.	73	426-01-091-0002	Table
23	1087837	2-1/4" Spacer	74	901-04-080-0107	3/8-16 x 1/2" Headless Set Scr.
24	1087842	1" Spacer	75	902-01-120-1034	1/4"-20 Hex Nut
25	901-02-120-7531	1/4-20 x 1-1/2" Truss Hd. Scr.	76	901-04-020-0306	1/4-20 x 3/4" Sq. Hd. Set Scr.
26	1087560	Adjusting Screw & Knob	77	426-02-095-0001	Table Trunnion Half
27	426-01-014-0004	Hinge Bracket	78	951-02-010-7831	Tilt Index Plate
28	905-04-101-3133	Pivot Pin	79	904-02-020-1702	1/4" Split Lockwasher
29	928-01-041-5852	Spring	80	901-02-010-0514	1/4-20 x 3/8" Rd. Hd. Scr.
30	902-02-040-1303	5/16"-18 Sq. Nut	81	426-02-095-0001	Table Trunnion Half
31	426-01-072-0003	Guide Plate	82	904-02-020-1702	1/4" Split Lockwasher
32	902-01-020-1270	3/8"-24 Hex Jam Nut	83	901-02-010-0514	1/4-20 x 3/8" Rd. Hd. Scr.
33	426-01-059-0002	Hinge Bracket	84	426-01-014-0005	Trunnion Bracket
35	904-01-010-1604	5/16 x 3/4 x 1/16" Washer	85	951-01-011-3953	Pointer
36	901-01-060-0607	5/16-18 x 3/4" Hex Hd. Scr.	86	901-02-010-0569	#8-32 x 3/16" Rd. Hd. Scr.
37	1087430	Upper Wheel, Incl:	87	426-01-327-0002	Trunnion Clamp
38	426-01-094-0001	Rubber Tire	88	901-11-020-0838	7/16-14 x 2-1/4" Carriage Bolt
39	920-25-061-3927	Needle Bearing (Early Model)	89	426-01-014-0003	Lower Guide Bracket
39	1088373	Sleeve Bearing (Current Model)	90	901-11-010-2372	1/4-20 x 1-1/4" Sq. Hd. Bolt
40	426-01-106-0005	Upper Wheel Shaft	91	901-04-080-0102	1/4-20 x 3/8" Headless Set Scr.
41	904-07-010-5564	Fiber Washer	92	1085921	Guide Block
42	904-01-010-1606	7/16 x 1 x 5/64" Washer	93	426-01-380-0002	Blade Support Bearing
43	901-09-080-6130	Special Screw	94	901-04-080-0101	1/4-20 x 1/4" Headless Set Scr.
44	907-00-000-2486	Oiler	95	904-01-010-1603	1/4 x 9/16 x 3/64" Washer
45	426-01-110-0002	Guide Post	96	902-01-120-1034	1/4"-20 Hex Nut
46	426-01-054-0004	Blade Guard	97	905-01-010-2702	1/4 x 5/8" Roll Pin
47	901-02-010-0502	1/4-20 x 1/4" Rd. Hd. Scr.	98	901-01-060-0607	5/16-18 x 3/4" Hex Hd. Scr.
48	1085921	Guide Block	99	904-02-010-1703	5/16" Split Lockwasher
49	426-01-380-0002	Blade Support Bearing	100	928-01-021-4125	Spring
50	901-04-080-0101	1/4-20 x 1/4" Headless Set Scr.	101	904-01-010-1606	7/16 x 1 x 5/64" Washer
51	426-01-014-0002	Upper Guide Bracket	102	1087528	Knob
52	904-01-010-1603	1/4 x 9/16 x 3/64" Washer	103	41-033	Motor Pulley, Incl:
53	901-01-060-0612	1/4-20 x 5/8" Hex Hd. Scr.	104	901-04-150-0206	5/16-18 x 5/16" Soc. Set Scr.
54	901-04-260-1505	1/4-20 x 1/2" Thumb Screw	105	49-303	Belt
			106	426-01-354-0006	Belt Guard - Stand Mtd. Models
			107	901-01-060-0611	1/4-20 X 1/2" Hex Hd. Cap Scr.

* Replacement bearings are furnished oversize and must be reamed to fit.