



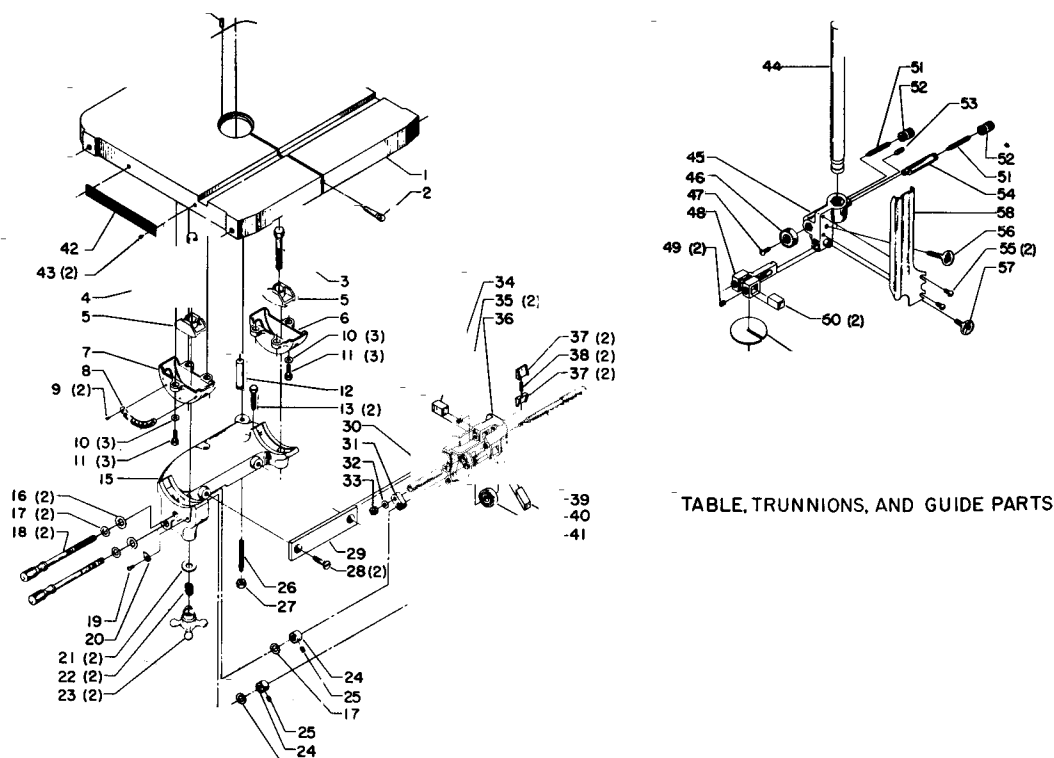

TABLE, TRUNNIONS, AND GUIDE PARTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	426-02-091-0002	Table	426-02-355-0004	Lower Blade Guide, Const. Of:	
2	426-02-071-0001	Tapered Table Pin	426-02-004-0001	Rail for Lower Guide Brkt.	
3	901-01-060-0625	7/16-14 X 2-1/4" HHCS	904-10-101-3166	Spacing Sleeve	
4	901-01-060-0631	7/16-14 X 4" HHCS	426-02-014-0007	Adj. Link for Support Brkt.	
5	426-02-027-0001	Trunnion Clamp Shoe	904-01-010-1603	Steel Washer	
6	426-02-095-0002	Trunnion	902-01-120-1034	1/4"-20 Hex Nut	
7	426-02-395-0002	Trunnion Assy., Incl:	952-02-011-3254	Blade Guide Block	
8	951-02-010-7832	Scale	901-04-190-0225	5/16-18 X 1/4" SHSS	
9	903-01-102-2693	Alum. Rivet	426-02-014-0006	Sup. Brkt. for Lower Guide	
10	904-01-010-1603	Steel Washer	426-02-098-0001	Wedge for Lower Guide Brkt.	
11	901-01-060-0612	1/4-20 X 5/8" HHCS	928-01-021-3387	Coil Spring	
12	426-02-088-0001	Removable Base Table Stop	426-02-106-0005	Shaft for Support Bearing	
13	901-01-060-0602	5/16-18 X 1-1/4" Fil. HCS	952-02-011-3253	Angle Guide Block	
14	905-01-010-6711	1/8 X 3/8" Roll Pin	920-08-020-5352	Bearing	
15	426-02-014-0002	Trunnion Support Bracket	Nameplate	By Request Only	
16	928-04-010-7383	13/32" Spring Washer	901-06-450-2250	#4 X 3/16" Drive Scr.	
17	904-07-010-5571	25/64" Fiber Washer	1087780	Guide Post	
18	426-02-412-0004	Adj. Scr. w/Knob	426-02-355-0002	Upper Blade Guide, Const. Of:	
19	901-02-010-7562	#10-32 X 5/16" RHS	426-02-089-0002	Bracket	
20	951-01-010-7802	Pointer	920-08-020-5352	Bearing	
21	904-01-010-1606	Steel Washer	901-02-010-0509	1/4-20 X 1/2" RHS	
22	928-01-021-4125	Spring	426-02-355-0003	Brkt. w/Guide Blocks, Const. Of	
23	931-03-011-4097	Hand Knob	426-02-014-0004	Guide Block Brkt.	
24	426-03-388-0001	Set Collar, Incl:	901-04-190-0225	5/16-18 X 1/4" SHSS	
25	901-04-080-0101	1/4-20 X 1/4" Hdls, Set Scr.	952-02-011-3254	Blade Guide Block	
26	901-04-080-0105	5/16-18 X 2" Hdls, Set Scr.	901-04-081-3629	Hdls, Set Scr.	
27	902-02-010-1300	5/16"-18 Hex Nut	902-08-041-3064	Knurled Nut	
28	901-02-030-0408	5/16-18 X 3/4" Flat Hd. Scr.	901-04-190-0207	5/16-18 X 1/2" Flat Hd. Scr.	
			426-02-106-0009	Hex Shaft	
			901-02-010-0514	1/4-20 X 3/8" RHS	
			901-04-260-1528	5/16-18 X 1" Thumb Scr.	
			901-04-260-1520	Thumb Scr.	
			426-02-054-0001	Sliding Blade Guard	
			426-03-063-0003	Steel Insert	

NOT SHOWN ASSEMBLED

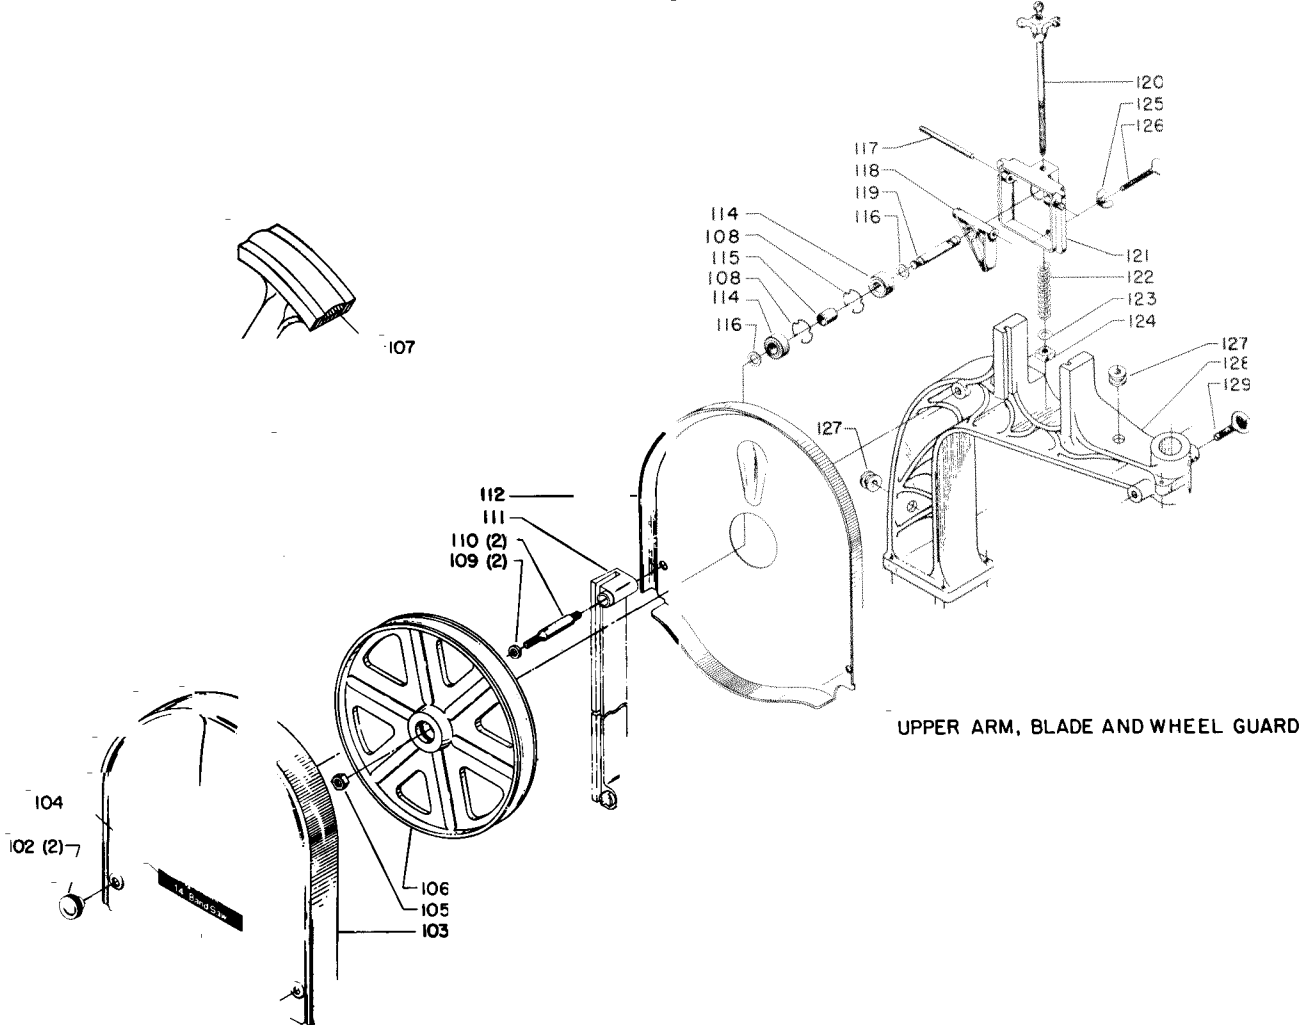


UPPER ARM, BLADE AND WHEEL GUARD

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
	1087256	Knob		426-02-359-0002	Sliding Brkt., Const. Of:
	426-02-354-0005	Upper Wheel Guard, Incl: Nameplate		905-04-141-3146	Steel Pin
	902-01-020-1227	By Request Only		426-02-059-0001	Upper Wheel Shaft Hinge
	902-01-020-1227	1/2"-20 Hex Jam Nut		426-02-106-0004	Upper Wheel Shaft
	426-03-400-0007	Upper Wheel, Incl:		426-02-412-0002	Blade Tension Scr. w/Star Wheel
	426-02-094-0001	Tire		426-02-014-0003	Upper Wheel Sliding Brkt.
	426-02-079-0001	Bearing Retainer		928-01-041-3386	Coil Spring
	904-01-010-1615	13/32 Steel Washer		904-07-010-5572	13/32" Fiber Washer
	901-07-251-3225	Stud		902-02-050-1317	Sq. Nut
	1087232	Cyclac Guard		902-04-010-1403	5/16"-18 Wing Nut
	426-02-054-0004	Upper Wheel Guard Pan		901-04-261-4005	5/16-18 X 2-1/4" Thumb Scr.
	920-04-010-7273	Bearing (Current Model, SEE A)		961-03-010-2858	Rubber Grommet (Early Models Only)
	920-08-020-5336	Bearing (Early Model, SEE A)		426-02-089-0005	Upper Frame Arm
	1088176	Spacing Sleeve (Current Model, SEE A)		901-04-260-1531	7/16-14 X 1-1/4" Thumb Scr.
	904-10-031-3835	Spacing Sleeve (Early Model, SEE A)			
	904-01-031-4974	Washer			

NOT SHOWN ASSEMBLED

SERVICE NOTES

- A Models made prior to 1974 Use Bearing, 920-08-020-5336 and Spacing Sleeve, 904-10-031-3835. Current Bearing, 920-04-010-7273 and Spacing Sleeve, 1088176 may be used in Early Models if they are used together and with required Washer, 904-01-031-4974. Individual parts are not interchangeable.

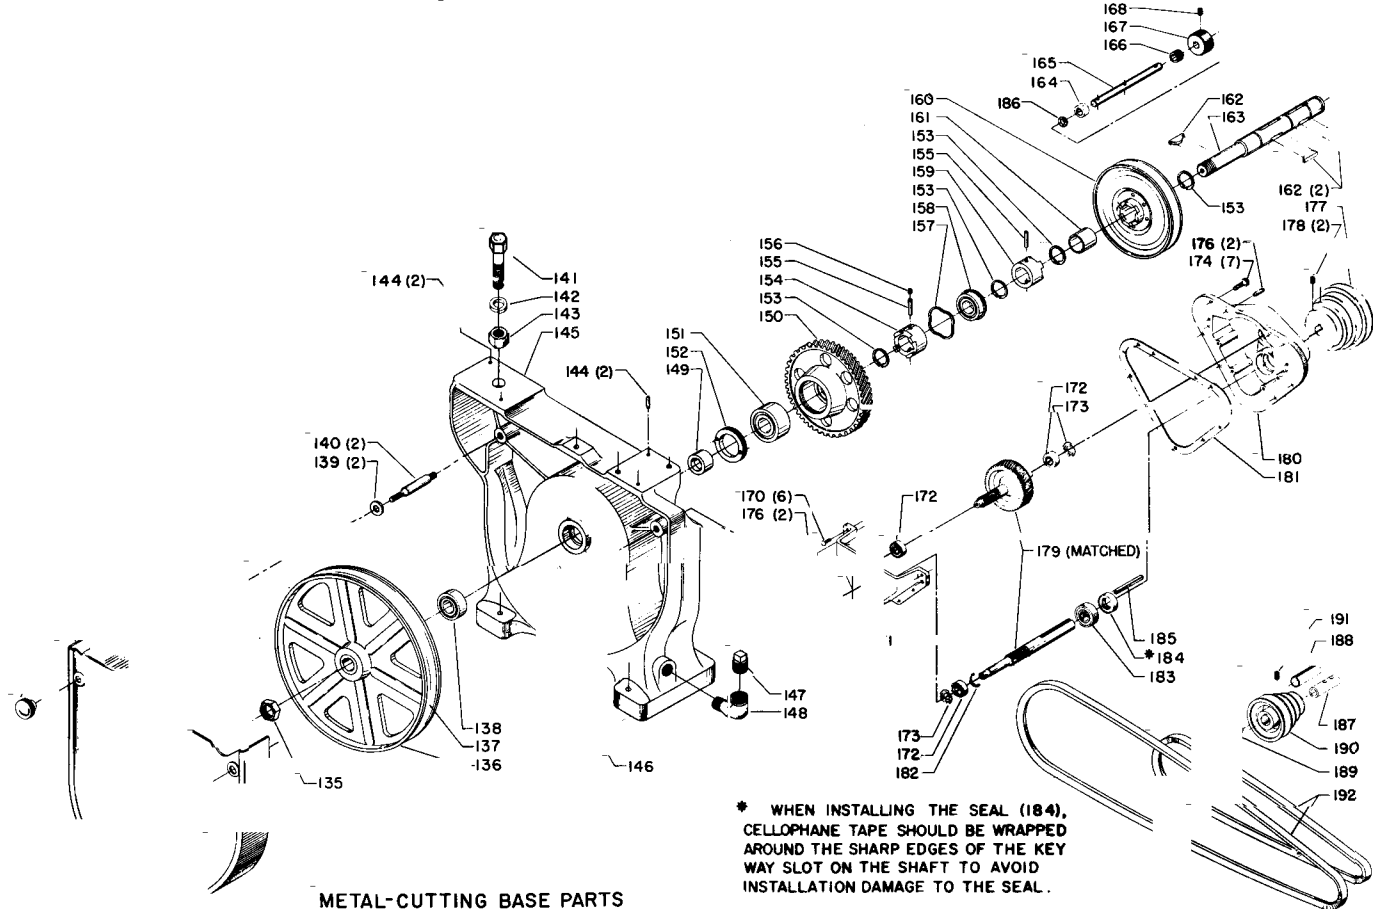

METAL-CUTTING BASE PARTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
	1087256	Knob		426-03-017-0003	Felt Bushing
	426-02-054-0002	Lower Wheel Guard		426-03-108-0002	Shifter Rod
	902-01-201-2560	L.H. Hex Nut		426-03-017-0001	Threaded Bushing
	426-03-400-0006	Lower Wheel, Incl:		904-10-211-3871	Knob
	426-02-094-0001	Tire		901-04-170-0261	5/16-18 X 5/16" SHSS
	920-08-020-5398	Bearing		901-02-010-0559	#10-32 X 1/2" RHS
	904-01-010-1615	13/32" Steel Washer		426-03-031-0004	Cover
	901-07-251-3225	Stud		920-04-020-5375	Bearing
	901-01-060-9062	3/4-10 X 2-3/4" HH Bolt		928-07-010-7354	Bearing Loading Spring
	904-02-020-1707	3/4" Lockwasher		901-01-060-0626	1/4-20 X 3/4" HHCS
	902-01-100-1027	3/4"-10 Hex Nut		905-01-010-5075	1/4 X 3/4" Roll Pin
	905-04-071-4460	Tapered Dowel Pin		41-724	Pulley, Incl:
	426-03-005-0003	Base		901-04-190-0201	5/16-18 X 5/16" SHSS
	906-00-000-2438	1/8" Pipe Plug		426-03-351-0006	Inter. Gear w/Shaft (Matched)
	906-00-000-2437	1/2" Pipe Plug		426-03-013-0002	Gear Housing
	906-00-000-3545	90 Degree Street Elbow		426-03-116-0001	Gasket
	904-10-141-3882	Spacer		904-15-220-7047	Retaining Ring
	426-03-351-0009	Gear, Const. Of:		920-04-020-5374	Bearing
	426-03-051-0006	Gear		908-00-000-5253	Seal
	920-07-080-5397	Bearing		927-03-010-2651	Key
	426-03-079-0002	Retainer Nut		908-00-000-3695	"O" Ring
	904-15-010-7420	Retainer Ring		426-03-017-0002	3/4 to 1/2" Reducing Bushing
	426-03-028-0005	Clutch		426-03-017-0004	3/4 to 5/8" Reducing Bushing
	905-01-010-2732	5/32 X 1" Roll Pin		927-03-101-8019	Key
	901-04-150-9417	#10-32 X 3/16" SHSS		41-714	Motor Pulley, Incl:
	928-06-021-3393	Washer		901-04-190-0201	5/16-18 X 5/16" SHSS
	920-04-020-5399	Bearing		49-111	V-Belt (Matched Set of 2 Belts)
	426-03-028-0006	Clutch		28-062	Band Saw Blade
	926-01-991-5608	Drive Pulley, Incl:			
	920-75-011-3914	Bushing	*	NOT SHOWN ASSEMBLED	
	927-01-100-2640	#808 Hi-Pro Key	**	NOT SHOWN	
	426-03-106-0013	Shaft			