

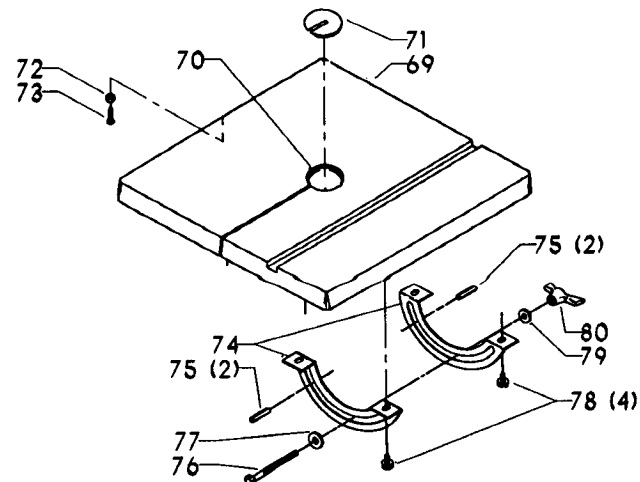
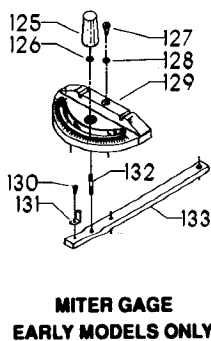
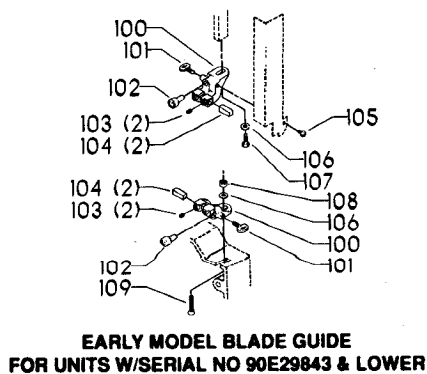


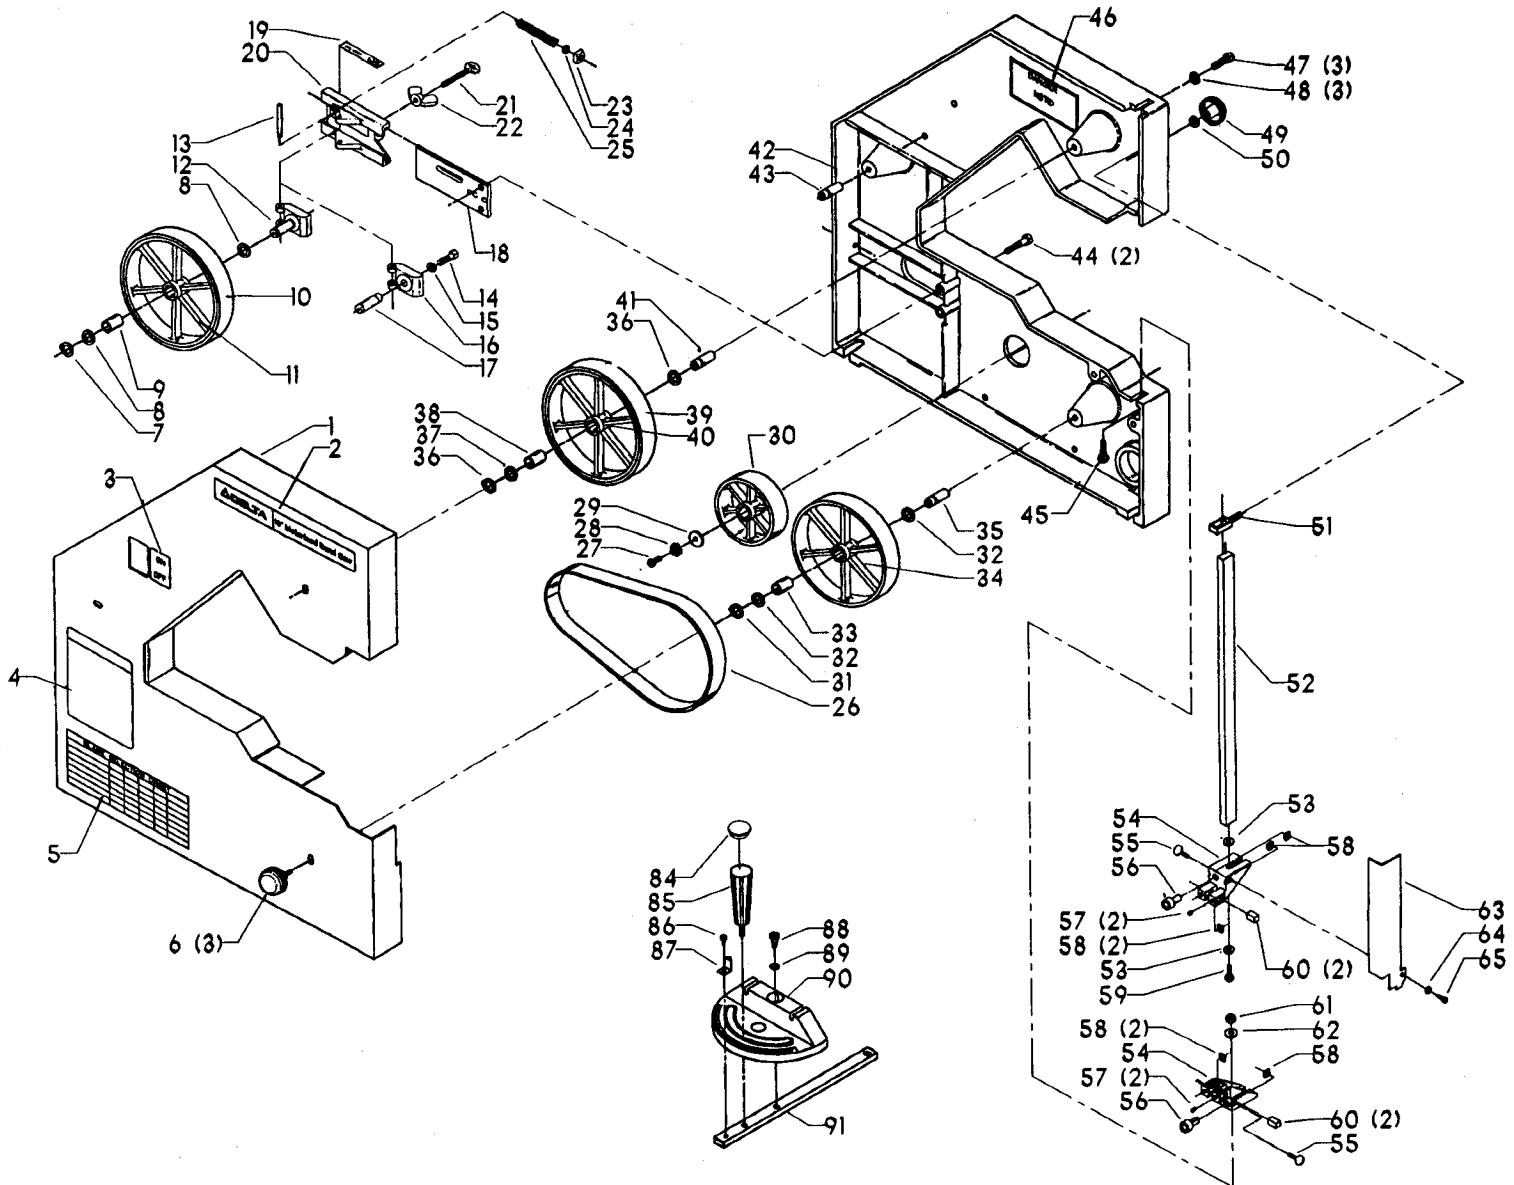

REPLACEMENT PARTS

REF NO	PART NUMBER	DESCRIPTION	REF NO	PART NUMBER	DESCRIPTION
1	419-96-331-0002	COVER	57	901-04-150-1186	#10-32 X 1/4" HEX SOC SET SCREW (Current Models Only)
2	426-13-754-0004	NAMEPLATE	58	902-02-040-1309	#10-32 SQUARE NUT
3	419-96-754-0010	SWITCH DECAL (Early Models Only)	59	901-01-060-0612	1/4-20 X 5/8" HEX HD SCREW
4	426-00-752-0006	WARNING LABEL	60	419-96-010-0001	GUIDE BLOCK
5	426-13-754-0008	BLADE CHART GUIDE	61	902-01-010-1300	5/16-18 HEX NUT (Current Models Only)
6	419-96-138-0003	KNOB	62	904-01-010-1620	FLAT WASHER (Current Models Only)
7	904-15-011-7116	EXT RET RING	63	419-96-054-0001	BLADE GUARD
8	1230880	FIBER WASHER	64	904-01-010-1610	FLAT WASHER (Current Models Only)
9	1231156	BEARING	65	901-03-010-3318	#10-32 X 3/8" HEX SOC HD SCREW (Current Models Only)
10	419-96-094-0001	TIRE	69	419-96-091-0001	TABLE
11	419-96-100-0001	WHEEL	70	905-01-010-6711	1/8" X 3/8" SPRING PIN (Early Models Only)
12	419-96-059-0002	HINGE ASSY (Current Models Only)	71	426-02-063-0002	TABLE INSERT
13	905-04-101-3133	1/4" X 2 1/8" DOWEL PIN	72	902-01-120-1034	1/4-20 HEX NUT
14	901-01-060-0642	3/8-16 X 1" HEX HD SCREW (Early Models Only)	73	901-01-060-0623	1/4-20 X 1" HEX HD SCREW
15	904-02-020-1704	3/8" LOCK WASHER	74	419-96-095-0001	TRUNNION
16	419-96-059-0001	HINGE BRACKET (Early Models Only)	75	905-01-010-2728	3/8" X 1 1/4" SPRING PIN
17	419-96-106-0002	WHEEL TENSIONING SHAFT (Early Models Only)	76	901-11-020-0835	3/8-16 X 3 1/2" CARRIAGE HD SCREW
18	419-96-072-0001	PLATE	77	904-01-010-1636	FLAT WASHER
19	419-96-754-0002	ADJUSTMENT DECAL (Early Models Only)	78	1231355	5/16-18 X 1/2" HEX WASHER HD SCREW
20	419-96-014-0007	BRACKET	79	904-10-031-2093	WASHER
21	901-04-261-4010	5/16-18 x 2" THUMB SCREW	80	419-96-138-0004	KNOB
22	902-04-010-1403	5/16-18 WING NUT	84	422-02-074-0001	HOLE PLUG
23	902-02-040-1303	5/16-18 SQUARE NUT	*	34-322	MITER GAGE ASSY (Current Models Only), CONST OF:
24	419-96-075-0001	FIBER WASHER	85	422-02-060-0003	HANDLE
25	928-01-041-5852	SPRING	86	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
26	419-96-133-0005	DRIVE BELT - FOR WOOD	87	1087397	POINTER
27	901-03-043-1191	5/16-18 X 1/2" BUTTON HD SCREW	88	422-34-112-0002	PIVOT SCREW
28	904-03-030-1656	5/16" EXT TOOTH WASHER	89	1086926	SPRING WASHER
29	904-01-031-2937	FLAT WASHER	90	422-34-050-0001	BODY
30	419-96-130-0001	DRIVE PULLEY - HIGH SPEED	91	422-34-004-0001	BAR
31	904-15-011-7116	EXT RET RING			
32	1230880	FIBER WASHER			
33	1231156	BEARING			
34	419-96-100-0001	WHEEL			
35	419-96-106-0001	SHAFT			
36	904-15-011-7116	EXT RET RING	100	426-01-014-0002	GUIDE BRACKET
37	1230880	FIBER WASHER	101	901-04-260-1505	1/4-20 X 1/2" THUMB SCREW
38	1231156	BEARING	102	1231546	THRUST BEARING
39	419-96-094-0001	TIRE	103	901-04-150-0208	1/4-20 X 1/4" HEX SOC SET SCREW
40	419-96-100-0001	WHEEL	104	419-96-010-0001	GUIDE BLOCK
41	419-96-106-0001	SHAFT	105	901-02-010-0514	1/4-20 X 3/8" ROUND HD SCREW
42	419-96-049-0001	FRAME	106	904-01-010-1614	FLAT WASHER
43	419-96-106-0001	SHAFT	107	901-01-060-0612	1/4-20 X 5/8" HEX HD SCREW
44	901-01-060-0682	3/8-24 X 1 1/2" HEX HD SCREW	108	902-01-120-1034	1/4-20 HEX NUT
45	901-11-020-0808	5/16-18 X 1" CARRIAGE HD SCREW (Current Models Only)	109	901-03-033-1447	SCREW
46	419-96-754-0009	WARNING LABEL	*	1087469	MITER GAGE ASSY (Early Models Only), CONST OF:
47	901-01-060-0642	3/8-16 X 1" HEX HD SCREW	125	1087524	KNOB
48	904-02-020-1704	3/8" LOCK WASHER	126	904-07-010-5555	1/4" FIBER WASHER
49	419-96-138-0002	KNOB	127	1086924	SCREW
50	904-07-010-5571	FIBER WASHER	128	1086926	SPRING WASHER
51	419-96-314-0001	BRACKET ASSY	129	422-34-050-0001	BODY
52	419-96-004-0001	BLADE GUIDE BAR	130	0908459	#08-32 X 3/8" PAN HD SCREW
53	904-01-031-2934	1/4" FLAT WASHER (Current Models Only)	131	1087397	POINTER
54	419-96-014-0008	GUIDE BRACKET (Current Models Only)	132	1087519	STUD
55	901-04-260-1542	#10-32 X 1/2" THUMB SCREW	133	422-34-004-0001	BAR
56	1231546	THRUST BEARING	*	NOT SHOWN ASSEMBLED	

ITEMS 100 THRU 109 FOR USE ON UNITS W/SERIAL NO 90E29843 AND LOWER

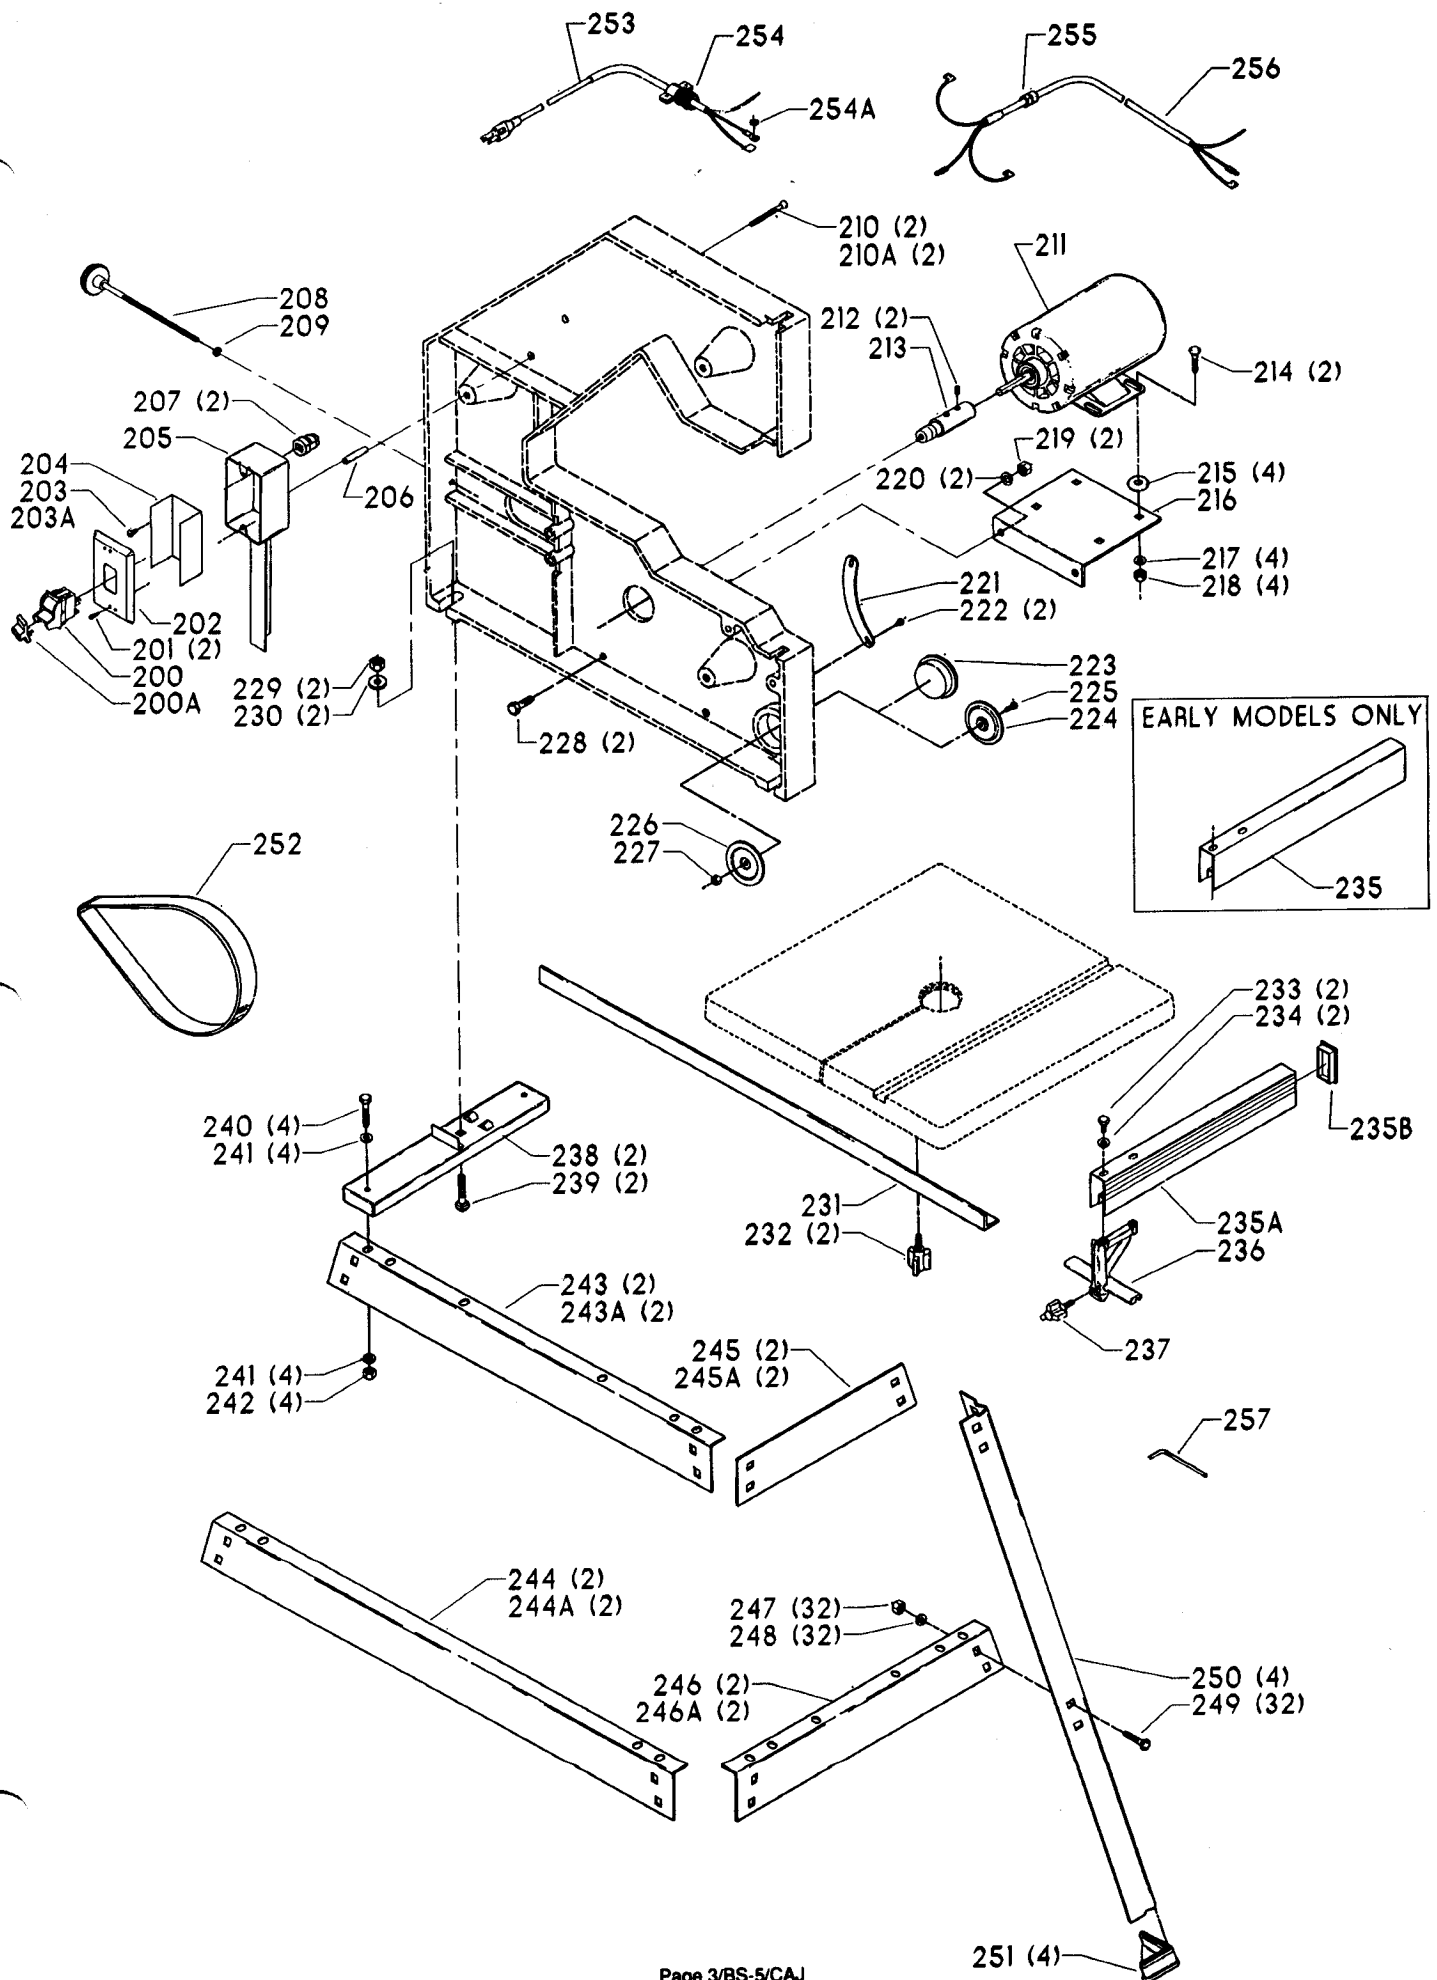

REPLACEMENT PARTS

REF NO	PART NUMBER	DESCRIPTION	REF NO	PART NUMBER	DESCRIPTION
200	438-01-017-0140	POWER SWITCH, INCL:	*	419-96-343-0001	FENCE ASSY, CONST OF:
200A	400-06-068-0002	SWITCH KEY	233	901-01-060-0605	5/16-18 X 1/2" HEX HD SCREW
201	901-02-010-0564	#06-32 X 3/8" ROUND HD SCREW	234	904-01-010-1620	FLAT WASHER
202	402-09-031-0002	SWITCH PLATE	235	419-96-343-0002	FENCE - STEEL (<i>Early Models Only</i>)
203	901-06-121-7383	#10-24 X 3/8" PAN HD SCREW (<i>Early Models Only</i>)	235A	419-96-043-0003	FENCE - ALUMINUM (<i>Current Models Only</i>)
203A	901-02-453-1123	#10-32 X 1/2" PAN HD SCREW (<i>Current Models Only</i>)	235B	419-96-074-0002	END CAP (<i>Current Models Only</i>)
204	438-01-011-0036	INSULATION	236	419-96-084-0003	SLIDE
205	419-96-301-0001	BOX ASSY	237	419-96-138-0005	KNOB
206	1230523	SPACER	238	419-96-048-0001	FOOT
207	419-96-014-0004	CLAMP	239	901-11-020-0823	3/8-16 X 1 1/2" CARRIAGE HD SCREW
208	419-96-406-0001	TENSION ASSY	240	901-01-060-0609	5/16-18 X 1 1/2" HEX HD SCREW
209	419-96-075-0001	FIBER WASHER	241	904-01-010-1620	FLAT WASHER
210	901-02-030-0957	1/4-20 x 2" FLAT HD SCREW (<i>Early Models Only</i>)	242	902-01-010-1300	5/16-18 HEX NUT
210A	901-01-060-3068	1/4-20 X 2" HEX HD SCREW (<i>Current Models Only</i>)	*	50-540	STAND, CONST OF:
211	62-070	MOTOR - 1/2" HP, SINGLE PHASE	243	427-99-014-0063	BRACKET (2.46" H X 25.68" W X .90" D <i>Current Models Only</i>)
212	901-04-150-0206	5/16-18 X 5/16" HEX SOC SET SCREW	243A	427-99-014-0041	BRACKET (2.96" H X 25.68" W X .94" D <i>Early Models Only</i>)
213	419-96-003-0001	ARBOR	244	427-99-014-0062	BRACKET (2.46" H X 31.68" W X .90" D, <i>Current Models Only</i>)
214	901-11-020-0808	5/16-18 X 1" CARRIAGE HD SCREW	244A	427-99-014-0056	BRACKET (2.96" H X 31.68" W X .94" D, <i>Early Models Only</i>)
215	1231516	3/8" RUBBER WASHER	245	427-99-014-0061	BRACKET (2.46" H X 12.18" W X .90" D, <i>Current Models Only</i>)
216	419-96-014-0001	MOTOR PLATE	245A	427-99-014-0057	TIE BAR (2.69" H X 12.18" W X .94" D, <i>Early Models Only</i>)
217	904-01-010-1620	FLAT WASHER	246	427-99-014-0064	BRACKET (2.46" H X 18.18" W X .90" D, <i>Current Models Only</i>)
218	902-01-010-1300	5/16-18 HEX NUT	246A	427-99-014-0031	BRACKET (2.69" H X 18.18" W X .94" D, <i>Early Models Only</i>)
219	902-01-010-5900	3/8-16 JAM NUT	247	902-01-010-1300	5/16-18 HEX NUT
220	904-02-020-1704	3/8" LOCK WASHER	248	904-01-010-1620	FLAT WASHER
221	419-96-132-0001	SCALE	249	901-11-023-1476	5/16-18 X 5/8" CARRIAGE HD SCREW
222	901-02-160-3729	#08-32 X 1/4" PAN HD SCREW	250	427-99-066-0034	LEG
223	419-96-074-0001	HOLE PLUG (<i>Intermediate Models Only, See Service Note A</i>)	251	427-99-048-0001	FOOT
224	419-96-031-0002	COVER (2) - NO THREADS (<i>See Service Note A</i>)	252	419-96-133-0007	DRIVE BELT - FOR METAL
225	901-02-010-0535	1/4-20 X 1 1/4" ROUND HD SCREW (<i>See Service Note A</i>)	253	438-01-302-0647	CORD SET
226	419-96-031-0001	COVER - THREADED (<i>Early Models Only See Service Note A</i>)	254	438-01-004-0007	CORD CONNECTOR
227	902-01-120-1034	1/4-20 HEX NUT (<i>See Service Note A</i>)	254A	904-03-030-1795	3/16" EXT TOOTH LOCKWASHER
228	901-01-060-0642	3/8-16 X 1" HEX HD SCREW	255	438-01-004-0079	HEYCO BUSHING
229	902-01-010-5900	3/8-16 JAM NUT	256	438-01-302-0646	CORD SET
230	904-10-031-2093	WASHER	257	955-03-010-0003	WRENCH
231	419-96-129-0002	RAIL	**	438-01-004-0054	CLAMP
232	1231549	KNOB			

* NOT SHOWN ASSEMBLED
** NOT SHOWN

SERVICE NOTE:

A - *Early models used one threaded (Ref No 226) and one unthreaded (Ref No 224) cover and a round head screw (Ref No 225). intermediate models used one plastic plug (Ref No 223). Current models use two unthreaded (Ref No 224) covers, a round head screw (Ref No 225) and a hex nut (Ref No 227).*

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta International Machinery Corp. strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Center for service/repairs. Any product which is presented to a Delta Authorized Service Center for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.