


31-134, 31-135, & 31-136 12" DISC FINISHING MACHINE

AFM-5E

PART NO.416-02-651-0010


Date: 10/18/01

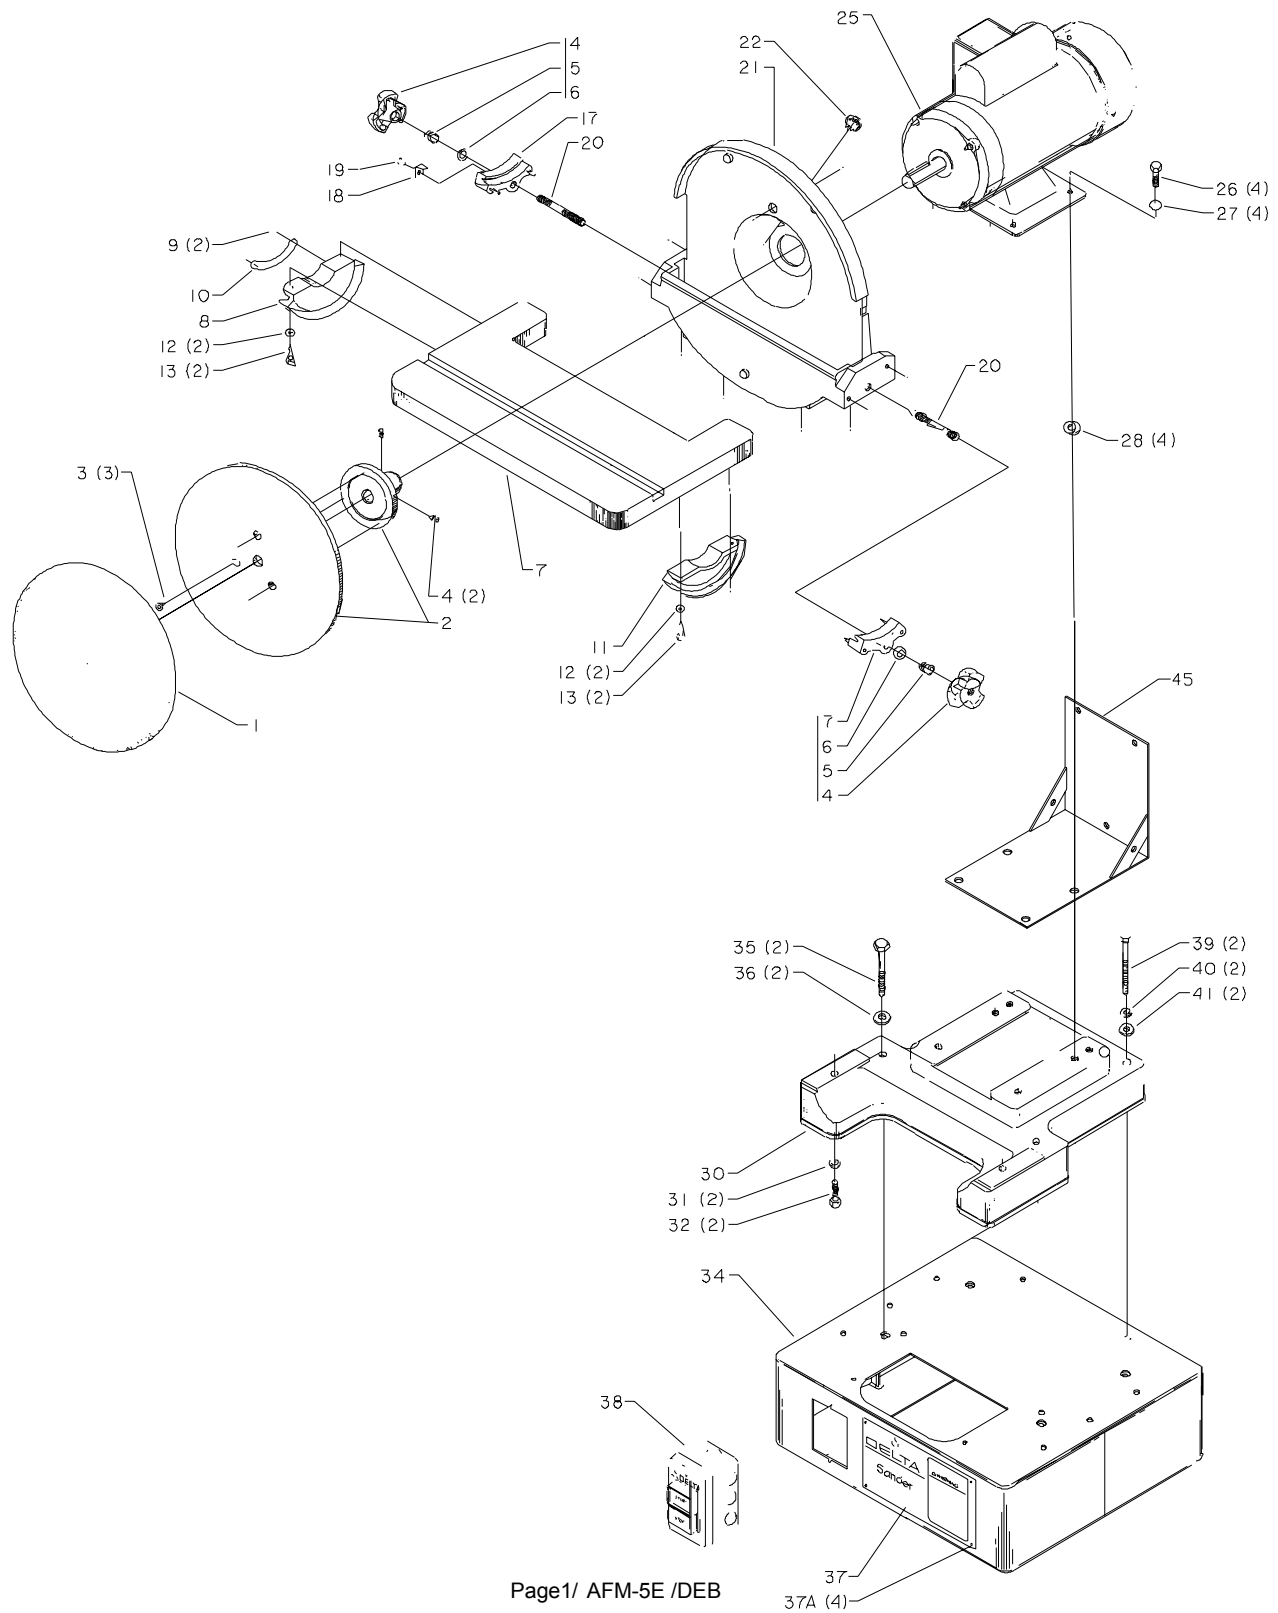

REPLACEMENT PARTS

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	SEE CATALOG	ABRASIVE DISC
2	1085259	DISK ASSY, INCL:
3	901-03-030-0761	1/4-20 X 1/2" FLAT HD SCREW
4	901-04-190-0201	5/16-18 X 5/16" HEX SOC SET SCREW
7	416-02-091-0002	TILTING TABLE
*	416-02-395-0001	TRUNNION ASSY, CONST OF:
8	416-02-095-0001	TRUNNION
9	901-06-450-2250	04 X 3/16" ROUND HD SCREW
10	951-02-010-7820	TILT SCALE
11	416-02-095-0001	TRUNNION
12	904-01-010-1614	FLAT WASHER
13	901-01-060-0612	1/4-20 X 5/8" HEX HD SCREW
14	406-03-138-0004	KNOB
15	928-01-021-4125	SPRING
16	904-01-031-2925	FLAT WASHER
17	416-02-327-0002	CLAMP W/ROLL PINS
18	422-04-075-5001	POINTER
19	901-02-010-0502	1/4-20 X 1/4" ROUND HD SCREW
20	420-01-111-0003	STUD
21	416-02-054-0005	GUARD
22	961-01-010-7499	HOLE PLUG
25	82-041	MOTOR - 115/230V, SINGLE PHASE
	86-038	MOTOR - 208V-230V/460V, THREE PHASE
26	901-01-060-0607	5/16-18 X 3/4" HEX HD SCREW
27	904-01-010-1605	3/8" FLAT WASHER
28	904-10-031-2097	WASHER
30	416-02-005-0003	BASE
31	904-02-020-1704	3/8" LOCK WASHER
32	901-01-060-0642	3/8-16 X 1" HEX HD SCREW
34	n 31-138	SUB BASE, INCL:
35	901-01-060-0645	3/8-16 X 3" HEX HD SCREW
36	904-01-010-1606	3/8" FLAT WASHER
37	406-03-137-0005	NAMEPLATE
37A	1087794	RIVET
38	52-346	SWITCH - SINGLE PHASE MANUAL PUSH BUTTON
	52-348	SWITCH - SINGLE & 3 PHASE PUSH BUTTON MA
**	52-702	THREE PHASE MOTOR STARTER
**	52-704	SINGLE PHASE MOTOR STARTER
39	901-01-060-3118	5/16-18 X 3" HEX HD SCREW
40	904-02-010-1703	5/16" LOCK WASHER
41	904-01-010-1605	3/8" FLAT WASHER
45	416-02-314-0002	BRACKET
**	406-00-752-0001	WARNING DECAL
*	NOT SHOWN ASSEMBLED	
**	NOT SHOWN	

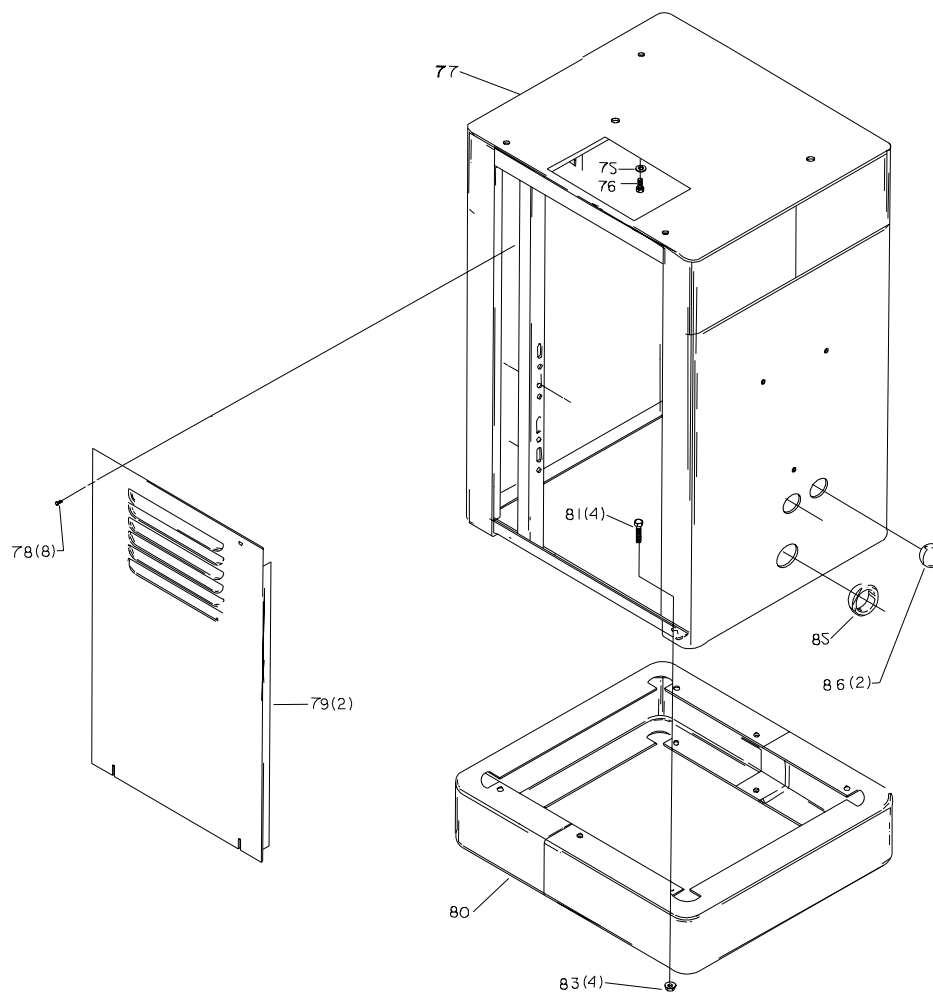

Ref.	No.	Part No.	Description
**	n	50-142	ENCLOSED STEEL STAND, CONST OF:
75		904-02-010-1703	5/16" LOCK WASHER
76		901-03-010-0762	5/16-18 X 5/8" HEX SOC HD SCREW
77		406-03-318-0002	CABINET ASSY
78		901-06-443-1806	10- X 1/2" HEX HD SCREW
79		436-01-123-0008	SIDE PANEL
80		436-01-305-0001	SUB BASE
81		901-01-060-0607	5/16-18 X 3/4" HEX HD SCREW
83		902-01-503-1514	5/16-18 FLANGE NUT
85		438-01-011-0020	INSULATOR
*		438-01-011-0051	BUSHING INSULATOR
86		438-01-011-0065	PLUG
*		NOT SHOWN ASSEMBLED	
**		NOT SHOWN	

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.