


1062, 1063, 31-350, 31-351, 31-352, 31-355 1" SANDER/GRINDER

AFM-1

406-04-651-0002

Revised 5-31-90

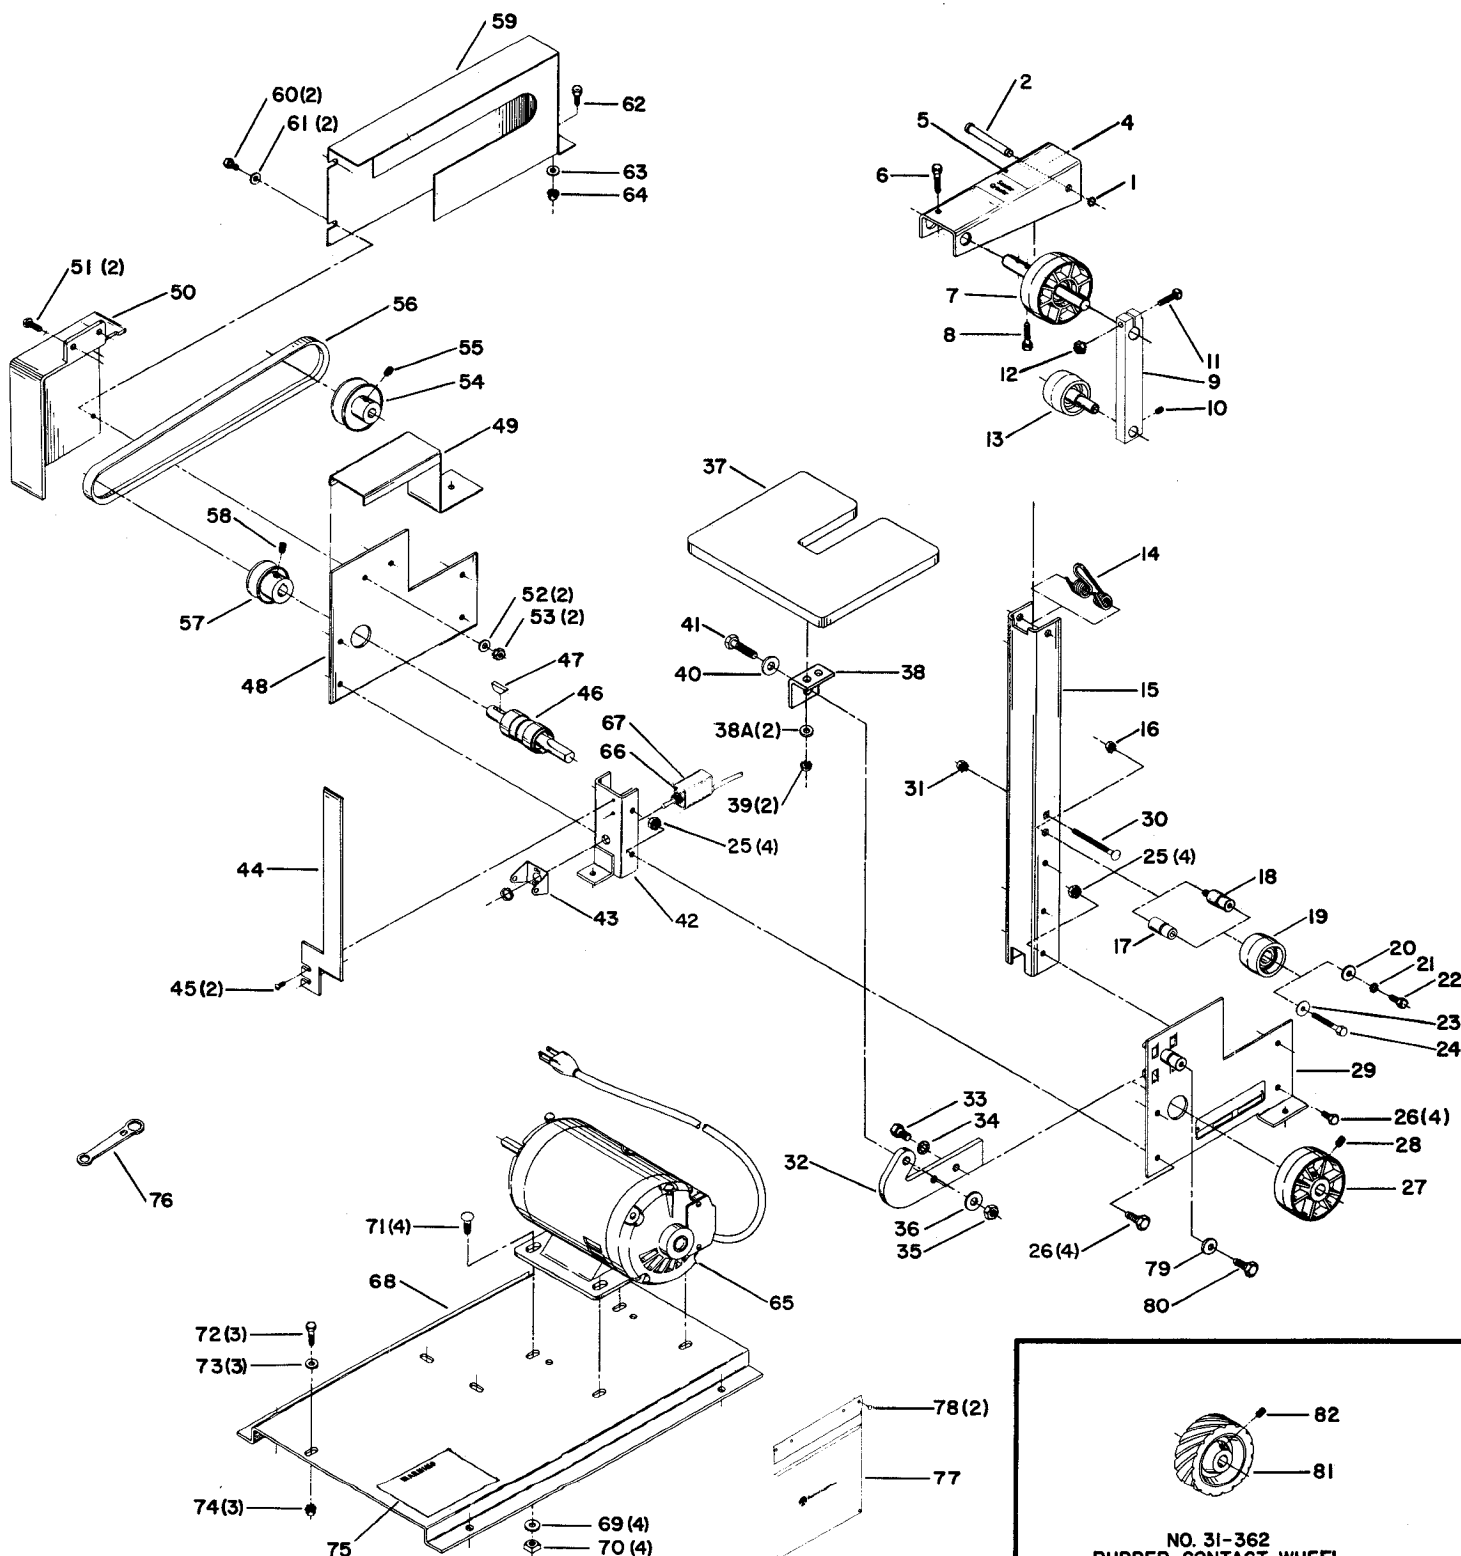

NO. 31-362
RUBBER CONTACT WHEEL
(NOT INCLUDED WITH
BASIC MACHINE)

REPLACEMENT PARTS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	904-15-010-7423	Retaining Ring	40	904-01-010-1606	7/16 x 1 x 5/64" Washer
2	406-07-071-0001	Shaft	41	901-01-060-0617	3/8-16 x 1 1/2" Hex Hd Cap Screw
4	406-04-004-0001	Overarm	42	406-04-330-0003	Front Cover Plate
5	406-04-754-0003	Nameplate	43	424-01-014-0002	Switch Guard (Supplied with Motor/Switch Assembly)
6	901-01-060-0655	1/4-20 x 1" Hex Hd Screw	44	31-363	1" Flat Platen
7	406-04-406-0002	Pulley w/Bearings & Shaft	45	901-02-140-0584	#10-32 x 3/8" Rd Hd Screw
8	901-01-060-0655	1/4-20 x 1" Hex Hd Screw	46	920-10-991-6615	Arbor w/Bearings
9	1088184	Idler Arm	47	927-01-100-2604	#606 Hy Pro Key
10	901-04-150-0208	1/4-20 x 1/4" Set Screw	48	406-04-072-0002	Left Plate
11	901-11-010-2372	1/4-20 x 1 1/4" Sq Hd Bolt	49	406-04-031-0001	Cover
12	902-01-293-1240	1/4-20 Keps Unit	50	31-361	Arbor Pulley Guard, Incl:
13	406-04-406-0001	Idler Pulley w/Bearings & Shaft	51	901-01-060-0612	1/4-20 x 5/8" Hex Hd Cap Screw
14	928-02-251-8875	Torsion Spring	52	904-01-010-1614	9/32 x 5/8 x 1/16" Washer (Early Models Only)
15	406-07-030-0001	Column	53	902-01-293-1240	1/4-20 Keps Unit
16	902-01-293-1240	1/4-20 Keps Unit	54	41-023	5/8" Bore Mtr. Pulley, Incl:
17	406-07-106-0004	Idler Pulley Shaft	55	901-04-190-0201	5/16-18 x 5/16" Socket Set Screw
18	406-04-406-0008	(Current Models Only)	56	49-105	V-Belt
19	926-11-991-9440	Idler Pulley Shaft	57	926-01-041-9365	5/8" Bore Arbor Pulley, Incl:
20	904-01-031-4993	(Early Models Only)	58	901-04-190-0201	5/16-18 x 5/16" Socket Set Screw
21	904-03-030-1757	Idler Pulley	59	31-366	Belt Guard, Incl:
22	901-01-060-0611	17/64 x 3/4 x 1/16" Washer	60	901-01-060-0611	1/4-20 x 1/2" Hex Hd Screw
23	904-01-031-4993	(Early Models Only)	61	904-01-010-1614	9/32 x 5/8 x 1/16" Washer (Early Models Only)
24	901-01-060-3124	1/4" Lockwasher (Early Models Only)	62	901-01-060-0612	1/4-20 x 5/8" Hex Hd Screw
25	902-01-293-1240	1/4-20 x 1 1/2" Hex Hd Cap Screw	63	904-01-010-1614	9/32 x 5/8 x 1/16" Washer (Early Models Only)
26	901-01-060-0611	(Current Models Only)	64	902-01-293-1240	1/4-20 Keps Unit
27	926-11-991-9441	17/64 x 3/4 x 1/16" Washer	65	62-144	1/2 H.P., 115V Motor, Incl.:
28	901-04-150-0217	1/4-20 x 1 1/2" Hex Hd Cap Screw	66	438-01-628-0005	Switch
29	406-04-372-0001	(Current Models Only)	67	438-01-302-0441	Socket w/Cord
30	901-11-020-0858	1/4-20 Keps Unit	68	31-360	Base Plate, Incl:
31	902-01-293-1240	1/4-20 x 1/2" Hex Hd Cap Screw	69	904-01-010-1604	5/16 x 3/4 x 1/16" Washer
32	412-01-014-0001	Drive Pulley, Incl:	70	902-02-040-1303	5/16-18 Sq. Nut
33	901-01-060-0677	5/16-18 x 1/2" Socket Set Screw	71	901-11-020-0834	5/16-18 x 3/4" Carriage Bolt
34	904-03-020-1789	Right Plate Assembly	72	901-01-060-0612	1/4-20 x 5/8" Hex Hd Cap Screw
35	902-01-010-5900	1/4-20 x 3" Carriage Bolt	73	904-01-010-1614	9/32 x 5/8 x 1/16" Washer (Early Models Only)
36	904-01-010-1606	1/4-20 Keps Unit	74	902-01-293-1240	1/4-20 Keps Unit
37	406-04-391-0005	Table Bracket	75	406-00-752-0001	Warning Label
38	406-04-014-0004	3/8-24 x 1/2" Hex Hd Cap Screw	76	955-01-020-0022	7/16 x 9/16" Box Wrench (Early Models Only)
38A	904-01-010-1614	3/8" Lockwasher	77	400-06-603-0001	Envelope
39	902-01-293-1240	3/8-16 Hex Nut	78	400-06-079-0001	Retainer
		7/16 x 1 x 5/64" Washer	79	904-01-031-4993	17/64 x 3/4 x 1/16" Washer
		Table Assembly, Incl:	80	901-01-060-0611	1/4-20 x 1/2" Hex Hd Cap Screw
		Bracket	81	31-362	4" Rubber Contact Wheel, Incl:
		9/32 x 5/8 x 1/16" Washer	82	901-04-150-0206	5/16-18 x 5/16" Socket Set Screw
		1/4-20 Keps Unit			

1232G

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.