



* WHEN REPLACING THE PIVOT SHAFT (REF. NO. 86), HOLE FOR ROLL PIN (REF. NO. 87) MUST BE DRILLED WITH THE ARM (REF. NO. 85) AND PIVOT SHAFT (REF. NO. 86) ASSEMBLED.

Replacement Parts

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	955-03-020-2200	5/16" Hex Wrench	58	1086343	Cover
2	955-01-030-1489	Wrench	60	901-25-030-2027	#10 X 1-1/4 RHWS
3	902-01-201-8563	5/8-18 Arbor Nut	61	904-02-010-1701	3/16 Split Lockwasher
4	422-04-103-5009	Flange	62	904-01-010-1610	Washer
5	34-708	9" Comb. Blade	63	901-02-010-0501	1/4-20 X 1" Mach. Scr.
6	901-06-121-7381	#10-24 X 1/2" Thread Form Scr.	64	904-02-020-1702	1/4 Split Lockwasher
7	904-02-010-1701	3/16 Split Lockwasher	65	904-01-010-1604	Washer
8	49-203	Dust Chute	68	422-17-043-0002	Fence
9	422-17-354-0002	Guard Ass'y., Incl:	69	901-02-010-0535	1/4-20 X 1-1/4 Mach. Scr.
10	422-17-031-0003	Dust Chute Deflector	70	904-01-010-1604	Washer
11	901-06-161-7382	#8-32 X 1/2" Thread Form Scr.	71	422-17-091-0001	Table
12	901-02-010-0503	1/4-20 X 5/8 RHMS	72	904-08-021-3886	Rubber Washer
13	904-01-010-1614	Washer	73	422-17-305-0001	Base Ass'y., Incl:
14	422-17-104-0001	Nylon Spacer	74	422-17-019-0002	90 Degree Positive Stop
15	422-17-054-0003	Movable Guard	75	901-02-010-0558	#8-32 X 1/4 Mach. Scr.
16	904-01-010-1614	Washer	76	904-01-010-1602	Washer
17	901-02-010-0509	1/4-20 X 1/2" Mach. Scr.	77	951-02-011-8288	Scale Nameplate
18	1087220	Flange	78	901-04-150-6227	1/4-20 X 3/16" Set Scr.
19	925-01-032-1060	Positive Drive Belt for Machines with Serial No. prior to DT-600	79	422-17-112-0004	Table Leveling Screw
19	49-083	Positive Drive Belt for Machines with Serial No. DT-600 & Higher	80	928-05-001-4104	Spring Washer
20	1087220	Driven Pulley - 29 Teeth	81	902-01-210-1091	5/8-18 Lock Nut
21	904-01-012-2479	Brass Washer	85	422-17-389-0003	Arm Ass'y., Incl:
*	422-17-331-0001	Motor Hou. Ass'y. Const. Of:	86	422-17-106-0001	Pivot Shaft
22	920-10-061-6632	Arbor Bearing, w/Ring	87	905-01-010-5091	3/8 X 2 Roll Pin
24	422-17-031-0001	Motor Housing - Left	88	904-02-010-1703	5/16 Split Lockwasher
25	901-06-161-7380	#10-24 X 3/4 Thread Form Scr.	89	901-01-060-0602	5/16-18 X 1-1/4 HHCS
27	928-07-010-7355	Load Spring	90	905-01-010-2735	1/8 X 1-1/4" Roll Pin.
28	438-02-335-0003	Armature Assembly	91	1088247	Pin
29	920-04-020-5335	Bearing	92	901-01-060-5773	5/8-18 X 3 King Bolt
30	904-15-012-0293	Retaining Ring	93	904-01-010-1622	Washer
31	920-04-091-6633	Bearing	94	901-02-010-0576	#8-32 X 5/8 Mach. Scr.
32	901-02-052-0716	#10-23 X 1-3/4 Screw	95	438-01-004-0015	Cable Clamp
33	904-03-030-1795	#10 Ext. Tooth Lockwasher	96	901-04-060-0317	5/16-18 X 2 Set Scr.
34	438-02-336-0004	Field Ass'y., Incl:	98	904-02-010-1703	5/16 Split Lockwasher
35	438-01-018-0029	Terminal	100	422-17-089-0002	Miter Control Handle
36	928-03-012-1753	Brake Spring	101	928-05-001-4104	Spring Washer
37	422-17-071-0002	Brake Pin	102	902-01-210-1091	5/8-18 Lock Nut
38	901-06-121-7383	#10-24 X 3/8 Thread Form Scr.	103	902-01-120-5436	#8-32 Hex Nut
39	438-01-017-0089	Trigger Switch	104	422-17-112-0002	1/2-13 Tension Adj. Scr.
40	842833	Brake Assembly	105	928-02-012-1752	Tension Spring
41	842828	Brake Lever	106	901-02-010-0509	1/4-20 X 1/2 RHMS
42	422-17-020-0001	Brake Lever Cap	107	902-01-120-1203	#10-32 Hex Nut
43	901-06-121-7383	#10-24 X 3/8 Thread Form Scr.	108	901-02-010-0559	#10-32 X 1/2" RHS
44	1086342	Insulator	109	422-17-319-0002	Miter Locking Lever
45	438-01-302-0224	Cable Ass'y., Incl:	110	422-17-027-0001	Clamp
46	438-01-018-0029	Terminal	111	422-17-060-0001	Miter Control Handle Cover
47	438-01-018-0006	Terminal	112	904-15-010-7419	Retaining Ring
48	422-17-072-0001	Plate	113	901-02-342-2013	1/4-20 X 1 Mach. Scr.
50	901-06-450-2250	Drive Screw	114	904-03-060-1665	1/4 Ext. Tooth Lockwasher
51	1086345	Spec. Plate	115	901-02-342-2032	1/4-20 X 3/4 Mach. Scr.
52	422-17-031-0002	Motor Housing - Right	116	901-04-191-9274	1/4-20 X 5/8 HSSS w/ Nylon Insert
53	Emblem	By Request Only	117	422-17-112-0001	Special Screw
54	901-04-090-0112	#10-32 X 1/2" Set Screw	118	904-02-102-2477	Spring Washer
55	438-02-011-0001	Brush Holder	119	928-03-012-1754	Stop Lever Spring
56	438-02-007-0001	Brush	120	422-17-088-0001	Stop Lever
57	803250	Brush Cap	*	NOT SHOWN ASSEMBLED	