




36-465 10" CONTRACTORS SAW

CS-4L-5D

PARTS NO. 422-19-651-0057

Revised: 07-23-02

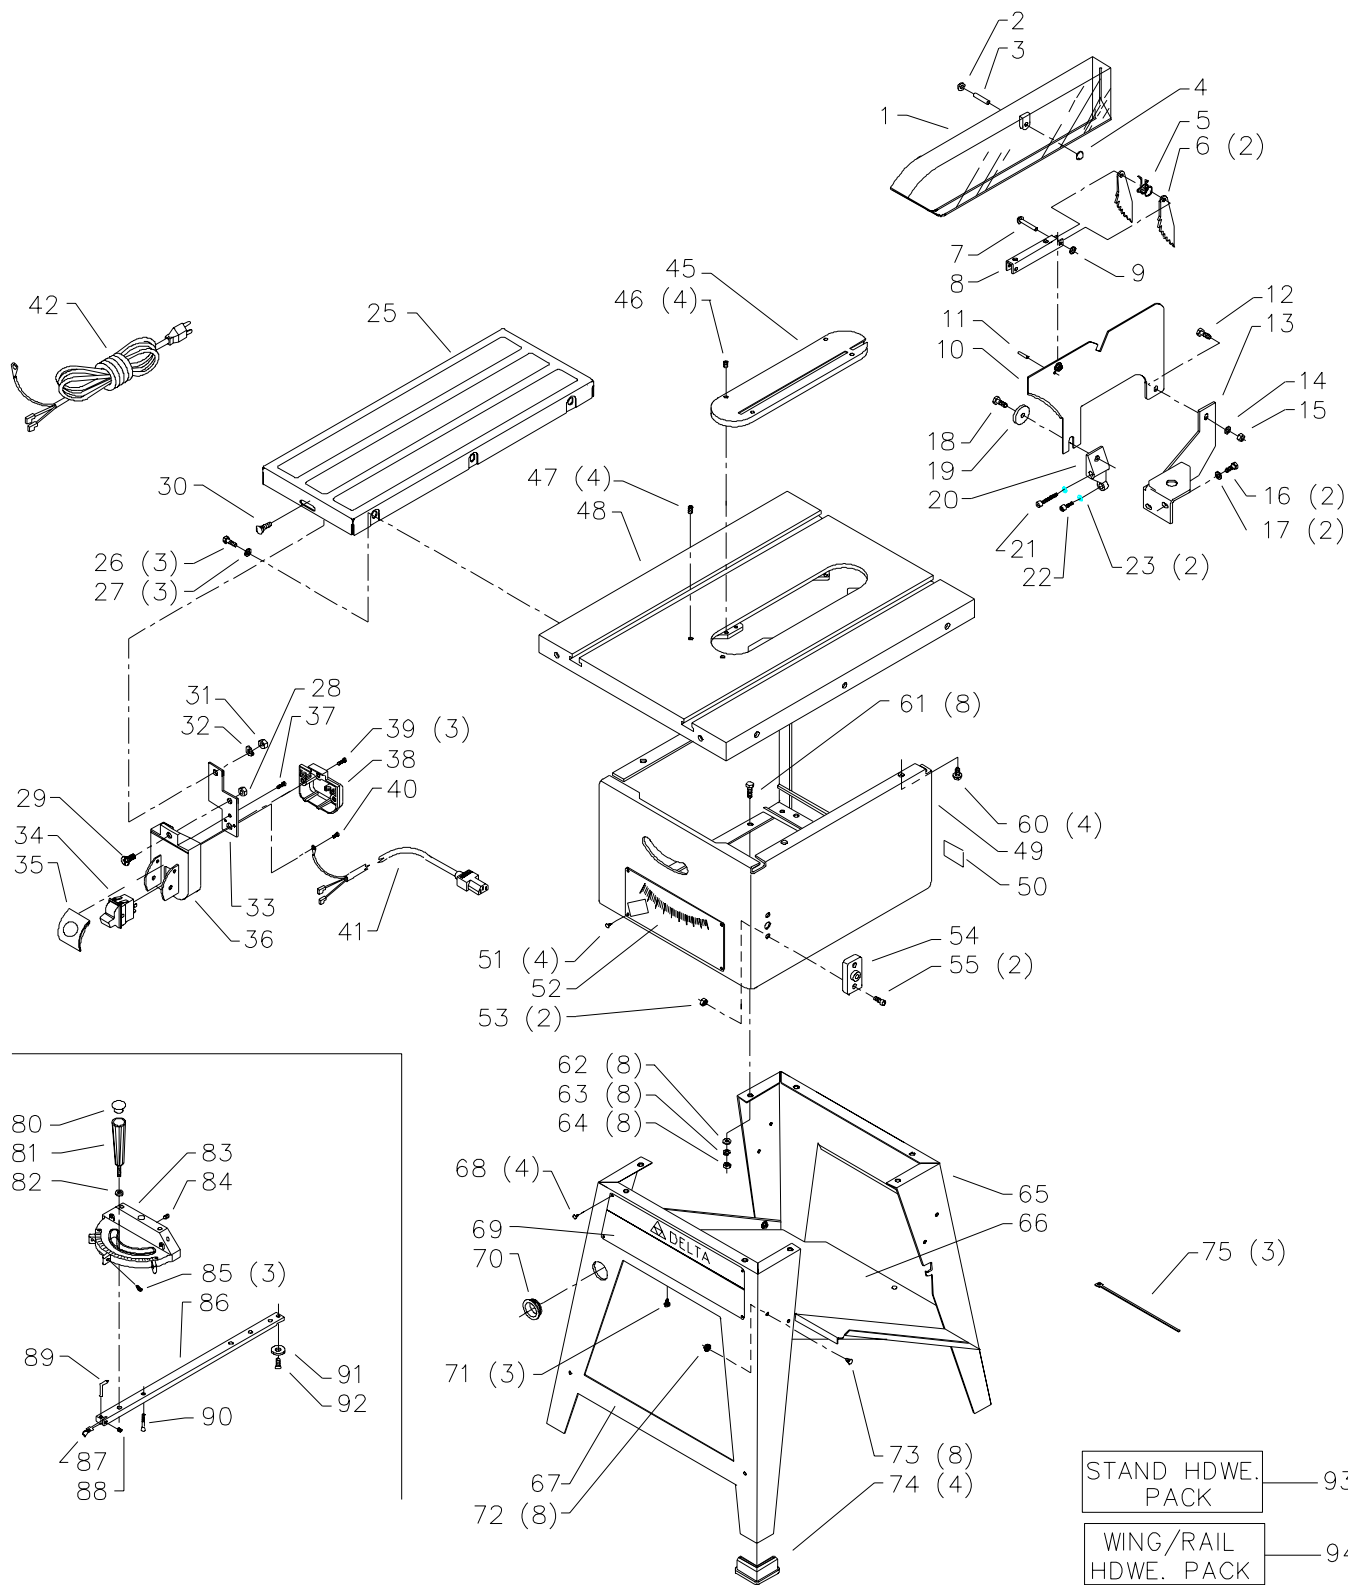

REPLACEMENT PARTS

Ref.


No.	Part No.	Description
*	1086935	BLADE GUARD, CONST OF:
*	34-412	BLADE GUARD ASSY, CONST OF:
1	1086334	"THRU" GUARD
2	1086388	PUSH NUT CAP
3	1087811	PIN
4	1086388	PUSH NUT CAP
5	1086353	SPRING
6	422-16-047-0001	KICK BACK FINGER
7	422-04-071-0007	PIN
8	1086337	PIVOT BRACKET
9	1086387	PUSH NUT
10	422-04-086-0002	SPLITTER W/BUSHING
11	905-01-010-6729	5/32" X 11/16" SPRING PIN
12	901-11-023-1476	5/16-18 X 5/8" CARRIAGE HD SCREW
13	422-19-089-0003	BRACKET
14	904-01-010-1620	FLAT WASHER
15	902-01-010-1300	5/16-18 HEX NUT
16	901-01-060-0626	1/4-20 X 3/4" HEX HD SCREW
17	904-01-010-1614	FLAT WASHER
18	901-01-060-0649	5/16-18 X 1" HEX HD SCREW
19	422-03-072-0001	PLATE
20	422-04-014-0037	SPLITTER BRACKET
21	901-03-010-0230	1/4-20 X 2" HEX SOC HD SCREW
22	901-03-010-0755	1/4-20 X 3/4" HEX SOC HD SCREW
23	904-01-010-1614	FLAT WASHER
25	34-862	EXTENSION WING, INCL:
26	901-01-060-0680	7/16-20 X 3/4" HEX HD SCREW
27	904-01-010-1638	FLAT WASHER
28	902-01-120-1034	1/4-20 NUT
29	901-03-030-8013	1/4-20 X 3/4" FLAT HEAD SCREW
*	438-01-317-0128	SWITCH KIT ASSY, (NOTE A)
		CONST OF:
30	901-01-060-0648	3/8-16 X 1 1/4" HEX HD SCREW (NOTE A)
31	902-01-010-5900	3/8-16 JAM NUT (NOTE A)
32	904-02-020-1704	3/8" LOCK WASHER (NOTE A)
33	422-19-001-0003	SWITCH PLATE (NOTE A)
34	438-01-317-0127	SWITCH
35	422-39-067-0001	SWITCH ACTUATOR
36	422-39-014-0022	SWITCH BOX COVER
37	901-05-163-1229	#10-16 X 1/2" PAN HD SCREW
38	422-39-013-0001	SWITCH BOX
39	901-05-163-1229	#10-16 X 1/2" PAN HD SCREW
40	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
41	438-01-302-0671	CORD W/FEMALE CONN. (NOTE B)
42	438-01-302-0672	CORD SET (NOTE B)
45	34-154	TABLE INSERT, INCL:
46	901-04-461-5297	1/4-28 X 3/8" HEX SOC SET SCREW
47	901-04-293-1395	5/16-18 X 3/4" HEX SOC SET SCREW
48	422-35-391-0003	TABLE
49	422-19-318-0011	CABINET ASSY, INCL:
50	422-19-754-0005	WARNING LABEL
51	1087794	RIVET
52	422-19-132-0013	NAMEPLATE
53	902-01-503-1514	5/16-18 FLANGE NUT
54	422-19-089-0007	BRACKET
55	901-02-050-0704	5/16-18 X 5/8" FILL HD SCREW

Ref.

No.	Part No.	Description
60	1231355	5/16-18 X 1/2" HEX WASHER HD SCREW
*	422-19-626-0004	STAND ASSY, CONST OF:
61	901-01-060-0606	5/16-18 X 5/8" HEX HD SCREW
62	904-01-010-1620	FLAT WASHER
63	904-02-010-1703	5/16" LOCK WASHER
64	902-01-010-1300	5/16-18 HEX NUT
65	436-06-123-0005	LEG PANEL - REAR
66	436-06-026-0004	DUST CHUTE
67	436-06-423-0004	LEG PANEL - FRONT, INCL:
68	1087794	RIVET
69	422-19-754-0006	NAMEPLATE
70	438-01-004-0097	BUSHING
71	901-05-213-1498	#10 X 1/2" HEX WASHER HD SCREW
72	902-01-293-1513	#10-32 KEPS NUT
73	901-02-453-1123	#10-32 X 1/2" PAN HD SCREW
74	427-99-048-0001	FOOT
75	438-01-004-0054	CABLE TIE
*	34-895	MITER GAGE, CONST OF:
80	422-02-074-0001	HOLE PLUG
81	422-02-060-0003	HANDLE
82	904-07-010-5555	1/4" FIBER WASHER
83	422-01-355-0004	MITER GAGE BODY, INCL:
84	901-04-150-1181	1/4-28 X 3/16" HEX SOC SET SCREW
85	901-04-150-9428	#08-32 X 1/2" HEX SOC SET SCREW
86	422-04-004-0001	BAR, INCL:
87	422-01-088-0004	STOP LINK
88	901-04-150-1181	1/4-28 X 3/16" HEX SOC SET SCREW
89	422-01-075-0001	POINTER
90	422-01-112-0001	SCREW
91	422-04-072-0001	PLATE
92	901-02-030-5750	1/4-28 X 5/16" FLAT HD SCREW
93	422-19-725-0024	STAND HARDWARE PACK
94	422-19-628-0016	WING/RAIL HDWE PACK
*		NOT SHOWN ASSEMBLED

Service Notes:

- A- Refer to your Fence System owner's owners manual for correct Switch mounting configuration and correct mounting hardware.
- B- When installing power cords, (Ref no. 41 & 42), into the switch box, insure that the cord's outer insulating jacket passes through the switch box and cord clamp before tightening the switch box assembly screws.

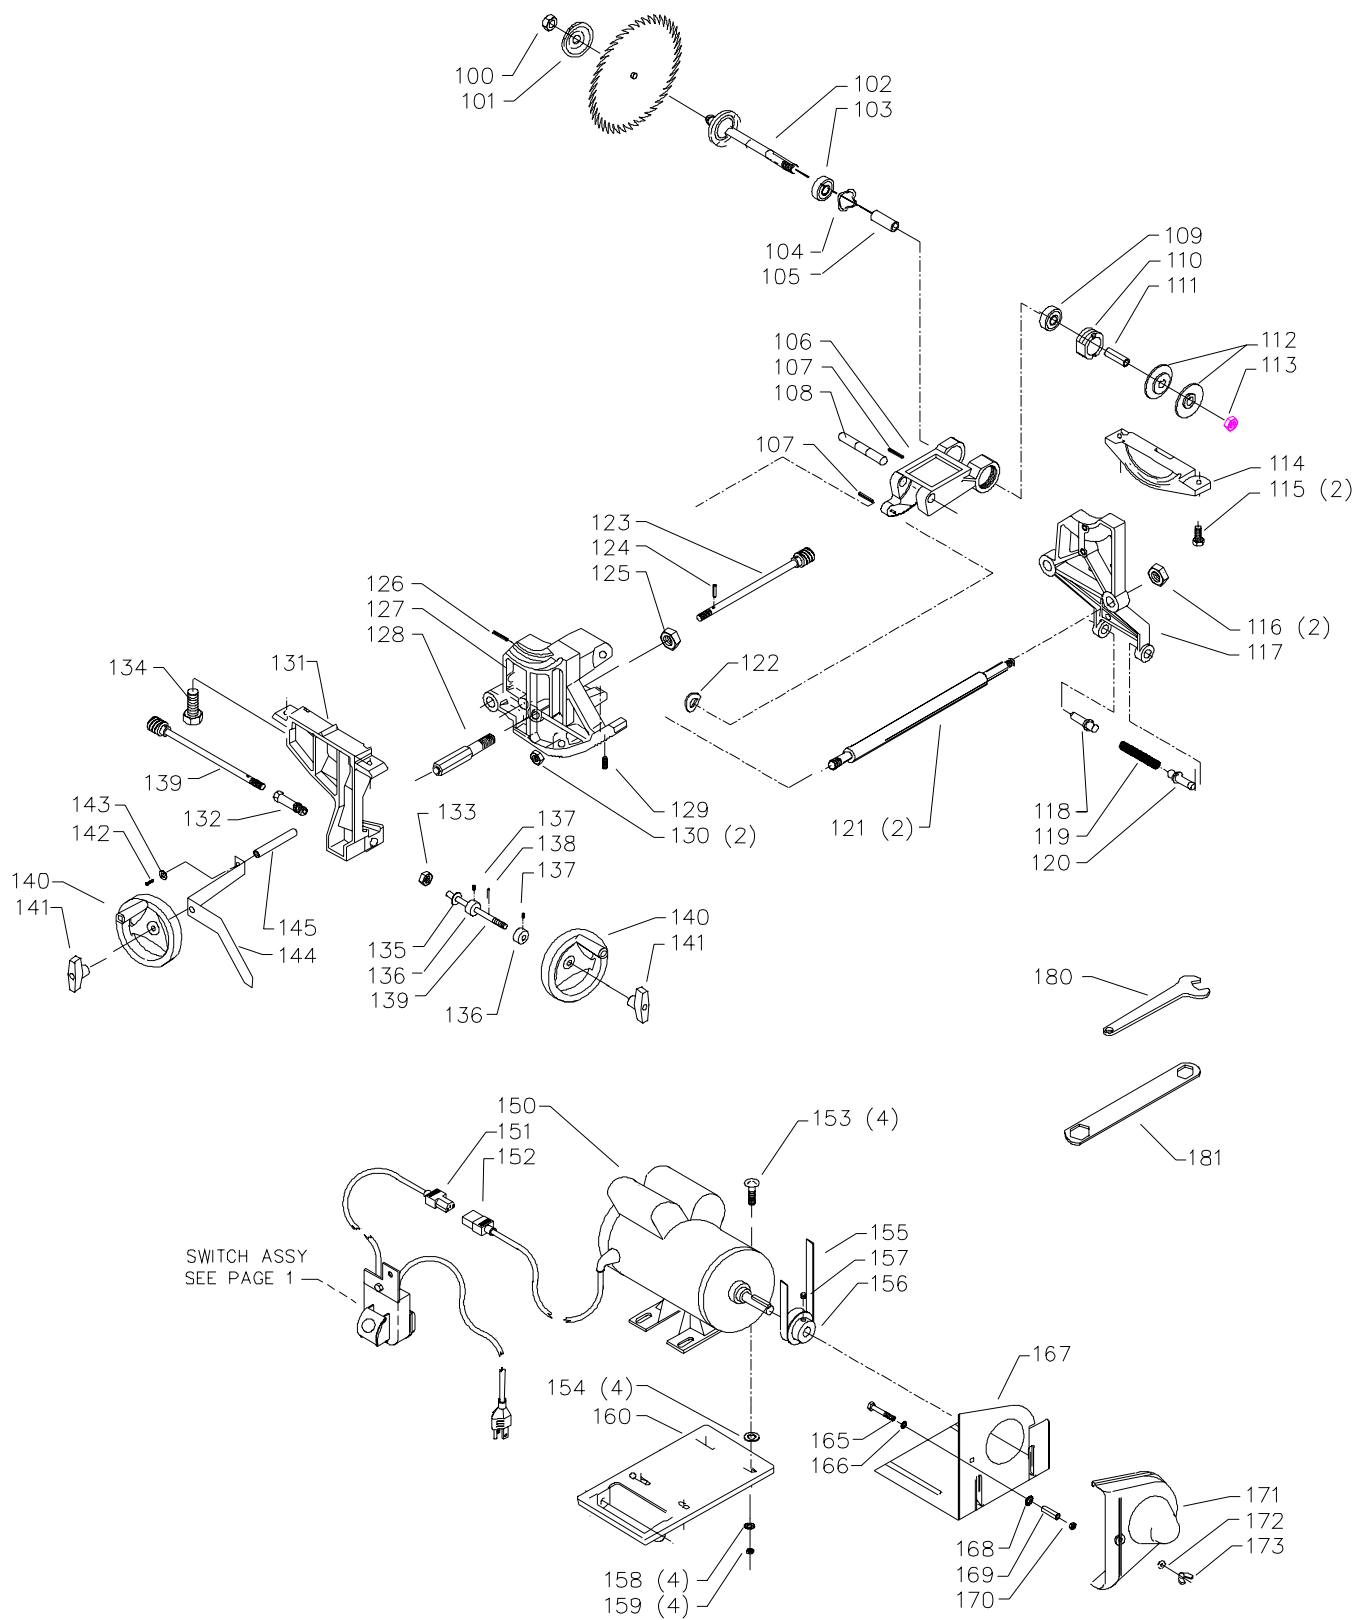


REPLACEMENT PARTS

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
100	902-01-200-9848	ARBOR NUT - LH
101	422-04-103-5001	FLANGE
102	422-19-303-0002	ARBOR ASSY
103	1086894	BALL BEARING
104	928-06-020-7382	LOAD SPRING
105	1087857	SPACER
106	422-02-014-0017	ARBOR BRACKET
107	905-01-010-2710	3/16" X 7/8" SPRING PIN
108	952-01-101-3267	ARBOR BRACKET SHAFT
109	1086894	BALL BEARING
110	902-07-020-7176	BEARING CLOSURE NUT
111	422-19-104-0005	SPACER
112	422-19-130-0001	PULLEY HALF
113	902-01-020-1226	5/8-18 JAM NUT
114	422-02-014-0010	TRUNNION BRACKET - REAR
115	901-02-763-1526	5/16-18 X 7/8" HEX WASHER HD SCREW
116	902-01-283-1393	5/8-18 LOCK NUT
117	422-19-095-0004	REAR TRUNNION
118	422-19-071-0002	PIN
119	422-19-122-0001	SPRING
120	422-19-071-0002	PIN
121	422-19-004-0002	TIE BAR
122	928-06-013-1779	11/16" WAVE WASHER
*	905-01-010-2716	1/8" X 9/16" SPRING PIN
123	422-35-406-0001	ELEVATING SHAFT ASSY
124	905-01-010-2711	1/8" X 5/8" SPRING PIN
125	902-01-020-1226	5/8-18 JAM NUT
126	905-01-010-2706	3/16" X 1" SPRING PIN
127	422-35-095-0001	FRONT TRUNNION
128	422-35-105-0001	SLEEVE
129	901-04-141-9152	1/4-20 X 5/16" HEX SOC SET SCREW
130	902-01-283-1393	5/8-18 LOCK NUT
131	1087233	FRONT TRUNNION, INCL:
132	422-35-042-0001	ECCENTRIC
133	902-01-020-9145	9/16-18 HEX NUT
134	901-02-763-1526	5/16-18 X 7/8" HEX WASHER HD SCREW
135	904-07-010-5554	3/8" FIBER WASHER

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
136	426-03-388-0001	SET COLLAR ASSY, INCL:
137	901-04-150-0208	1/4-20 X 1/4" HEX SOC SET SCREW
138	905-01-010-2711	1/8" X 5/8" SPRING PIN
139	1087893	TILT SHAFT ASSY, INCL:
*	905-01-010-2716	1/8" X 9/16" SPRING PIN
140	1086491	HANDWHEEL ASSY
141	422-19-138-0003	KNOB
142	901-03-010-3309	1/4-20 X 5/8" HEX SOC HD SCREW
143	904-01-010-1614	FLAT WASHER
144	422-19-075-0001	POINTER
145	422-19-104-0001	SPACER
150	62-044	MOTOR ASSY, INCL:
151	438-01-302-0671	CORD W/FEMALE CONN. (NOTE B)
152	438-01-302-0661	CORD W/MALE CONN. (NOTE B)
153	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCREW
154	904-01-010-1620	FLAT WASHER
155	49-034	BELT
156	926-01-041-9366	MOTOR PULLEY (2-1/4"OD), INCL:
157	901-04-150-0206	5/16-18 X 5/16" HEX SOC SET SCREW
158	904-03-030-1656	5/16" EXT TOOTH WASHER
159	902-01-010-1300	5/16-18 HEX NUT
160	422-02-089-0005	MOTOR PLATE
*	34-965	BELT & PULLEY GUARD, CONST OF:
165	901-01-060-3124	1/4-20 X 1 1/2" HEX HD SCREW
166	904-03-030-1757	1/4" EXT TOOTH WASHER
167	1088314	PLATE
168	904-01-010-1614	FLAT WASHER
169	424-03-017-0003	SPACER
170	902-01-120-1034	1/4-20 HEX NUT
171	1088315	COVER
172	904-03-030-1757	1/4" EXT TOOTH WASHER
173	902-04-010-1402	1/4-20 WING NUT
180	955-01-050-1472	WRENCH
181	422-39-101-0001	7/8 X 1/2" WRENCH
*	NOT SHOWN ASSEMBLED	
**	NOT SHOWN	

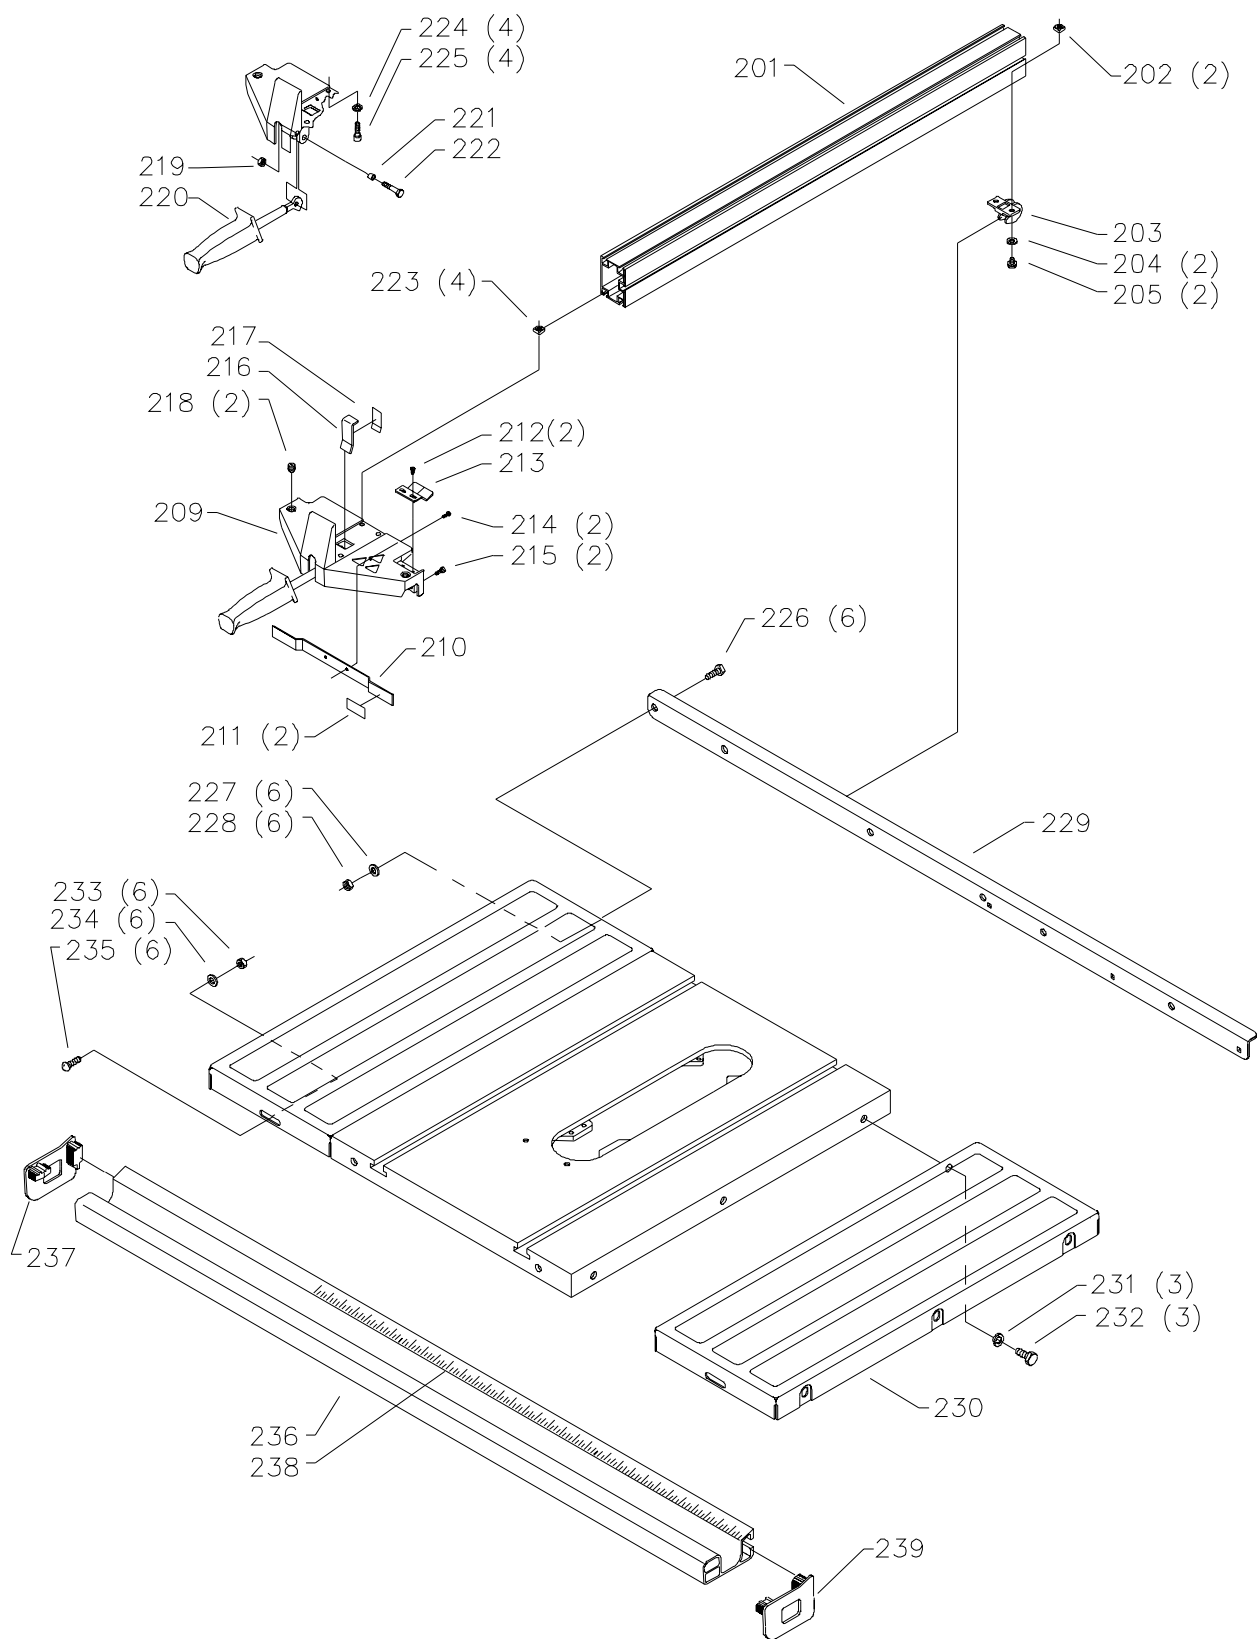

REPLACEMENT PARTS

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
*	36-448	FENCE ASSEMBLY COMPLETE, INCL:
201	422-19-043-0005	FENCE
202	902-02-040-1306	1/4-20 SQUARE NUT
203	422-19-048-0001	REAR FOOT
204	904-01-010-1614	FLAT WASHER
205	901-02-763-1802	1/4-20 X 5/8" HEX WASHER HD SCREW
209	422-19-343-0010	FENCE HEAD ASSY, INCL:
210	422-39-439-0001	ADJUSTMENT STRIP
211	422-19-439-0003	WEAR PAD KIT (A)
212	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
213	422-19-075-0002	CURSOR
214	901-05-163-1126	#08-32 X 5/16" PAN HD SCREW
215	901-01-063-1801	1/4-20 X 5/8" HEX HD SCREW
216	422-19-439-0002	CLAMP PLATE, INCL:
217	422-19-439-0003	WEAR PAD KIT (A)
218	422-39-112-0005	LEVELING SCREW
219	902-01-212-2409	1/4-20 LOCK NUT
220	422-19-367-0002	HANDLE ASSY
221	422-19-104-0006	SPACER
222	901-01-063-1807	1/4-20 X 1 1/4" HEX HD SCREW
223	902-02-040-1306	1/4-20 SQUARE NUT
224	904-02-020-1702	1/4" LOCK WASHER
225	901-03-010-0755	1/4-20 X 3/4" HEX SOC HD SCREW
226	901-01-060-0642	3/8-16 X 1" HEX HD SCREW
227	904-01-010-1615	FLAT WASHER
228	902-01-010-5900	3/8-16 JAM NUT
229	422-19-089-0013	REAR RAIL (D)
230	34-862	EXTENSION WING, INCL:
231	904-01-010-1638	FLAT WASHER
232	901-01-060-0680	7/16-20 X 3/4" HEX HD SCREW
233	902-01-010-5900	3/8-16 JAM NUT
234	904-01-010-1615	FLAT WASHER
235	901-11-020-0891	3/8-16 X 1" CARRIAGE HD SCREW
236	422-19-355-0005	FRONT GUIDE RAIL, (E), INCL:
237	422-19-020-0005	END CAP - LEFT
238	422-39-132-0010	SCALE
239	422-19-020-0004	END CAP - RIGHT

* NOT SHOWN ASSEMBLED

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.