



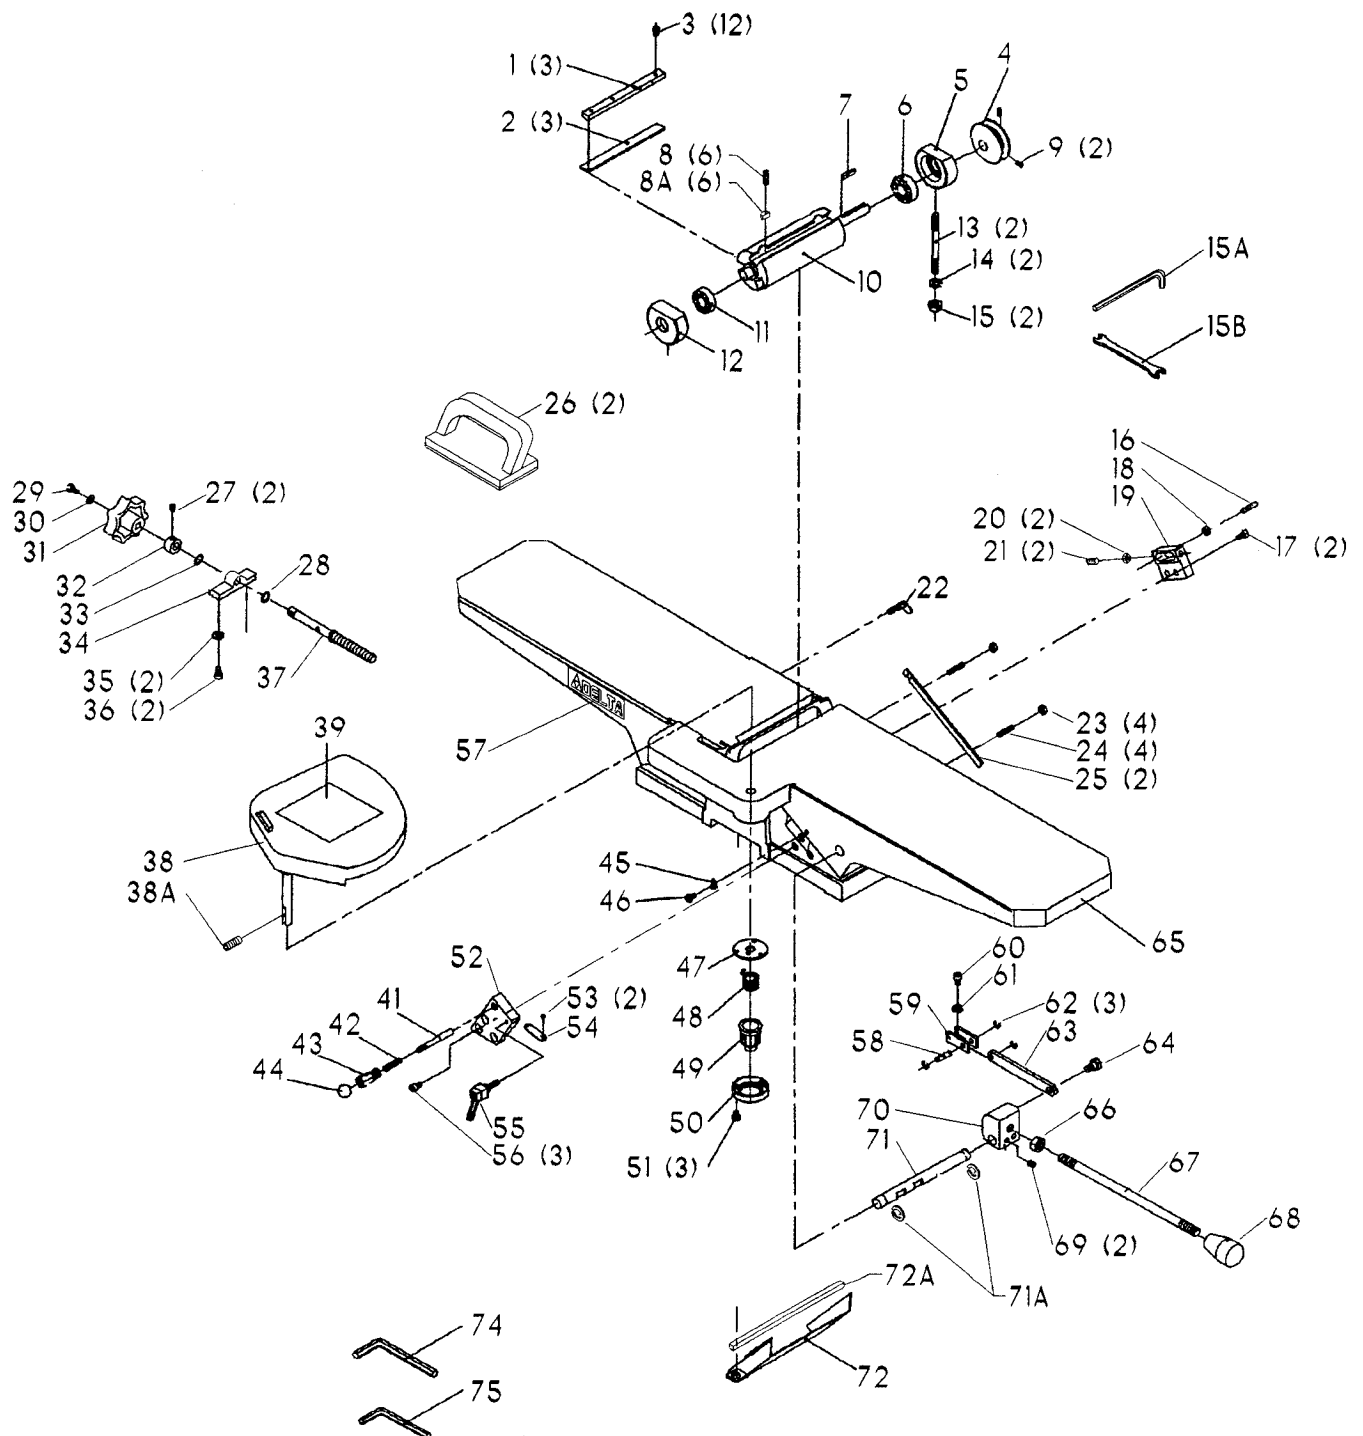


REPLACEMENT PARTS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
*	37-191	CUTTERHEAD ASSY, INCL:	38	1340126	GUARD, INCL:
1	1340195	BAR	38A	1246008	(DIN 916) M5 X 12MM HEX SOC SET SCR
2	37-658	KNIVES (SET OF 3)	39	1347003	WARNING LABEL
3	1340196	KNIFE SCR	41	1340127	INDEX PIN
4	1340112	PULLEY	42	1340128	SPRING
5	1340113	SUPPORT RH	43	1340129	PLUNGER HOUSING
6	1086894	BALL BEARING	44	1340130	BALL KNOB
7	1340114	KEY	45	1340131	POINTER
8	1246158	(DIN 916) M5 X 16MM HEX SOC SET SCR	46	1310159	(DIN 85) M4 X 6MM PAN HD SCR
8A	1330112	NUT	47	1340132	PLATE
9	1243321	(DIN 916) M6 X 10MM HEX SOC SET SCR	48	1340133	SPRING
10	1340115	CUTTERHEAD	49	1340134	CUP
11	920-04-010-5355	BALL BEARING	50	1340135	RETAINER
12	1340116	SUPPORT LH	51	1310161	(DIN 85) M4 X 18MM PAN HD SCR
13	1340117	STUD	52	1340136	BLOCK, INCL:
14	1243360	(DIN 7980) M10.2 LOCK WASHER	53	1310016	5MM DRIVE SCR
15	1243496	(DIN 934) M10 HEX NUT	54	1340137	SCALE
15A	428-06-101-0003	2.5MM HEX WRENCH	55	1340138	LOCK LEVER
15B	1343918	KNIFE WRENCH	56	1246122	(DIN 912) M8 X 16MM HEX SOC HD SCR
16	1340118	STOP SCR	57	1347006	NAMEPLATE
17	1246122	(DIN 912) M8 X 16MM HEX SOC HD SCR	58	1340139	PIN
18	1243398	(DIN 934) M8 HEX NUT	59	1340140	BRACKET
19	1340119	BLOCK	60	1342125	(DIN 912) M8 X 12MM HEX SOC HD SCR
20	1243398	(DIN 934) M8 HEX NUT	61	1246157	(DIN 7980) M8.1 LOCK WASHER
21	1246150	(DIN 913) M8 X 25MM HEX SOC SET SCR	62	1330258	EXT RET RING
22	1340120	LOCKSCR	63	1340141	LINK
23	1243456	(DIN 934) M6 HEX NUT	64	1340142	SPECIAL BOLT
24	1246187	(DIN 914) M6 X 25MM HEX SOC SET SCR	65		BASE ASSY (SEE NOTE A)
25	1340121	GIB	66	1243476	(DIN 934) M12 HEX NUT
26	37-108	JOINTER PUSH BLOCK	67	1340143	LEVER ROD
27	1310055	(DIN 913) M6 X 6MM HEX SOC SET SCR	68	1340144	KNOB
28	1347020	M11.5 FLAT WASHER	69	1243339	(DIN 916) M6 X 8MM HEX SOC SET SCR
29	1345859	(DIN 7380) M6 X 12MM BUTTON HD SCR	70	1340145	BLOCK
30	1340622	M6.4 FLAT WASHER	71	1340146	SHAFT
31	1340122	KNOB	71A	1246027	EXT RET RING
32	1340123	COLLAR	72	1340147	DUST CHUTE
33	1313194	(DIN 137B) M8.4 WAVE WASHER	72A	1330689	SEAL
34	1340124	BLOCK	74	428-07-101-0002	6MM HEX WRENCH
35	1246157	(DIN 7980) M8.1 LOCK WASHER	75	432-07-101-0004	5MM HEX WRENCH
36	1246006	(DIN 912) M8 X 50MM HEX SOC HD SCR			
37	1340125	SCR SHAFT			

* NOT SHOWN ASSEMBLED


NOTE A: BASE, FRONT AND REAR TABLES CANNOT BE SUPPLIED SEPARATELY, AS THE RE-ASSEMBLED MACHINE WOULD NOT BE ACCURATE. FOR TRUE ALIGNMENT, WE FINISH-GRIND OUR JOINTER TABLES AFTER ASSEMBLY ON THE BASE.

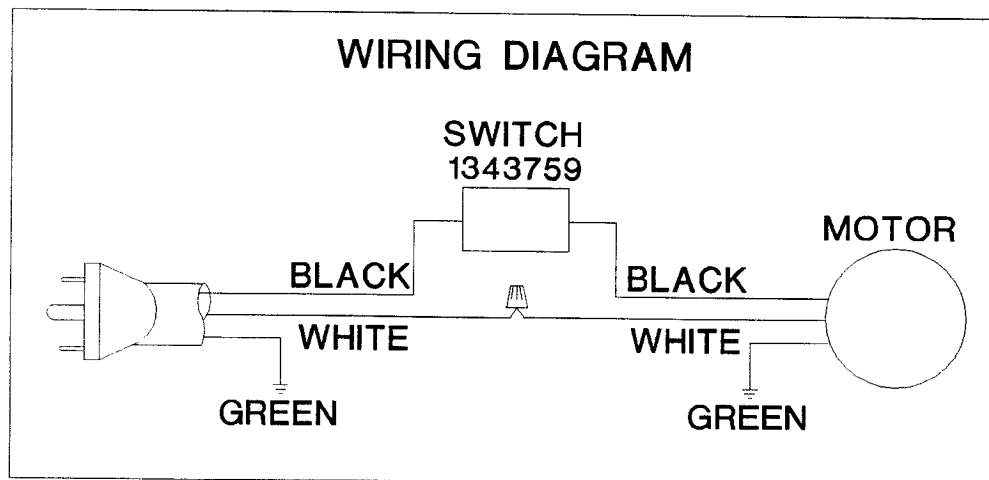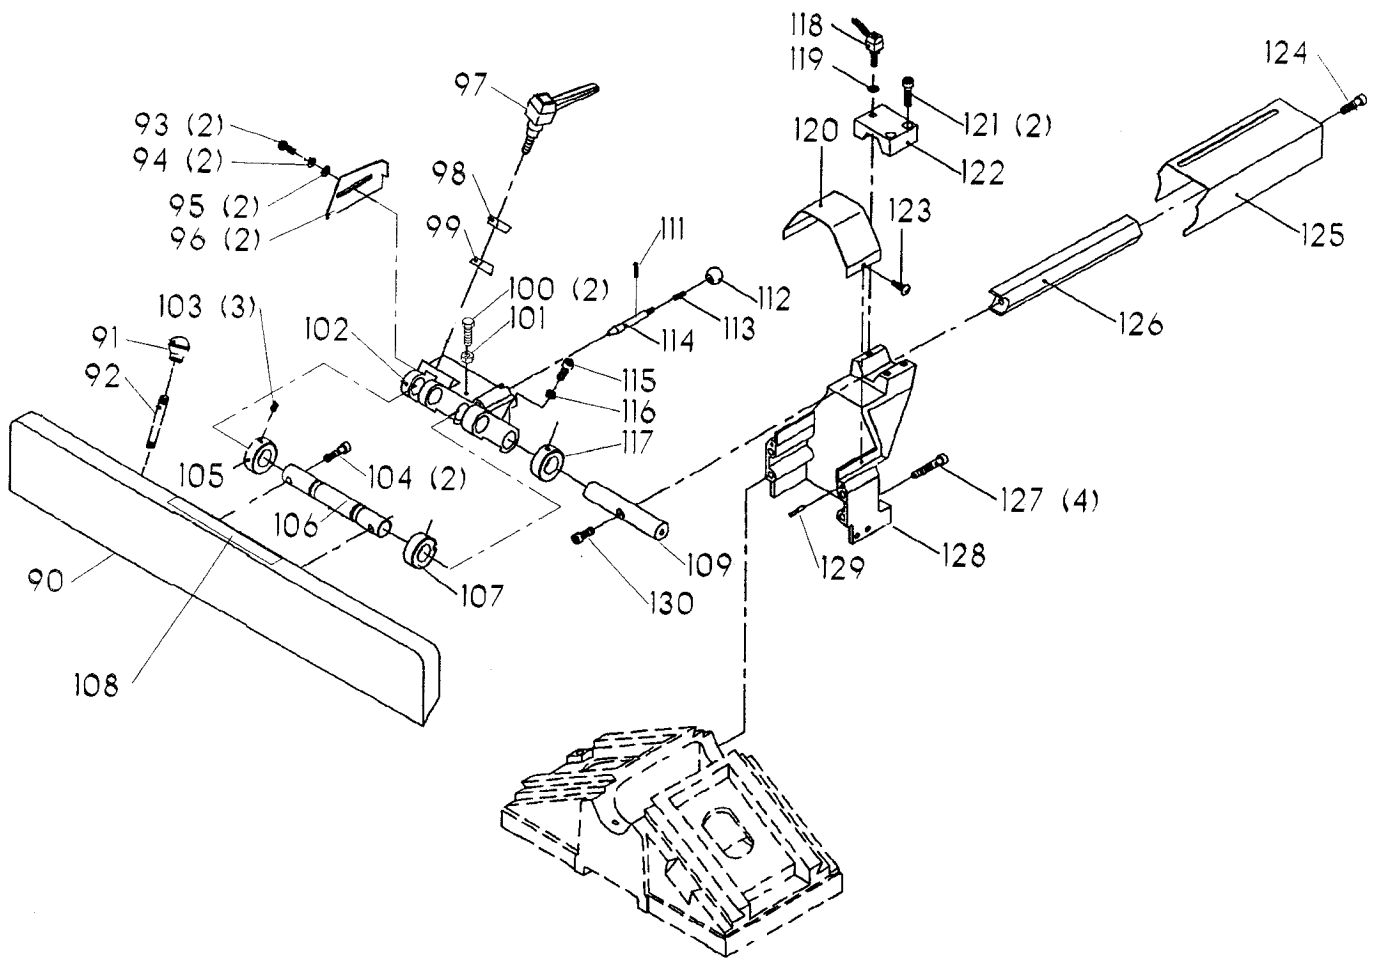

REPLACEMENT PARTS

<u>REF.</u> <u>NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
*	1340197	FENCE ASSY, CONST OF:
90	1340148	FENCE
91	1340149	KNOB
92	1340150	STUD
93	1340151	SPECIAL SCR
94	1313194	(DIN 137B) M8.4 WAVE WASHER
95	1340622	M6.4 FLAT WASHER
96	1340152	LEAF GUARD
97	1340153	LOCK LEVER
98	1340154	BLOCK
99	1340155	BLOCK
100	1246175	(DIN 931) M6 X 30MM HEX HD SCR
101	1243456	(DIN 934) M6 HEX NUT
102	1340156	SUPPORT
103	1330200	(DIN 916) M8 X 12MM HEX SOC SET SCR
104	1243530	(DIN 912) M8 X 30MM HEX SOC HD SCR
105	1340157	COLLAR
106	1340158	SHAFT
107	1340159	INDEX COLLAR
108	1347005	CAUTION LABEL
109	1340161	SHAFT
111	1246184	(DIN 1481) M3 X 20MM SPRING PIN
112	1340162	BALL KNOB
113	1340163	SPRING
114	1340164	INDEX PIN
115	1246055	(DIN 912) M6 X 50MM HEX SOC HD SCR
116	1345980	(DIN 936) M6 HEX LOW NUT
117	1340165	INDEX COLLAR
118	1340166	LOCK LEVER
119	1340637	(DIN 9021) M8.4 FLAT WASHER
120	1340167	COVER
121	1243554	(DIN 912) M8 X 35MM HEX SOC HD SCR
122	1340168	CAP
123	1246045	(DIN 84) M6 X 10MM CHEESE HD SCR
124	1342125	(DIN 912) M8 X 12MM HEX SOC HD SCR
125	1340169	GUARD
126	1340170	BAR
127	1340194	(DIN 912) M8 X 55MM HEX SOC HD SCR
128	1340171	SUPPORT
129	1347065	(DIN 1481) M4 X 16MM SPRING PIN
130	1243530	(DIN 912) M8 X 30MM HEX SOC HD SCR


* NOT SHOWN ASSEMBLED

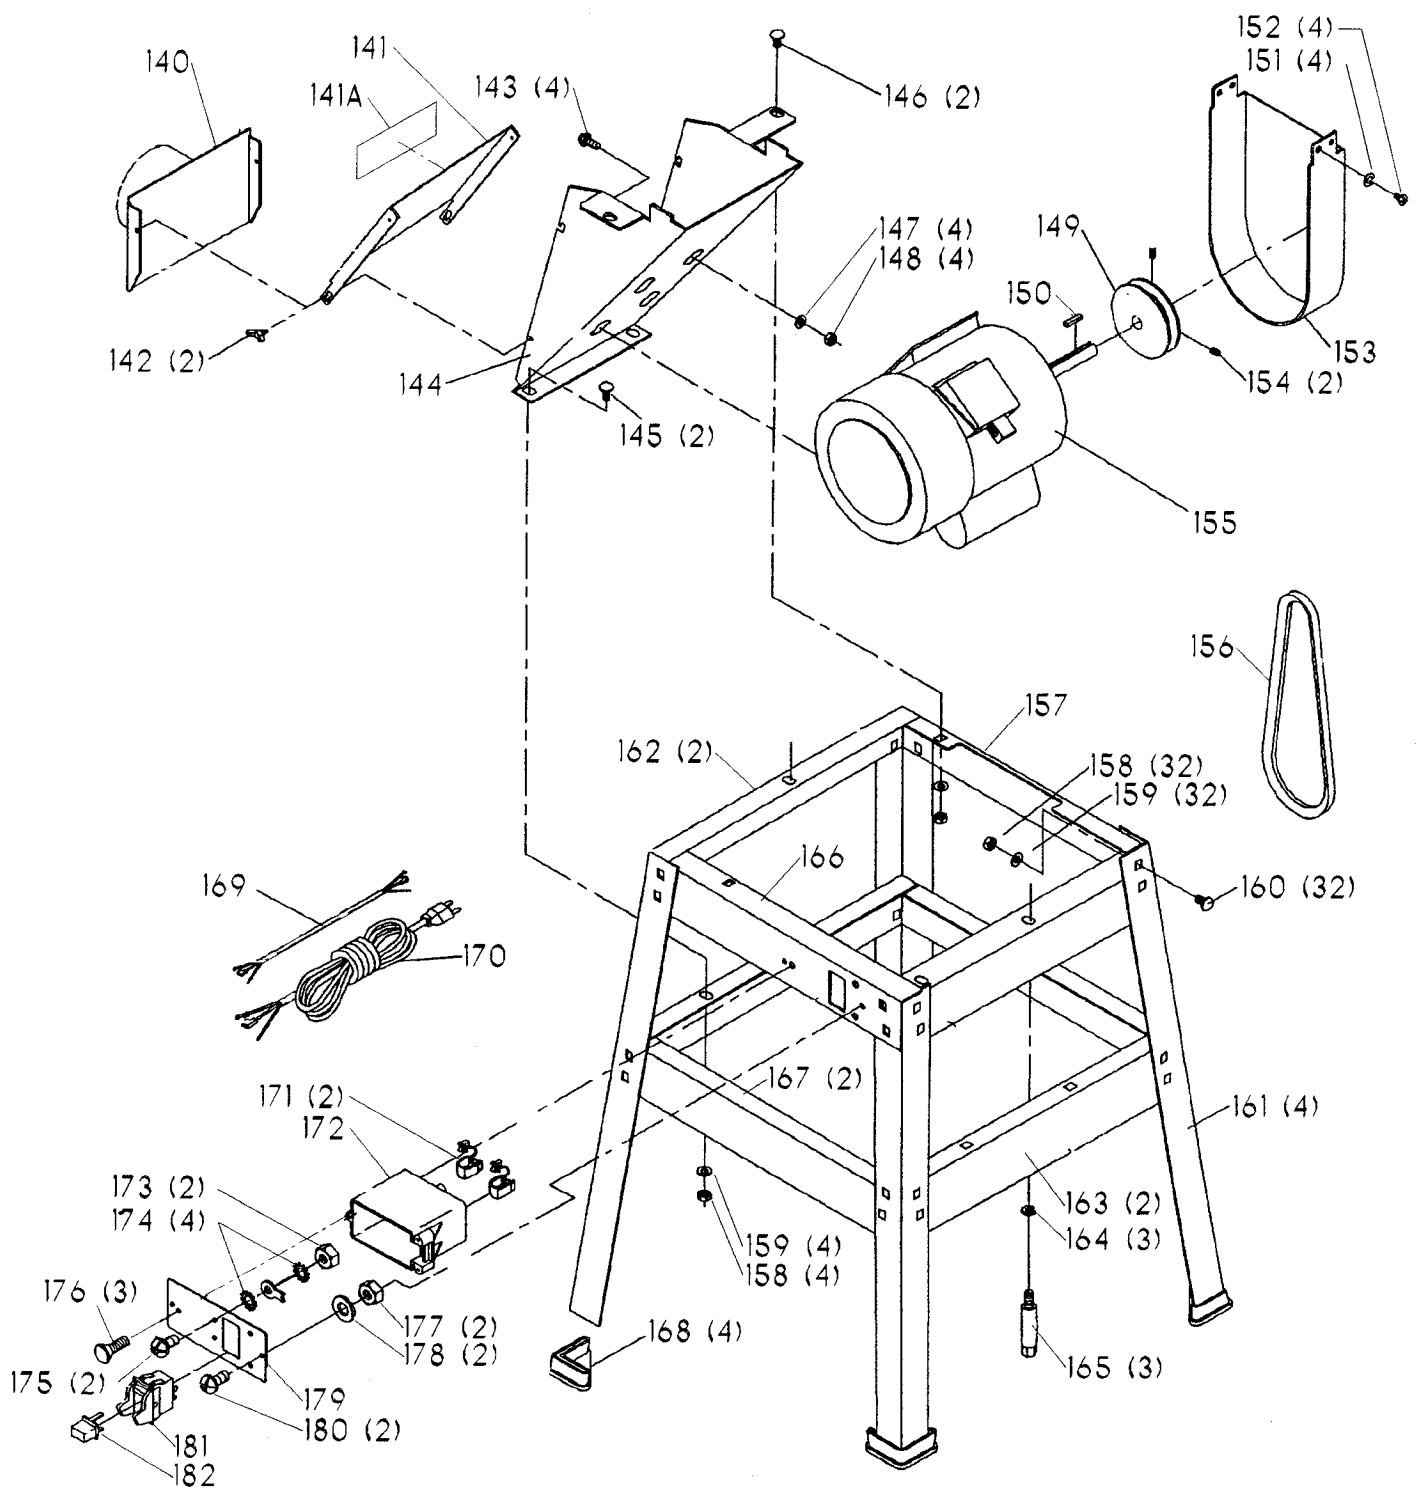

REPLACEMENT PARTS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
140	1340172	DUST OUTLET	161	1340181	LEG
141	1340173	COVER, INCL:	162	1340182	BRACE
141A	1347004	WARNING LABEL	163	1340183	BRACE
142	1347072	WING SCR	164	1243360	(DIN 7980) M10.2 LOCK WASHER
143	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCR	165	1340184	SPECIAL STUD
144	1340175	DUST CHUTE	166	1340185	BRACE
145	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCR	167	1340186	BRACE
146	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCR	168	1340187	PLASTIC FOOT
147	904-01-031-6202	FLAT WASHER	169	1340188	MOTOR CORD
148	902-01-010-1300	5/16-18 HEX NUT	170	1340189	POWER CORD
149	1340176	MOTOR PULLEY	171	1340190	CLAMP
150	1342579	KEY	172	1340191	BOX
151	1243520	(DIN 7980) M6.1 LOCK WASHER	173	1243569	(DIN 934) M4 HEX NUT
152	1246045	(DIN 84) M6 X 10MM CHEESE HD SCR	174	1320101	(DIN 6797A) M5.3 EXT TOOTH WASHER
153	1340177	BELT COVER	175	1347527	(DIN 7985) M4 X 10MM PAN HD SCR
154	1310055	(DIN 913) M6 X 6MM HEX SOC SET SCR	176	1330398	(DIN 963) M4 X 12MM FLAT HD SCR
155	1340178	MOTOR	177	1243569	(DIN 934) M4 HEX NUT
156	1340179	V-BELT	178	1246102	(DIN 125) M5.3 FLAT WASHER
157	1340180	BRACE	179	1340192	COVER
158	902-01-010-1300	5/16-18 HEX NUT	180	1347527	(DIN 7985) M4 X 10MM PAN HD SCR
159	904-01-031-6202	FLAT WASHER	181	1343759	SWITCH, INCL:
160	901-11-020-0834	5/16-18 X 3/4" CARRIAGE HD SCR	182	1343758	KEY (SEE NOTE B)

NOTE B: DELTA HAS USED A NUMBER OF DIFFERENT TYPES OF SWITCHES FOR PRODUCTION. ALL SWITCHES ARE INTERCHANGEABLE BUT THE KEYS ARE DIFFERENT. REPLACEMENT SWITCHES COME COMPLETE WITH KEY. IF A REPLACEMENT KEY IS NEEDED, REFER TO DRAWING BELOW TO SELECT THE PROPER ONE.

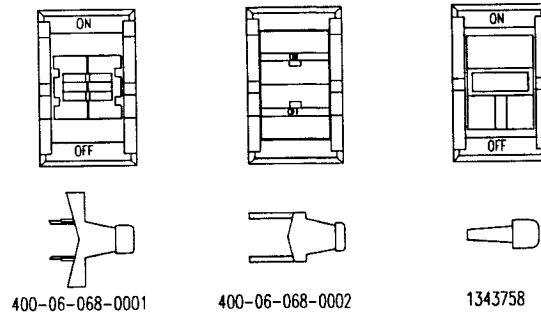

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta International Machinery Corp. strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repair. Any product which is presented to a Delta Authorized Service Center for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your local service outlet.