


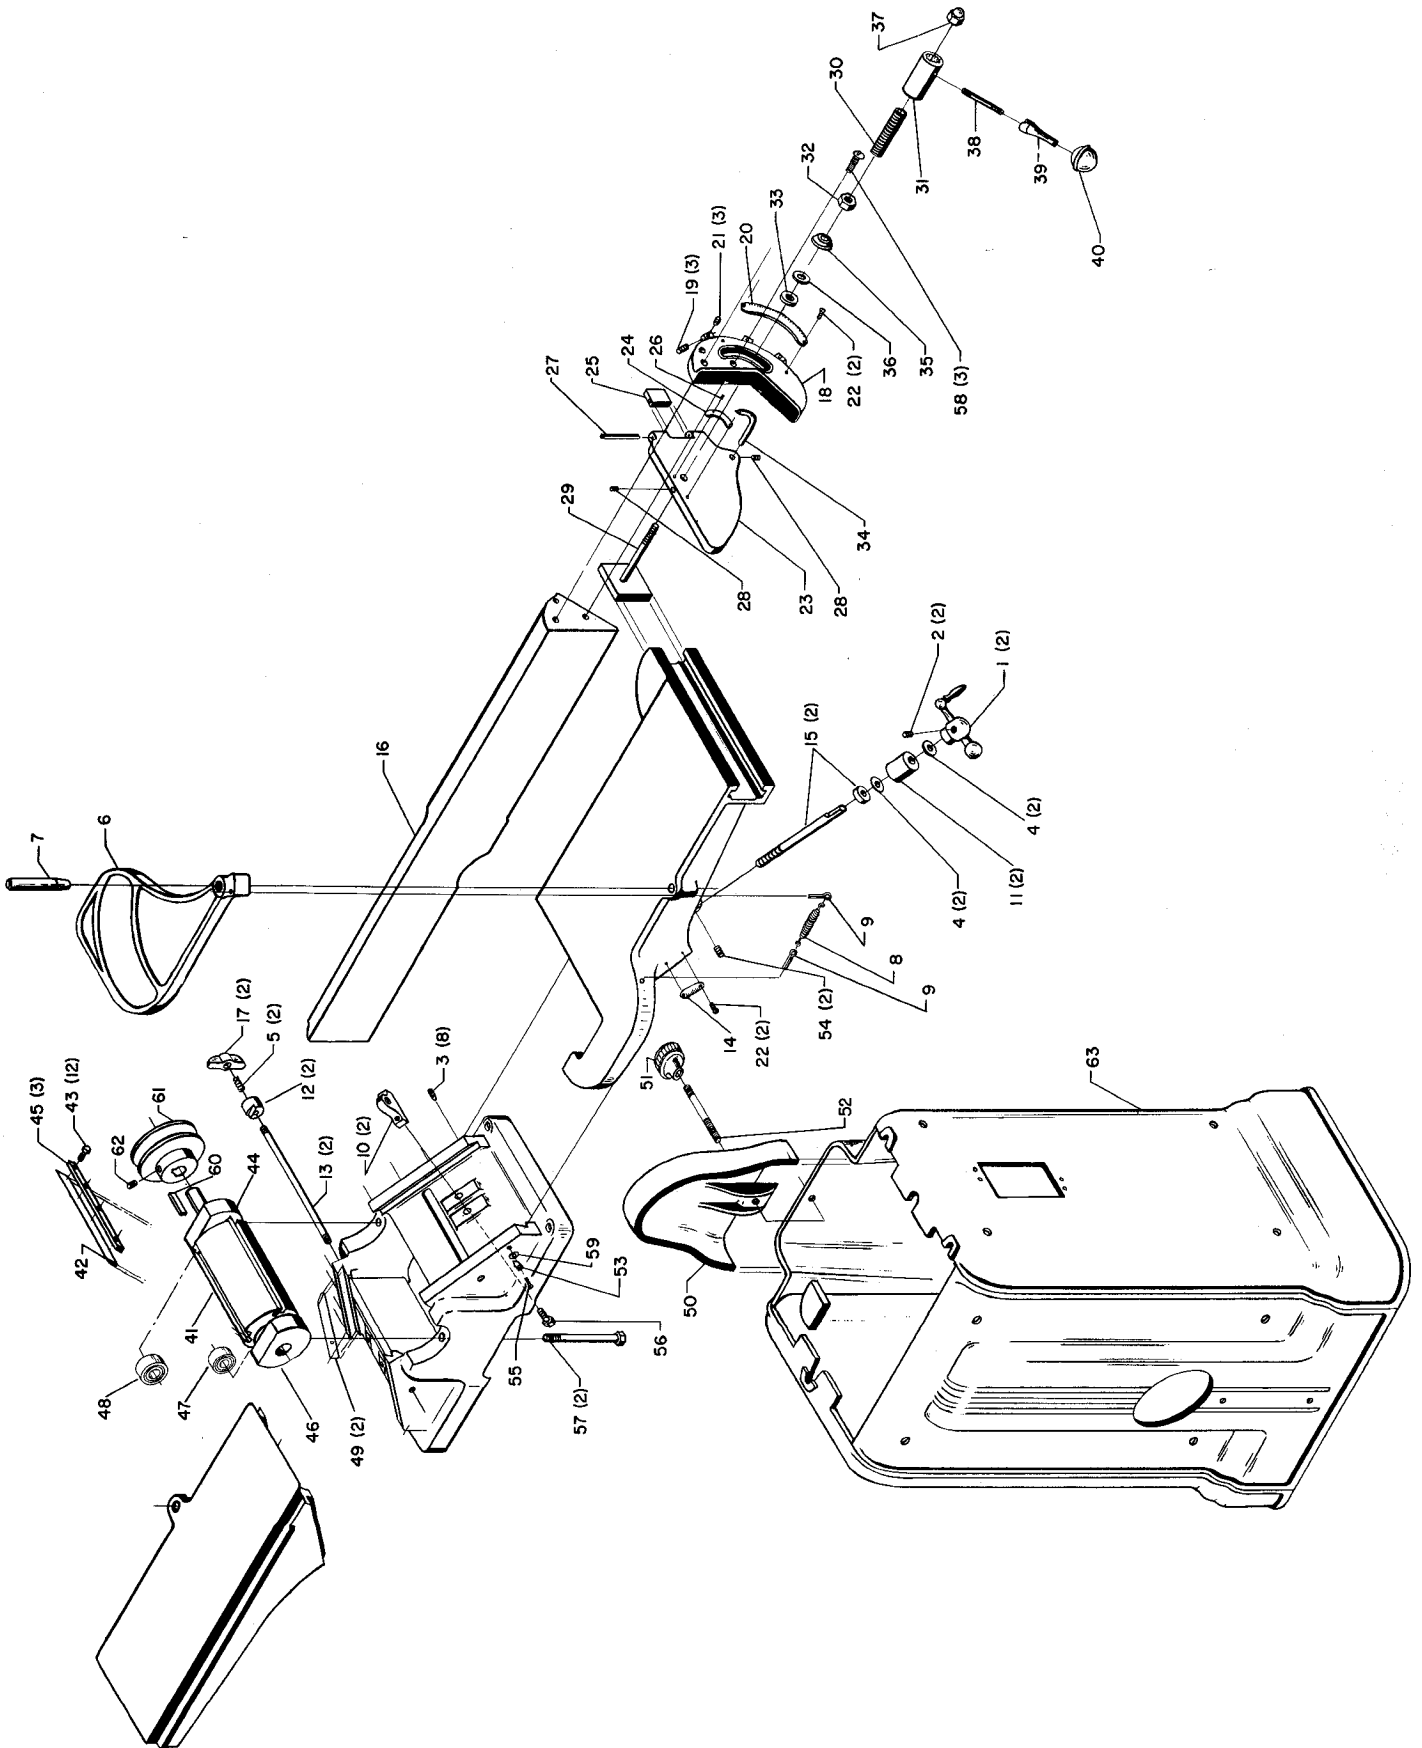

REPLACEMENT PARTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	930-05-991-3515	Crank Handle, Incl:	34	952-01-041-3985	Pointer
2	901-04-190-0201	5/16-18 X 5/16" Set Screw	35	904-10-161-3878	Clamp Collar
3	901-04-150-0256	Gib Adjustment Screw	36	928-05-001-4134	Spring Washer
4	904-07-011-5711	Fiber Washer	37	902-09-040-5916	Cap Nut
5	928-01-021-4125	Coil Spring	38	901-07-261-3246	Stud
6	Cannot Furnish	Front Knife Guard, Incl:	39	Cannot Furnish	Handle Spacer
7	Cannot Furnish	Guard Pivot Pin	40	931-01-011-4091	Knob
8	928-02-151-4137	Spring	41	37-808	Cutter Ass'y., Incl: (See A)
9	905-05-040-2146	Cotter Pin	42	37-659	Set of 3 Knives
10	Cannot Furnish	Adj. Screw Nut	43	901-09-070-6120	Lock Screws
11	Cannot Furnish	Adj. Screw Sleeve	44	418-03-060-0001	Rear Bearing Housing
12	904-10-131-3873	Table Clamp Collar	45	418-03-004-0001	Knife Lock Bar
13	901-07-251-3243	Table Clamp Stud	46	418-03-060-0002	Front Bearing Housing
14	951-02-011-3982	Dept. of Cut Scale	47	920-08-020-5336	Ball Bearing
15	Cannot Furnish	Table Adj. Screw w/Collar	48	920-08-020-5337	Ball Bearing
16	Cannot Furnish	Fence Body	49	418-03-052-0002	Gib
17	931-03-011-4097	Hand Knob	50	Cannot Furnish	Pulley Guard, Incl:
18	418-03-395-0001	Fence Segment, Incl:	51	931-02-031-3532	Knob
19	901-09-020-6142	Stop Screw	52	901-07-261-3245	Stud
20	951-02-011-3980	Tilt Scale	53	951-01-010-7802	Pointer
21	901-04-410-4561	1/4-28 X 1/4" Hdless Set Screw	54	901-04-150-0206	5/16-18 X 5/16" Set Screw
22	901-06-450-2250	Drive Screw	55	901-02-010-0561	#10-32 X 3/8" Rd. Hd. Screw
23	418-03-384-0001	Cross Slide Ass'y., Incl:	56	901-01-060-0653	3/8-24 X 5/8" Hex Hd. Screw
24	418-03-055-0001	Guide	57	Cannot Furnish	Clamp Screw
25	418-03-088-0001	Stop	58	901-03-010-0784	3/8-16 X 1-1/4" Fil Hd. Screw
26	905-01-010-2707	5/32 X 1/2" Roll Pin	59	904-01-010-1609	13/64" Washer
27	905-01-010-6745	3/16 X 1-7/8" Roll Pin	60	927-03-010-2662	3/16 Sq. X 5/16" Key
28	901-04-190-0253	1/4-28 X 1/4" Set Screw	61	41-033	Cutterhead Pulley, Incl:
29	Cannot Furnish	Clamp Bolt w/Plate	62	901-04-190-0201	Set Screw
30	418-03-105-0001	Clamp Sleeve	63	Cannot Furnish	Base
31	931-04-991-5912	Clamp Socket	**	37-522	5/16" Open End Wrench
32	902-01-201-2577	Clamp Nut			
33	904-01-031-2935	Clamp Washer	**	NOT SHOWN	

SERVICE NOTE:

A - Cutterhead Repairs: Special tools are required to remove and replace ball bearings on the Cutterhead. When bearings or cutter need replacement, order a complete new Cutterhead Assembly No. 37-808, or return the old one for repair at:

Rockwell International
P. O. Box 1508
1200 Gloster Street
Tupelo, MS 38801
Attn: Customer Service