

REPLACEMENT PARTS

Ref.	No.	Part No.	Description	Ref.	No.	Part No.	Description
	2	422-39-138-0007	KNOB		72	901-01-060-0640	3/8-16 X 3/4 SCREW
	3	1340946	DRIVE CENTER, INCL.:		73	901-03-040-8015	1/4-20 X 1/2 SCREW
	**	1340945	CENTER POINT		74	902-01-133-1529	1/4-20 NUT
	4	901791	KNOCKOUT BAR		76	904-02-020-1704	WASHER
	6	911331	12 TOOL REST "		77	A03509	WARNING LABEL
	7	434-10-020-0001	CAP		79	438-01-004-0007	CORD CLAMP
	8	434-10-042-0004	HEADSTOCK ECCENTRIC		80	422-39-067-0001	PADDLE
	9	A03028	HEADSTOCK		81	438-01-011-0051	INSULATOR
	10	434-10-071-0004	INDEX PIN		83	911703	VARIABLE FREQUENCY DRIVE
	11	46-947	FACE PLATE		84	438-01-017-0206	SWITCH
	12	434-10-085-0001	SPINDLE		85	438-01-302-0403	CORD
	13	434-10-626-0001	BALL BEARING		89	A02458	MOTOR 2HP 230 V 3 PH
	14	434-10-626-0002	BALL BEARING		90	1342071	LIVE CENTER, INCL.:
	15	909214	HANDWHEEL, INCL.: REF. 20		91	1340945	CENTER POINT
	16	434-10-101-0001	1 3/4 WRENCH		92	901-02-443-1812	8-32 X 1/2 SCREW
	17	A03027	MOTOR YOKE		93	901-03-010-0776	3/8-16 X 7/8 SCREW
	18	434-10-112-0002	3/8-16 DUAL END SCREW		95	901-03-030-8007	3/8-16 X 3/4 SCREW
	19	A03186	DRIVEN PULLEY , INCL.: REF. 20		98	901-05-183-1142	10-32 X 5/8 SCREW
	20	901-04-150-0231	5/16-18 X 3/8 SET SCREW		101	902-01-073-1817	1.25-8 HEX NUT
	21	A03187	MOTOR PULLEY, INCL.: REF. 20		105	904-15-102-0196	RETAINING RING, NOTE A
	22	A02396	BELT		106	905-01-012-0310	SPRING PIN
	24	A03189	TOOL REST BASE, INCL.:		107	927-03-010-2695	3/16 x 1 KEY
	25	434-10-111-0002	SCREW		108	928-06-021-3393	LOAD SPRING
	26	434-10-105-0001	SLEEVE		110	955-03-023-1739	"T" HEX WRENCH
	27	A04138	LEVER, 46-755X		111	803228	8-32 X1 SCREW
		909935	LEVER, 46-756		112	434-10-072-0009	END CAP
	28	434-10-019-0003	CAM SHAFT, 46-755X		113	901-03-010-3345	1/4-20 X 1 SCREW
		434-10-019-0001	CAM SHAFT, 46-756		115	434-10-137-0005	LABEL, 46-755X
	29	A02994	5/16-18 X 1/2 SET SCREW			434-10-137-0004	LABEL, 46-756
	30	928-01-023-1644	SPRING		116	A02981	HARDWARE PACK
	31	434-10-027-0001	ONE HOLE CLAMP		120	902-01-010-5900	3/8-16 NUT
	32	901-03-043-1840	5/16-18 X 1 1/2 SCREW		121	A02929	FOOT
	33	434-03-112-0002	3/8-16 EYE BOLT		122	901-11-020-0823	3/8-16 X 1 1/2 BOLT
	34	902-01-213-1838	3/8-16 NUT		123	902-01-020-1227	1/2-20 NUT
	36	434-10-306-0004	BED		124	A03595	RESISTOR
	39	A03030	COVER		125	438-01-004-0085	CORD CLAMP
	41	A03031	COVER				
	42	908864	SWITCH COVER				
	43	A02942	LEG				
	46	434-10-027-0002	CLAMP				
	48	434-10-042-0001	TAILSTOCK ECCENTRIC				
	49	434-10-406-0001	TAIL SHAFT				
	50	A03506	SCREW				
	51	434-10-400-0001	HANDWHEEL				
	52	902-01-021-7801	9/16-12 HEX NUT				
	53	904-07-010-5566	WASHER				
	55	905-01-010-5072	SPRING PIN				
	56	907-00-000-2486	COVER				
	57	A04167	LEVER , 46-755X				
		A02987	LEVER , 46-756				
	60	434-10-111-0001	3/8-16 U-BOLT				
	61	901-03-043-1841	3/8-16 X 2 1/2 SCREW				
	63	904-01-010-1615	WASHER				
	64	902-01-040-1026	3/8-16 NUT				
	65	434-10-132-0002	SCALE				
	66	A03190	TAILSTOCK, INCL.:				
	67	A02994	5/16-18 X 1/2 SET SCREW				

ACCESSORIES: (Optional)

**	46-739	FACE SHIELD
**	46-946	8" FACE PLATE
**	25-857	LAMP ATTACHMENT
**	46-408	TURNING DUPLICATOR
**	46-552	SPINDLE ADAPTOR (NOTE E)
**		1 1/4 X 8 THREAD TO 1 X 8 THREAD
**	50-341	MOBILITY KIT
**	46-933	DRIVE CENTER
**	46-490	BALL BEARING CENTER
*		NOT SHOWN ASSEMBLED
**		NOT SHOWN

SERVICE NOTE

A: Ref. 105 must be installed with flat side facing race of bearing Ref. 14

E: 46-552 adapter has 1 X 8 external thread so that chucks with this thread can be used on this lathe.

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.