



NOTE: PARTS LIGHTLY SHADED ARE  
NOT SERVICEABLE.

# REPLACEMENT PARTS

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	A05696	CAP ASSEMBLY
6	A05658	5MM X 22MM SCREW
7	A05687	SEAL
8	A05659	SPRING
9	A05663	O-RING
10	A05666	O-RING
11	A05684	HEAD VALVE
12	A05667	O-RING
13	A05677	GASKET
14	A05680	COLLAR
15	A05692	DRIVER ASSY
16	A05675	O-RING
17	A07068	PISTON SET
18	A05671	O-RING
19	A05694	SPACER
20	A05678	CYLINDER SLEEVE
21	A05685	BUMPER
22	A05686	DRIVER GUIDE
23	904673	WARNING LABEL
25	A05652	3MM X 24MM SPRING PIN
26	A05698	SAFETY ASSEMBLY
27	A05676	NO MAR PAD
28	A05650	TRIGGER PIN
29	A05691	RESTRICTIVE TRIGGER
30	A05648	RETAINER
31	A05649	PIN
32	A05647	RETAINER
33	A05662	SPRING
34	A05689	LATCH
35	A05672	O-RING
36	A05681	END CAP
37	884443	COVER
38	60400	1/4" QUICK DISCONNECT
39	A05693	TRIGGER VALVE
48	A05690	PUSHER
53	A05657	5MM X 18MM SCREW
54	A05645	WASHER

Ref.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
55	A05774	COVER
56	A05710	DRIVER GUIDE
57	A05644	4MM X 18MM SCREW
58	1347567	4.0MM X 10MM SCREW
59	A05705	MAGAZINE RAIL
60	A05706	BRACKET
61	1246051	5MM X 12MM SCREW
62	1341441	4MM X 12MM SCREW
63	A07069	3MM X 20MM SPRING PIN
64	A07067	MAGAZINE ASSEMBLY
65	A05789	WEAR PLATE
66	A05708	END CAP
67	A05655	3MM X 8MM SPRING PIN
68	A05660	FEEDER SPRING
69	A05688	SPRING GUIDE
74	A05699	LATCH ASSEMBLY
75	A04047	CARRYING CASE
76	884293	AIR TOOL OIL (18CC)

## ACCESSORIES: (Optional)

*	70009	DRIVER KIT
*	70079	OVERHAUL KIT
*		NOT SHOWN

---

## STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Center for repair with damaged or missing standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department, your service outlet, or by visiting the Delta Website @ [www.deltamachinery.com](http://www.deltamachinery.com).