


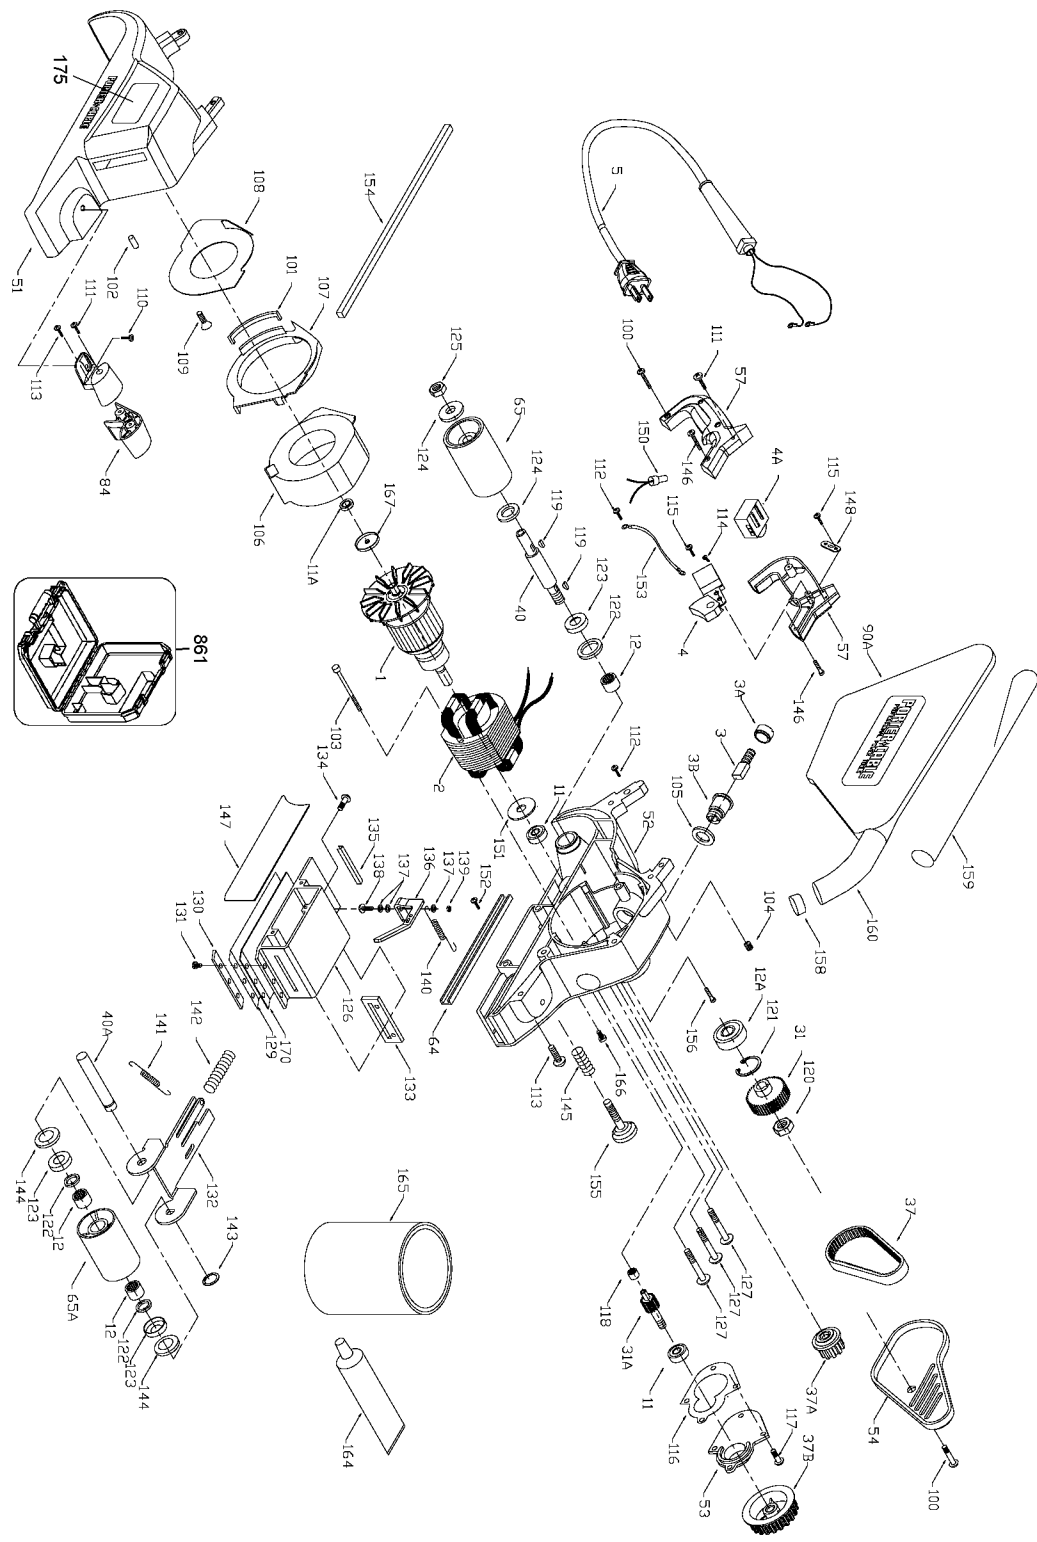

Parts List for 362VS Type 5

Item Number	Part Number	Description	Qty Required
1	888602	ARMATURE 220V	1
1	000000-00	No Longer Available	1
1	000000-00	No Longer Available	1
2	887416	FIELD (360VS 362VS)	1
2	000000-00	No Longer Available	1
2	803104	LEAD	1
3	888332	BRUSH & SPRING 230V	2
3	883191	BRUSH & SPRING	2
3	803483	BRUSH CAP	2
3	873497	BRUSH HOLDER	2
4	5140066-97	SWITCH	1
4	883201	SWITCH VS(360/2 VS)	1
5	882314	CORD 220V	1
5	882313	CORD	1
11	803876	BEARING	3
11	883202	BEARING	3
12	804211	BEARING,NEEDLE	3
12	803846	BEARING	3
31	D883195	GEAR	1
31	D883500	PINION	1
37	893626	DRIVE BELT	1
37	884352	DRIVE PULLEY POLY V	1
37	884353	DRIVEN PULLEY POLY V	1
40	883196	SHAFT DRIVE PULLEY 4	1
40	885104	PULLEY SHAFT 4	1
51	882850	FRAME RS 362 362VS	1
52	5140060-87	HOUSING KIT	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 362VS Type 5

Item Number	Part Number	Description	Qty Required
53	882859	GEAR HSG COVER	1
54	888391	BELT COVER	1
57	A23100	HANDLE SET	1
64	883193	BELT GUIDE	1
65	823466	DRIVE PULLEY	1
65	698496	PULLEY	1
84	A03070	SS/A HANDLE SET	1
90	692639	DUST BAG	1
90	873366	PLASTIC TIE	1
90	696167	DUST BAG ASSY-	1
100	883485	SCREW	10
101	888117	GASKET	1
102	883782	RUBBER PLUG	1
103	883483	SCREW	10
104	802388	SCREW	10
105	803496	WASHER	10
106	883183	BAFFLE-COOLING SEC	1
107	883182	BAFFLE-COOLING PRIM	1
108	883010	DUST BAFFLE	1
109	883482	SCREW	10
110	886538	SCREW	10
111	879678	SCREW	10
112	892780	SCREW	10
113	883480	SCREW	10
114	694010	SCREW	10
115	882185	SCREW MACHINE STEEL	10
116	883192	GEAR HSG GASLET	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 362VS Type 5

Item Number	Part Number	Description	Qty Required
117	883486	SCREW	10
118	855284	BEARING	3
119	878563	KEY	1
119	878563	KEY	1
120	801372	NUT	10
121	802942	RING	10
122	801852	SEAL	1
123	803365	CAP	1
124	803341	WASHER	10
125	823254	NUT	10
126	A22854	TRACKING BOX	1
126	912484	TRACKING BOX	1
127	883479	SCREW	10
129	908910	SHOE ASSY	1
129	908910	SHOE ASSY	1
129	908909	SHOE ASSY	1
129	908909	SHOE ASSY	1
130	908909	SHOE ASSY	1
130	908910	SHOE ASSY	1
131	852310	SCREW	10
131	876384	SCREW	10
132	887650	YOKE	1
133	698507	CONTROL PLATE	1
134	883477	SCREW	10
135	698511	WEAR PLATE	1
136	698502	LEVER	1
137	848741	WASHER	10

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenetwork.com for current parts information.

Parts List for 362VS Type 5

Item Number	Part Number	Description	Qty Required
138	874194	SHOULDER SCREW	10
139	858136	NUT	10
140	698504	SPRING	10
141	873946	SPRING	10
142	698500	SPRING	10
143	853455	RING	10
144	803317	WASHER	10
145	873945	SPRING	10
146	878262	SCREW	10
147	886988	COVER PLATE 4	1
148	861434	CORD CLAMP	1
149	884664	SPD CTRL LABEL 360VS	1
150	682063	CONNECTOR VS	1
151	883299	FIBER WASHER	10
152	885639	SCREW	10
153	887098	LEAD-ASSY360VS 362VS	1
154	888569	GASKET	1
155	897159	KNOB	1
156	883484	SCREW	10
158	839330	SPRING ELBOW RE	10
159	877967	BAG SUPPORT	1
160	882671	ELBOW/SUPPORT KIT	1
164	878499	TUBE GREASE	1
165	879751	LUBRICANT 4 LBS	1
167	896743	COVER	1
170	839040	CORK COVERING	1
170	804204	CORK COVERING	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for 362VS Type 5

Item Number	Part Number	Description	Qty Required
861	A02028	CASE-CARRYING	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.